 
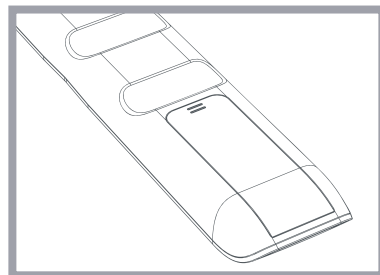 
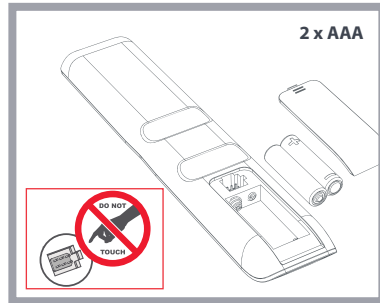 


**ONE  
FOR ALL**

# ENGLISH

# URC7115

 
## SIMPLE SET UP GUIDE

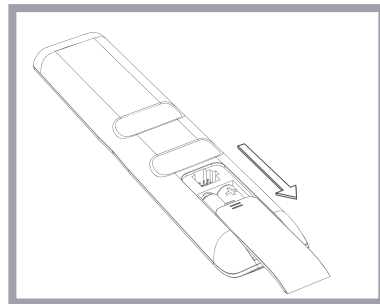

**CAUTION:** Risk of explosion if battery is replaced by an incorrect type. Use quality Alkaline batteries.

# ENGLISH

## KEY TABLE

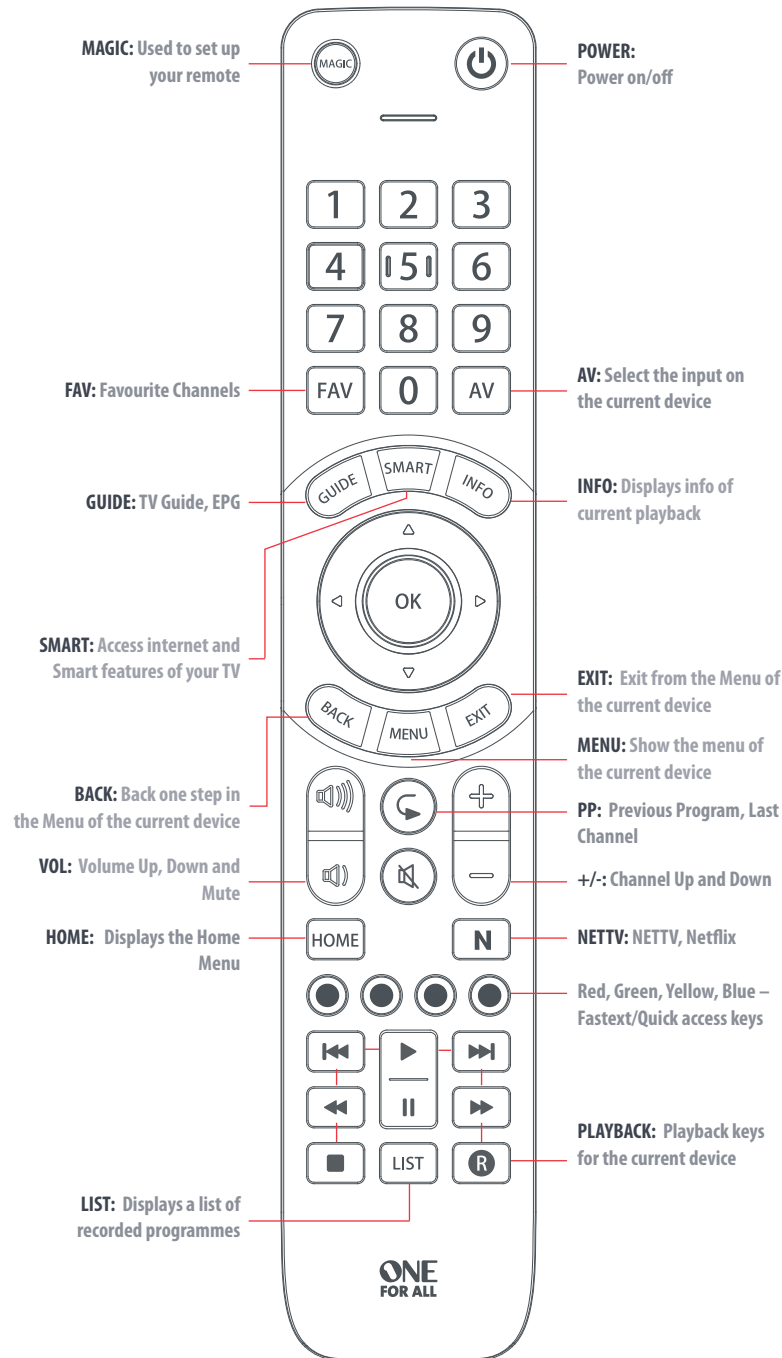

## HOW TO SET UP YOUR REMOTE

### A – SIMPLESET

SimpleSet is a quick and easy way of setting up the remote to control the most popular brands of each device type with only a few key presses, typically in under a minute per device.

For each Device type, there is a list of the top brands, each with a number assigned to it, for example 6 for a Samsung TV. Locate your device and brand in the list that follows:

### TV

1	Bush	6	Samsung
2	Grundig	7	Sharp
3	LG	8	Sony
4	Panasonic	9	TCL / Thomson
5	Philips	0	Toshiba





### To set up your device

1. Turn on your device (not on standby) and point the OFA remote towards it.
  2. Hold down MAGIC until the LED blinks twice.
  3. Hold down the digit for your brand and device as listed above (e.g. 6 for Samsung TV).
  4. The remote will send Power every 3 seconds until your device switches off.
  5. As soon as your device switches off, release the digit.
  6. The LED will blink twice and go out. The remote should now operate your device.
- If you find one or more keys do not work as you expect, start again at step 1 – the remote will start with the next code in the memory.

## HOW TO SET UP YOUR REMOTE

### B – SET UP BY CODE

If your brand is not listed in section A, you can set up your device by trying codes individually. To do this:

 
1. Turn your device on (not on standby).
  2.  Locate the brand of your device in the code list (pages 74-77). Codes are listed by Device Type.
  3.  Hold down MAGIC until the LED blinks twice.
  4.  Enter the first 4 digit code listed for your brand (e.g. 4542 for a Aiwa TV).
  5. The LED will blink twice and go out.
  6.  Now aim the remote towards your device and press the POWER key.
  7. If the device turns off, your remote is ready to use. If not, repeat steps 3-6 with the next code in the list.
- Some codes are quite similar. If you find that one or more keys do not operate as you expect, try again from step 3 with the next code in the list.






## LEARNING

Your One For All remote control can learn any function from any other working remote control. This can be useful if you are missing one or more functions from your original remote control and would like to add them to the ONE FOR ALL.

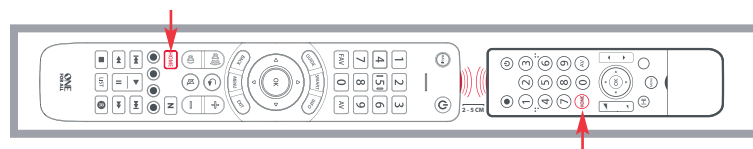You can also learn a complete device if you can't find a code.

To learn, firstly make sure you have all your original remote controls to hand, and that they have working batteries in. To learn functions, the original remote should be approximately 3cm from the OFA remote, pointing towards it as shown below:



1.  Hold down MAGIC until the LED blinks twice.
2.  Press 975 – the LED will blink twice.
3.  Press and release the key you want to learn a function onto (for example the HOME key) – The red LED will blink continuously.
4.  Press and release the key on the original remote.
5. The LED will blink twice to indicate the key has been learned correctly.
6. Repeat steps 3 and 4 for each key you want to learn – remember you can learn from multiple remotes, but only one function per key.
7.  When you learned all the functions you require, press and hold the MAGIC key until the LED blinks twice and turns off.

### HINTS

 
- If the LED shows one long blink at step 5, the function was not learned correctly, please try again from step 3.
- If you find one or more keys don't work properly after set up, you can re-enter the learning mode at any time by repeating the procedure from step 1.

### TO DELETE A LEARNED FUNCTION, THE PROCEDURE IS:

1. Hold down MAGIC until the LED blinks twice.
2. Press 976 – the LED will blink twice
3. Press the key to delete twice – the LED will blink twice.

Repeat the above procedure for each key you want to delete.

## THE NETTV FEATURE

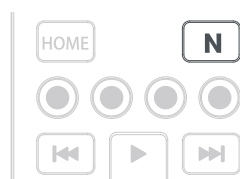

The Evolve features a "NETTV" key for viewing digital TV, streamed over the internet. If your original remote control already had a key for this - for example many newer TVs have a Netflix key - then this key will perform exactly the same as the key on your original remote. However if you did not have a key like this, but still had the ability to watch a streaming service, you can use this key as a shortcut by programming a macro on it. Most AV devices which are connected to the internet, such as Smart TVs or streaming Set Top Boxes have one or more applications they can run to access TV viewing via the internet.

## THE NETTV FEATURE

Examples of these would be Netflix, YouTube, Amazon Prime, BBC iPlayer or similar.

To program the macro, you first need to know the device you use to access the service, and then the sequence of keys you need to press to always bring up the service you prefer, For example, some Panasonic TVs will start Netflix by pressing the Apps key, then Menu Down Twice, and finally the OK key.

Once you have determined the sequence for your device, follow these steps:

1. Sit in front of your device with It switched on (not on standby)
2. Hold down the NETTV key until the LED blinks twice and stays lit
3. Now perform the sequence of keys exactly as would normally. The remote will operate your device and the macro is recorded in real time - so if it normally takes a few seconds for your device to react don't worry.
4. Once you have finished the sequence - and the Streaming Service has started on your device - hold down the NETTV key until the LED blinks twice and goes out. The macro is now stored.

#### Tips

- Make sure the Evolve is operating the device in question before programming
- If you find the Macro doesn't work as expected, you can just repeat the same sequence to reprogram
- When programming, wait for your device to respond first, the remote will remember the timing

#### English - PRODUCT DISPOSAL (EUROPEAN DIRECTIVE 2012/19/EU)



The crossed out wheeled bin symbol on this product ensures that this product is manufactured using high quality components that can be recycled and reused according European Directive 2012/19/EU. Please do not dispose of this product with your normal household waste, refer to local regulations for the proper collection or disposal of electrical and electronic products. This will help this will help in preventing negative effects on the environment and/or human health.

**BATTERY DISPOSAL (EUROPEAN DIRECTIVE 2006/66/EC)**Please do not dispose of your batteries with your normal household waste, refer to local regulations for the proper collection or disposal. This will help preventing potential negative effects on the environment and/or human health.

**GUARANTEE TERMS AND CONDITIONS** UNIVERSAL ELECTRONICS warrants to the original purchaser that this product will be free from defects in materials and workmanship under normal and correct use for a period of two (2) years from the date of original purchase. This product will be repaired or if necessary, replaced free of charge if it has been proven to be defective within the two(2) year warranty period. The forwarding costs are on the account of the owner; the costs of returning the product are on the account of UNIVERSAL ELECTRONICS.

This warranty does not cover damage or failures caused by products or services not supplied by UNIVERSAL ELECTRONICS, or which result from not mounting the product according to manual instructions. This also applies when the product has been modified / repaired by others than UNIVERSAL ELECTRONICS or if a fault is the result of accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, improper maintenance, alteration, modifications, fire, water, lightning, natural disasters, wrong use or carelessness.

To obtain warranty service during the warranty period contact [...], and please note that we need your original purchase receipt so that we may establish your eligibility for service. If you have bought this product for purposes which are not related to your trade, business or profession, you may have legal rights under your national legislation governing the sale of consumer goods. This guarantee does not affect those rights. [www.oneforall.com](http://www.oneforall.com)

Connect with us



[facebook.com/oneforallworldwide](https://www.facebook.com/oneforallworldwide)



[@oneforall.worldwide](https://www.instagram.com/oneforall.worldwide)



[linkedin.com/company/one-for-all-worldwide/](https://www.linkedin.com/company/one-for-all-worldwide/)



[youtube.com/user/oneforallproducts](https://www.youtube.com/user/oneforallproducts)

Universal Electronics BV  
Europe & International  
Colosseum 2, 7521 PT Enschede  
The Netherlands



URC7115  
711727  
RDN-1150621