


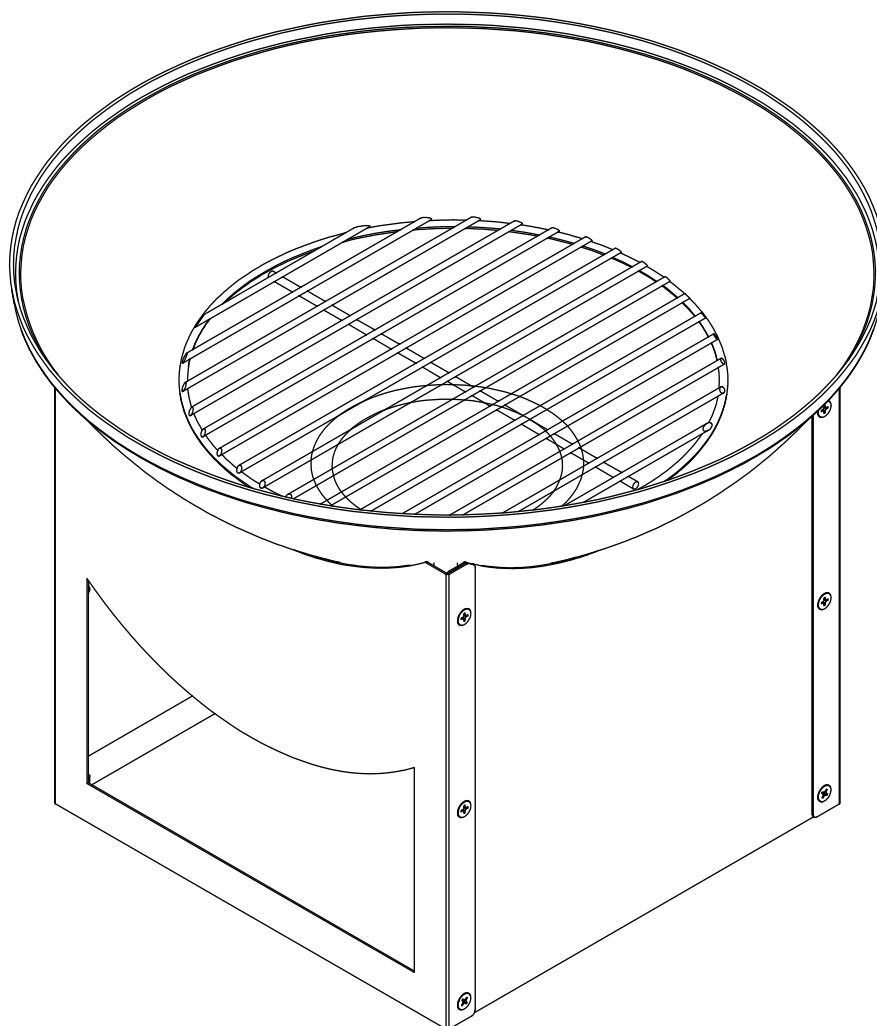

FIREPIT WITH LOG STORE


Assembly Instructions - Please keep for future reference

4490355



Dimensions

Width - 56 cm
Depth - 56 cm
Height - 42 cm

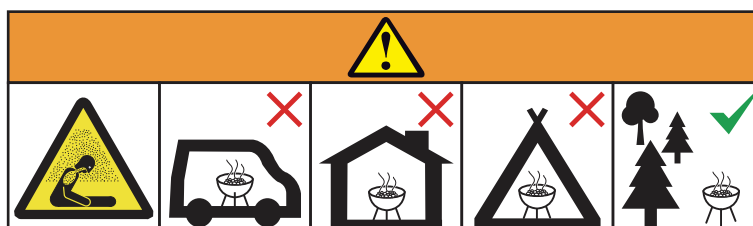

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Before you start

- Please read these instructions fully before assembling or using your firepit. Failure to follow these instructions could result in serious bodily injury, and/or property loss.
- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Before you start, make sure you have the correct tools. The tools required for building this firepit are a cross head screw driver and an adjustable spanner.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this firepit, be aware of the safety of yourself and others.
- Assemble this firepit on a clean, flat and level surface e.g. the cardboard packaging.
- If after reading these instructions you are unsure of how to safely assemble or use your firepit, please refrain from doing so and contact our customer services department for further assistance.



Warnings and safety advice

Important: Please read these instructions fully before starting assembly

- Do not use indoors.
- This firepit is for outdoor use only, and should NOT be used in a building, garage or any other fully or partially enclosed area.
- Do not use in or near tents.
- Do not use as a refuse incinerator, it is only intended for use with charcoal or timber.
- Avoid using soft wood such as pine or cedar as they are likely to throw sparks.
- Never position on a surface that is liable to be damaged by heat.
- Do not use in high winds.
- Position on a smooth flat surface.
- Do not use the firepit unless it is completely assembled, and all parts securely fastened.

LOG STORAGE

- **WARNING!** Only store untreated wood in the log storage compartment. Do not stack logs higher than 75% of the storage capacity.
- Loosely stack logs to allow air flow.
- Do not store paper or fire lighting materials in the log store.

CARELESS USE OF FIREPITS CAUSES FIRE

Do not use in areas which prohibit open fires.

Do not use close to flammable materials, including wooden decking and fences.

Do not use near dry vegetation.

WARNING! This firepit will become very hot, do not move it during operation.


Do not leave unattended when lit.

Do not use spirit or petrol for lighting or relighting!

Use only firelighter complying to EN1860-3

WARNING! Keep children and pets away.

Read instructions before assembly and use. Keep for future reference.

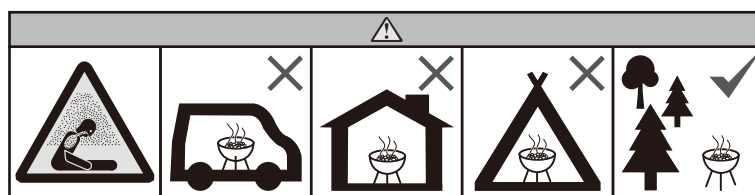

Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon or carbon monoxide poisoning fatality.




Care and use

- This firepit is for household outdoor use only, not for commercial use.
- Take care when building as exposed edges may be sharp.
- Choose a suitable location before lighting, away from footpaths and high foot traffic areas.
- Allow a minimum of 1 meter from any surfaces or things that may be affected by heat.
- Always used on a flat, firm and level surface.
- Allow to cool completely before moving.
- Ensure firepit is completely cold before storage.
- Periodically check all bolts are secure and retighten if necessary.

Component - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**

Please check you have all the parts listed below

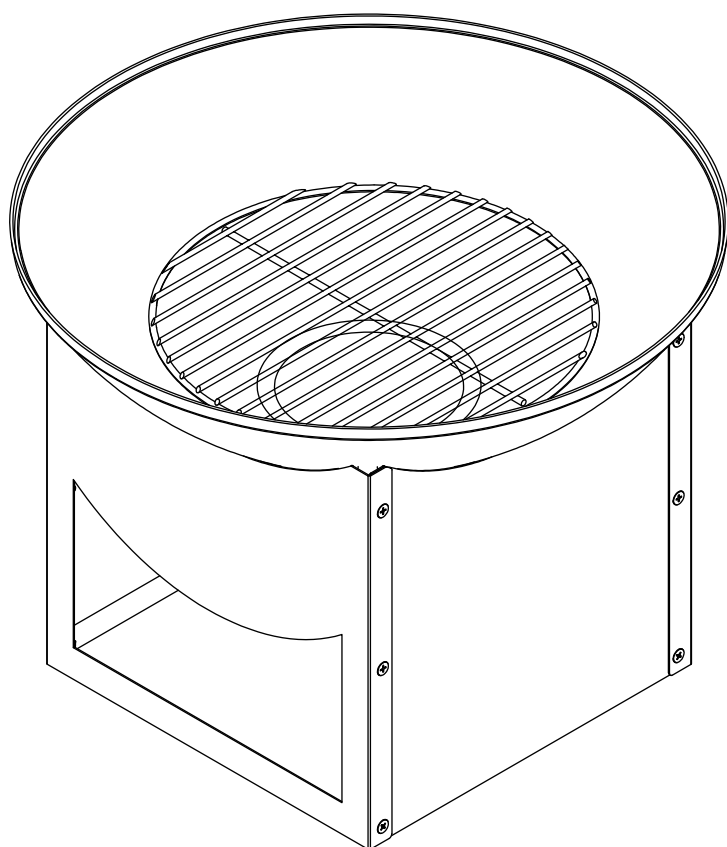

1		1PC
2		1PC
3		2PCS
4		1PC
5		1PC
6		1PC
7		1PC
A		12PCS
B		12PCS

Ruler- Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions


Step

(1) Assemble the bottom of one Log Store Side Panel (3) inside to Log Store Back Panel (2) and next to Log Store Base Panel (4) by inserting one M6 x 12 bolt (A) through Log Store Back Panel (2), Log Store Side Panel (3) to Log Store Base Panel (4) and fix with Nut (B) from inside.

(2) Assemble the bottom of Log Store Front Panel (1) to Log Store Side Panels (4) by placing the Front Panel with the edge over the two Side Panels and then inserting one set of M6 x 12 bolt (A) through Log Store Front Panel (1) to Log Store Base Panel (4) and fix with Nuts (B) from inside.

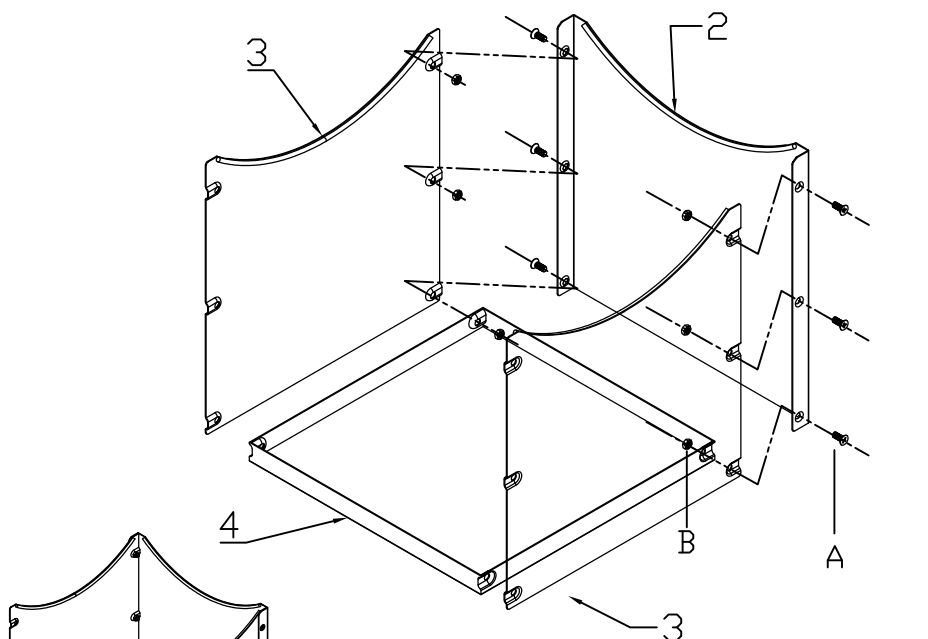

A		6PCS	B		6PCS
---	--	------	---	--	------


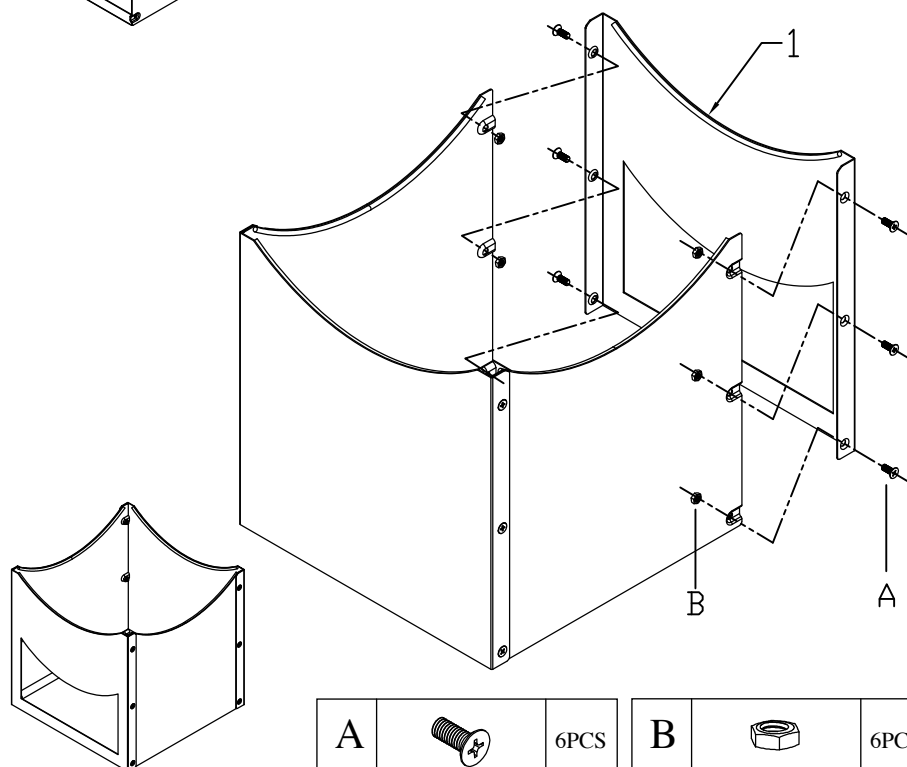


A		6PCS	B		6PCS
---	---	------	---	---	------

Assembly Instructions

Step

- (3) Put the Fire Bowl (5) on Log Store
- (4) Put the Charcoal Grill (6) into Fire Bowl (5).
- (5) Now check and tighten all fixings, assembly is complete. DO NOT OVER TIGHTEN THE FIXING
- (6) Before using for the first time add a layer of sand 3-5 cm thick to the base of the fuel bowl. This will help insulate the base and offer some protection against the corrosive nature of ashes.

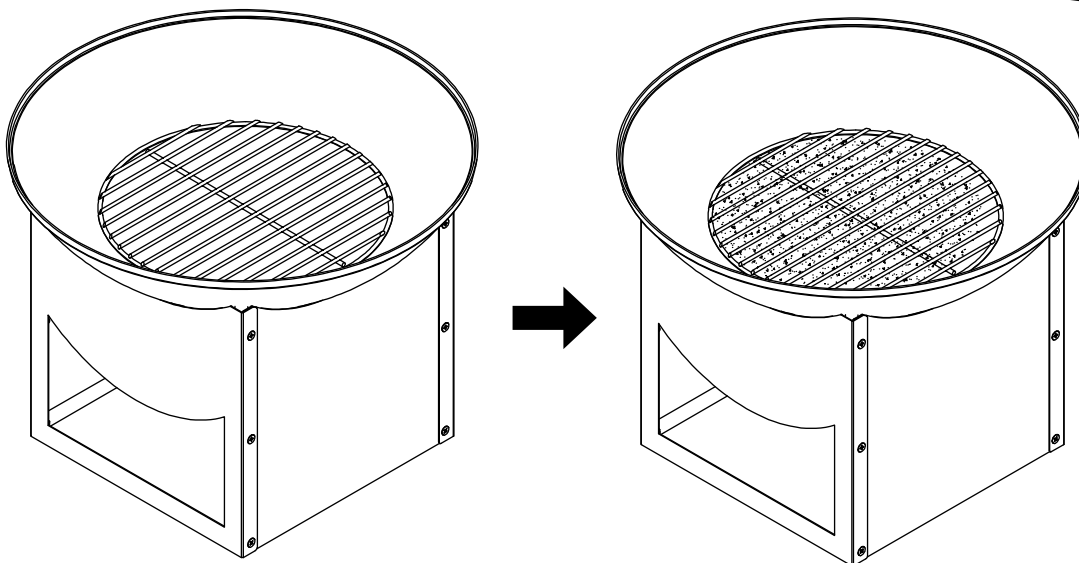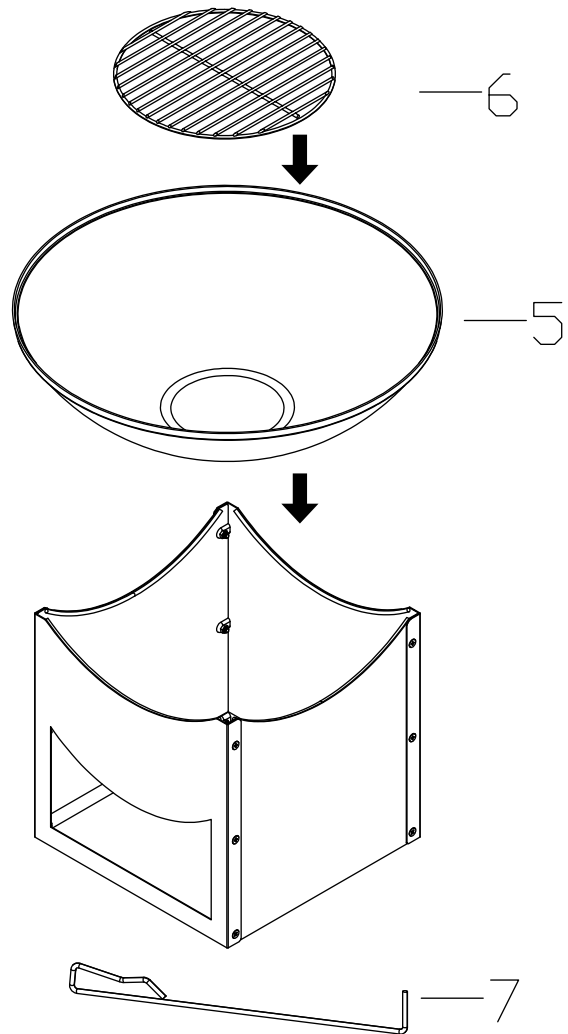

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for Habitat, Argos Limited. Sainsbury's Supermarkets Ltd., London, EC1N 2HT, UK. [Argos \(N.I.\) Ltd.](#) and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast. BT8 6FX, UK.