 


Portable Electric Grill BBQ

Assembly Instructions - Please keep for future reference

449/1536

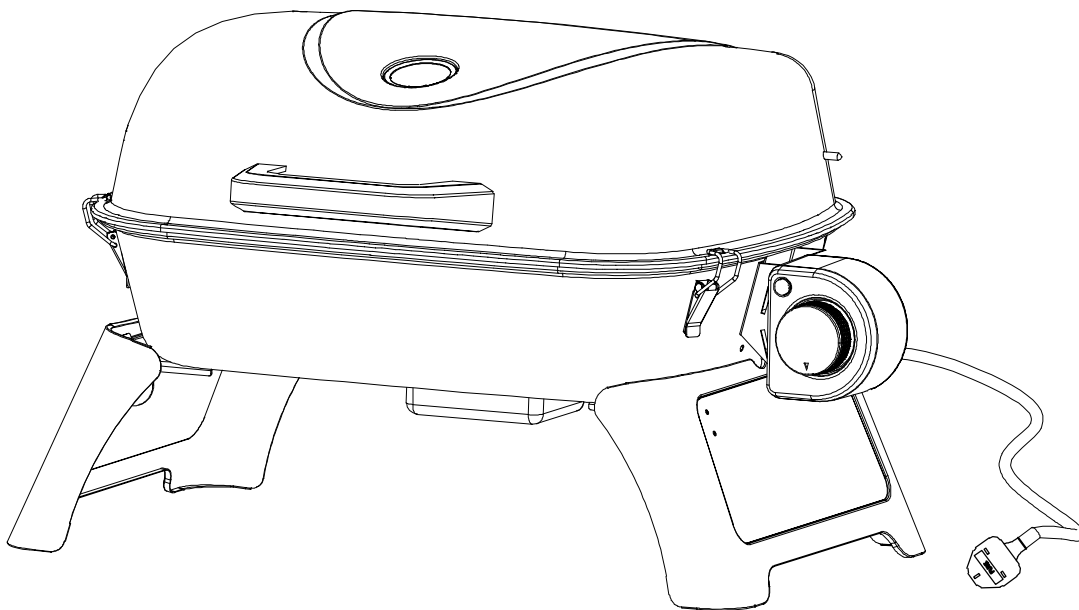

Dimensions

Width - 60.2cm

Depth - 46.7cm

Height - 37.7cm



Important - Please read this instructions fully before using the appliance

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**.
Please visit the website www.argos.co.uk for more information.

Produced in China. Sainsbury's Supermarkets Ltd. Argos Limited, London EC1N 2HT, UK.

Sainsbury's (NI) Ltd and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

help.sainsburys.co.uk/help/contact-us

argos.co.uk/help/contact-us

Safety and Care Advice

Important - Please read this instructions fully before using the appliance

Before you start using

The grill is intended to be used to roast meat, fish, or vegetables and must be used solely for domestic purpose.

Recognise any hazards for accident prevention. Regulations and the accompanying safety instructions must be paid attention to.

This product must be correctly installed and operated in accordance with the instructions contained in this manual. Please use it in accordance with the manner specified in this document. If there is any accidental damage or misuse, the manufacturer shall not be liable for any incidental or consequential damages.

Electrical safety warning

The appliance shall be grounded while in use to protect the operator from electrical shock. This appliance is equipped with a UK 3 pin 30A plug to fit the proper grounding-type receptacle, where available.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

The appliance is to be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA.

The supply cord should be regularly examined for signs of damage, and if the cord is damaged, the appliance must not be used.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not leave unattended during use.
- Do not cover and allow the portable electric grill BBQ to cool fully before storing.
- Do not operate the portable electric grill BBQ using a timer or separate remote control.
-  The surfaces of the portable electric grill BBQ are liable to become hot during and immediately after use; wear oven gloves when handling the appliance. Note the hotplates are subject to residual heat after use.
- Bread may burn, do not use the portable electric grill BBQ on, near or under flammable materials (e.g. curtains) or heat sensitive surfaces.
- Do not place foil wrapped food in this portable electric grill BBQ and remove all wrappings from food before toasting.
- The filling of a toasted sandwich and other foodstuffs will be hot, allow it to cool to a comfortable temperature before eating.
- Ensure that there is adequate ventilation. A minimum of 5cm around all sides of the portable electric grill BBQ is recommended.

Thermometer

The thermometer is to measure temperature inside after closed the lid.

Safety and Care Advice

For your safety

- Please carefully read this manual before operating the appliance and keep it for future reference.
- Follow all safety instructions! If you ignore safety instructions, you endanger yourself and others.
- If you want to sell the device, you must inform them of these instructions.
- The device can only be used when it is plugged in.
- To protect against electric shock, do not immerse the appliance, cord or plug in water or any other liquid.
- If a part of the equipment is defective, it must stop working and be properly disposed of.
- Do not use in explosive environments. When using the appliance, please make sure that adequate air space is provided above and on all sides of the appliance for circulation.
- Keep appliance area clear and free from combustible materials, gasoline and other flammable vapour and liquids.
- Do not use devices whose off switches do not work properly.
- Keep children away from devices!
- Do not overload equipment.
- All parts of the product must be properly assembled.
- Do not touch hot surfaces. Use handles or knobs.
- Please use it on a solid, flat ground.
- Charcoal or similar combustible fuels must not be used with this appliance.
- Do not leave the appliance unattended. Keep children and pets away from the appliance at all times.
- Never move the appliance while in operation or still hot.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- When grilling, flare-ups from fats and juice drippings can occur, so be sure to monitor food closely so it does not burn.
- Never lean over the cooking area while the appliance is turned on.

At first use

Remove all packaging materials. Before using your appliance for the first time, wipe the outer surface with a slightly damp cloth.

The cooking plate and grill plate can be removed from the appliance and hand washed in warm soapy water and dried thoroughly before placing into position on top of the grill.

DO NOT IMMERSE THE APPLIANCE IN WATER AND DO NOT POUR WATER DIRECTLY ON THE COOKING PLATE.

Operation

1. Place the appliance on a stable, level, heat-resistant surface.
2. Check that the drip tray is fully pushed under the cooking plate.
3. Wipe the cooking plate with a little cooking oil.
4. Plug the appliance into the mains socket.
5. Turn the thermostat knob to set the desired operating temperature.

The indicator light around the thermostat knob will illuminate to indicate the selected operating temperature. The appliance will heat up.

NOTE: When the appliance is heated for the first time, it may emit slight smoke or odour. This is normal because some parts of the appliance haven been slightly greased. After a short while the smoke or odour will disappear.

6. When the cooking plate has reached the set temperature, the indicator light will go out, indicating that the appliance is ready for cooking.

It may take 7-8 minutes to reach operating temperature, depending on the temperature set.

7. Place food on the cooking plate and wait till the food is cooked.

You may turn the thermostat knob during cooking.

8. Remove food with a spatula or tongs (not supplied).

9. Turn the thermostat knob to the off position and unplug the appliance from the mains socket.

Safety and Care Advice

Storage

Important! Unplug your grill when not in use or when storing. The grill is electric therefore it must not be exposed to rain fall and moisture can damage the electrical components.

It is recommended to store the grill under a canopy or indoors covered with a protective cover made of water proof fabric.

Important! Do not use plastic wrap to store your grill this can destroy the outside of the grill.

Make sure the BBQ and lid are completely dry. Otherwise, you risk mold and mildew growing on the sides.

You may want to consider getting a storage unit with climate control. This keeps the humidity and temperature in a safe range for all your stored belongings, preventing mildew during humid summers, and warping during cold winters.

Transporting

For transportation, use the original packaging, if it is not there, then look for the packaging that is most suitable for the dimensions of the device. Protect from precipitation, transport carefully avoiding damage to the device.

Care and Maintenance

Turn off and unplug the grill and allow it to cool down before cleaning and storage.

Clean the outside of the appliance using a slightly damp cloth. Do not immerse it in water.

The cooking and grill plate can be removed from the appliance and washed in warm soapy water to remove food residues. For baked on food residue, squeeze some warm water mixed with detergent over the food residue then clean with a non abrasive scouring pad or place wet kitchen paper over the cooking plate to moisten the food residue.

Wash the drip tray in warm soapy water after each use. Rinse thoroughly.

Do not use any abrasive or chemical cleaning agent.

Surfaces in contact with food should be cleaned regularly to avoid cross contamination from different types of food, the use of warm clean water with a mild detergent is advisable when dealing with surfaces that come into contact with food.

Correct food hygiene practices should always be followed at all times to avoid possibility of food poisoning /cross contamination.

Disposal

Recycling electrical products: You should now recycle your waste electrical goods and in doing so help the environment. This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal.

Visit www.recycle-more.co.uk click on “ bank locator ” and enter your postcode to find your nearest recycling site.










Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.



Components - Parts

If you have damaged or missing components,
call the **Customer Helpline: 03456 400800**

Please check you have all the panels listed below

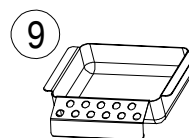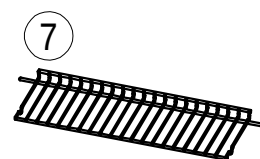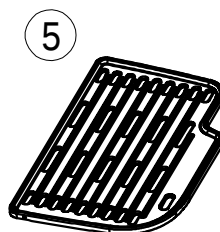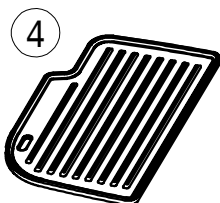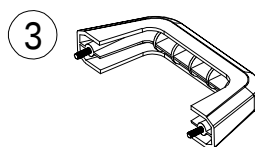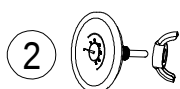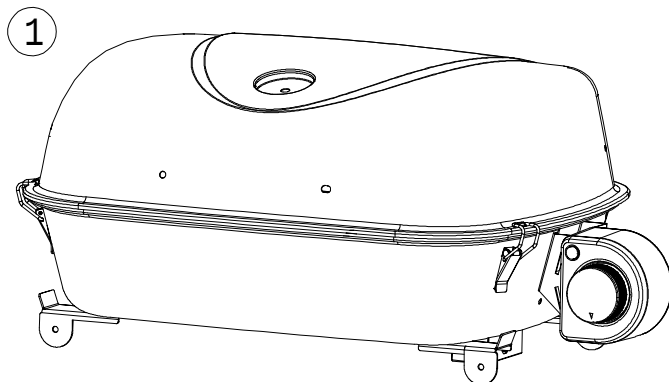



8

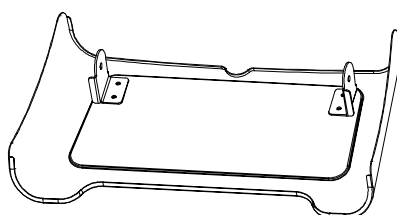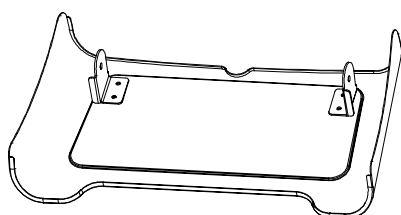


Components - Fittings

Please check you have all the panels listed below

  Note: The quantities below are the correct amount to complete the assembly.

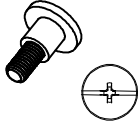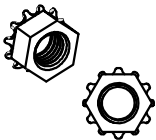A  x 2	B  x 4	C  x 4
D  x 4		

 Tools required (not included)




Philips screwdriver



Ruler/ tape measure

 Ruler - Use this ruler to help correctly identify the screws

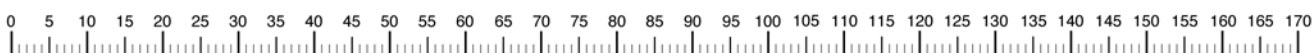


Assembly Instructions

Step 1


Fix the case holder (8) and case (1) together with bolts B, shims C, and nuts D.

D		4PCS
C		4PCS
B		4PCS

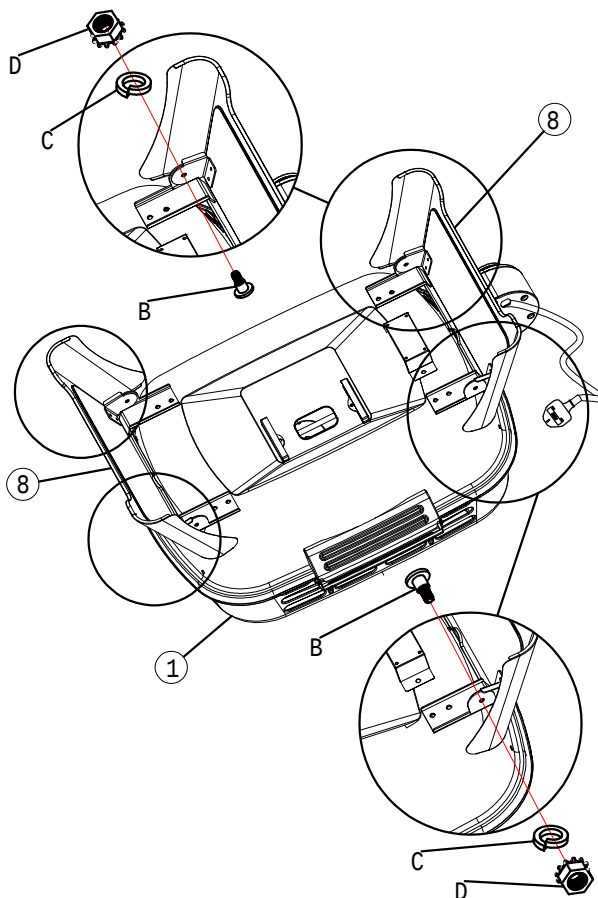

Step 2

Put the warming rack (7) and warming rack holder (6) together.

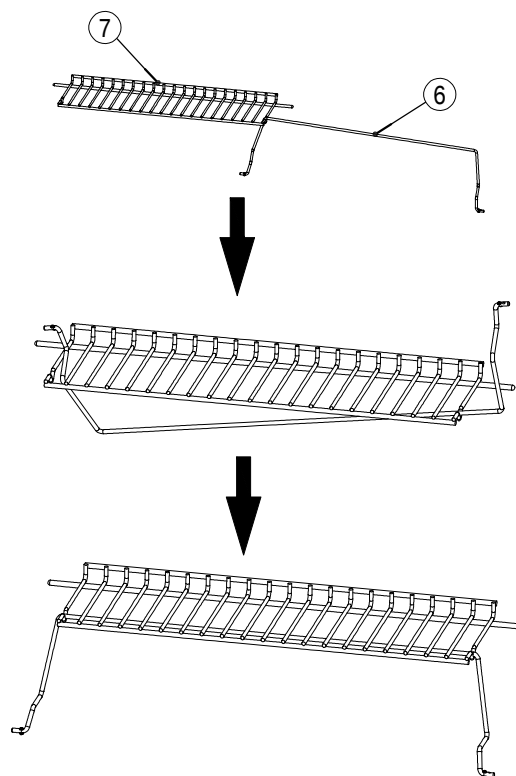

Assembly Instructions

Step 3


Fix the handle③ with the shim A on the grill;

Fix the thermometer② on the grill assembly.

Put the warming rack⑦ and the warming rack holder⑥ into the grill.

Put the cooking grid⑤ and cooking pan④ on the grill separately.

User can adjust the temperature by turning the knob.

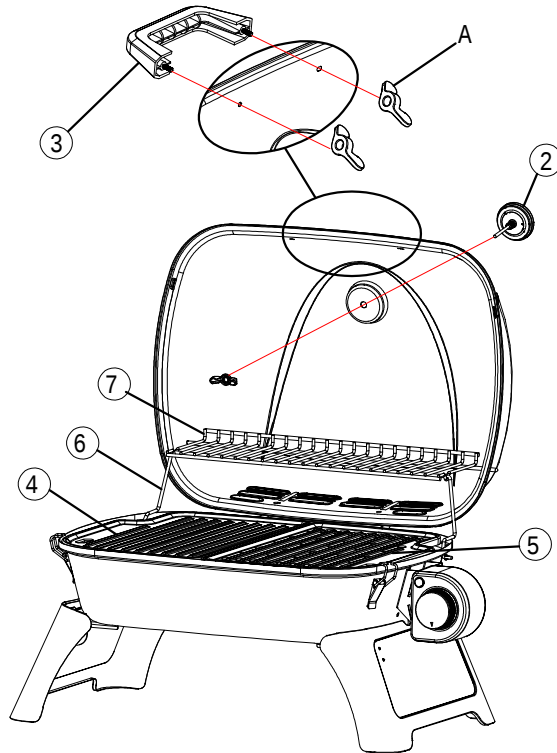


A



2PCS

Step 4

Put the oil cup ⑨ into the cart.

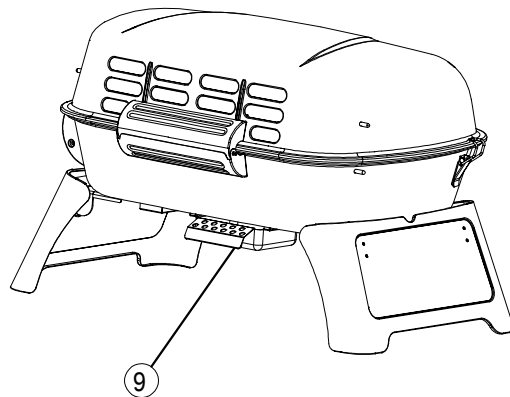

Technical Specification

Model Number	Q22EL1S1M8J3
Rated voltage	230V
Frequency	50Hz
Power rating	2200W
Protection degree levels	IPX4
Level	1
BS 1362 fuse	13A
Product dimensions(external)	602*467*377 mm
Product weight(net)	10 kg approx

Troubleshooting

Problem	Possible Cause	Solution
Electric grill does not turn on.	The indicator light is on, but the heating tube does not work.	1. First, check if the circuit of the heating tube is disconnected or has poor contact; if so, just connect the circuit. 2. If the circuit works normally, check again to see if the heating tube surface is damaged. If damaged, it needs to be replaced; 3. If the heating tube is not damaged, use external meter to check whether the heating tube is damaged inside. If so, it needs to be replaced.
	The indicator light is off, but the heating tube works	Check if the circuit branch of the indicator light is disconnected. If so, just connect it; Otherwise, just replace the indicator light.
	The indicator light is off, and the heating tube does not work.	Please check if the outlet is energized first, under this condition, pull out the plug and then rotate the knob clockwise and anticlockwise. If you do not hear the ticking of the sheet metal, the temperature controller is damaged and just replace it. Otherwise, check if the circuit is disconnected; if it is, just connect it.
	The indicator light is always on, and the heating tube always works.	The temperature controller is damaged. Pull out plug and replace the temperature controller.
Smell or taste of plastic	Turning on for the first time on a new appliance	When you turn on the electric grill for the first time, residues of cooking oils on the heating plates may cause odor and smoke for a short time, which is not a malfunction of the appliance.

If problems cannot be corrected by using these methods, please contact the Seller