

2.7m Parasol

449/5161 651/1562



IMPORTANT - Retain these instructions for future reference

Spare Parts

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0370 112 1928

Customer Support

Call: 0345 640 2020



Safety and Care Advice

Product Details Green 6511562 Cream 4495161

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- This product is designed for careful domestic outdoor use.
- Parasols should not be used in high winds and should be closed when not in use.
- Bases and covers available separately.
- Unpack and inspect all of the contents.
- Only place on a flat level surface.
- Always check that your parasol is not damaged and that it correctly assembled and stable before use.
- Parasol to be used as a sunshade only.
- Please take the time to carefully read through the whole instructions before you commence.
- Please dispose of plastic bags safely.
- Keep away from hot surfaces i.e. barbecues and patio heaters.
- Please note that parasols should be used in conjunction with a table and parasol base for stability.
- Store in a dry place, or use a protective cover when not in use.
- Keep these instructions for future reference.
- Assemble the parasol near to its required position.

Care and Maintenance

is made from carefully selected timbers which are naturally weather resistant.

- The fabrics are developed to ensure resistance to the effects of sunlight and outdoor use. However, for the best care it is recommended that products are kept indoors in a cool dry place when not in use.
- To clean fabric, brush off any loose dirt and lightly sponge clean.
- As with all wood, this product may change colour over time. You may also find that as the solid timber "breathes" slight surface cracks may occur, this is not a fault and is part of the weathering process. To prolong its life, treat with teak oil occasionally. Ensuring the oil is well rubbed in and does not contact with the fabric. Always follow the instructions when use.
- Periodical retightening of fixings.
- Check and tighten the fixings periodically.

• This parasol is made for garden and is not suitable for indoor use or conservatories. The sunlight will make the colour of the wood mellow with time even if it is oiled.


- In the first three months the parasol should be oiled monthly with a hardwood garden furniture oil using a lint free cloth, paying particular attention to the ends of the legs and slats as they are more absorbent.
- After the first three months, the furniture should be oiled once a year as it is brought out at the beginning of the spring summer season and whenever the surface is looking dry. The wood will gradually change colour to a silvery grey and the surface will become rough. Regular oiling will help to minimise cracking but won't eliminate it. Cracking of the timber does not affect the durability of the product.

- Wipe up spills immediately as the oiled surface is more susceptible to stains than a lacquered finish and the wood will absorb moisture causing the grain to rise slightly.
- Take care when moving parasol and never drag pieces as this will cause damage to the joints.
- If the surface of the parasol becomes slightly stained or damaged with use, then it can often be removed by sanding gently with fine sandpaper then re-oiling. If the stain or damage is more serious then we recommend that professional help is obtained.
- Please check the fixings are all tight when you put this parasol out each year, as the wood will change size slightly with the different seasons.

Parasol Components - Parts



Top Finial X1

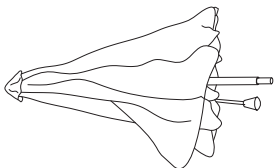


Parasol Upper Body X1



Lower Pole X1

Parasol Assembly

1

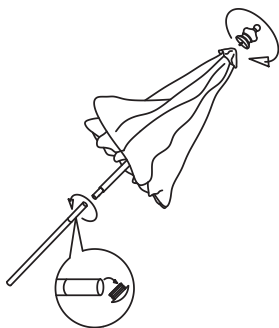

2

