



The secret to
a great night's sleep

Telephone: 03303 322575
Monday - Thursday: 9.00am - 5.00pm
Friday: 9.00am - 4.00pm



BK0022



The secret to
a great night's sleep

ELECTRIC BLANKET



• Important Instruction and Warnings	Page 2
• Cleaning & Maintenance	Page 4
• Fitting Instructions	Page 5
• Using Your Blanket	Page 6
• After Sales Support	Page 7
• Your Guarantee	Page 8

IMPORTANT INSTRUCTIONS

Instructions and Warnings for correct and safe use.

IMPORTANT INSTRUCTIONS. RETAIN FOR FUTURE USE.

THIS SECTION CONTAINS IMPORTANT INSTRUCTIONS REGARDING OPERATIONS AND SAFETY DURING PRODUCT INSTALLATION, USE AND MAINTENANCE.

GENERAL WARNINGS

The use of any electrical appliance requires the user to follow some common sense safety rules. Failure to comply to below rules can cause damage to the appliance.

- Unpack this product and ensure it has not been damaged during transportation or opening.
- Ensure the product is used in the manner in which it is intended.
- If used on an adjustable bed please check the blanket or cord cannot become trapped and the cord is not stretched.
- **DO NOT** insert pins or sharp objects into the blanket.
- **DO NOT** tuck under the mattress.
- **DO NOT** use when wet.
- **NEVER** turn the blanket on while folded or creased.
- Only use the lead provided.
- Not intended for hospital use.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **DO NOT** overheat the control or trap under the blanket or pillow.
- If you decide not to use the appliance anymore, make it unusable by cutting the power lead. Please dispose of in the correct manner.

Continued...

Important Instructions & Warnings

- Please **DO NOT** use other than for the intended purpose.
- For indoor use only.
- Not to be used by very young children (0-3 years)
- Children under the age of three are not to use the appliance due to their inability to react to overheating.
- **DO NOT** use with a helpless person, an infant, or person insensitive to heat.
- This blanket is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, or unless the child has been adequately instructed on how to operate the controls safely.
- Avoid creasing the appliance.
- **DO NOT** use when creased
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **DO NOT** use with sofa beds or inflatable beds.



DO NOT
use while folded





DO NOT
insert sharp points.



Please dispose
of in the correct
manner and separately
from domestic waste.

Cleaning and Maintenance

Please note that the Silentnight underblanket
can be washed but **NEVER** dry cleaned.

- **HAND WASHING OR MACHINE WASHING.**  or 
- **BEFORE WASHING DISCONNECT THE PLUG FROM THE MAINS POWER SUPPLY.**
- Prior to washing it is essential that you measure the underblanket and ensure that it has returned to approximately its original size after washing.
- Hand washing - unplug the blanket from the power socket, disconnect the control switch and cord from the blanket. Use a mild washing powder or detergent and warm water, soak for 5 minutes, gently wash and rinse thoroughly in clean water.
- Machine wash - unplug the blanket from the power socket, disconnect the control switch and cord from the blanket. Wash as **wool at 40°C** following the manufacturer's instructions.
- **WARNING: DO NOT ALLOW THE HEAT CONTROLLER TO BE IMMERSSED IN LIQUID.**

Drying

- Never wring the blanket.
- Please re-shape the underblanket prior to drying.
- Air dry on the clothes line, **DO NOT** peg on the wired area of the blanket as it will damage the circuit.
- Please ensure it is completely dry before use.
- Tumble dry on low heat setting if required.

Inspection prior to use

- Inspect to ensure that no wire is visible through the surface, ensure the wires have not formed loops or twisted back. Hold up to the window. Check the controller, power supply cord and plug regularly for cuts or damage.

When not in use please store as follows:

Do not place heavy items on the underblankets as this causes deep creases that may damage the wiring. The best method to store is to leave on the bed; however you may roll or fold without creasing.


- When not in use for prolonged periods, please unplug the blanket from the mains socket.
- When storing the appliance, allow it to cool before folding.

Fitting Instructions

PLEASE ENSURE THIS BLANKET IS COVERED DURING USE TO RETAIN THE HEAT.

This product must only be used as an underblanket and secured to the mattress correctly to ensure it does not move. Please secure as follows:-

- Main lead to be positioned at the pillow end. **DO NOT COVER (fig 1).**
- Open the underblanket fully and place on your mattress, allowing space for the pillow/s.
- **THE UNDERBLANKET MUST ONLY BE USED WITH THE CONTROL PROVIDED.**
- Pass the support ties under the mattress and tie firmly as illustrated (fig 2).
- Once your electric blanket is fitted to your mattress correctly, i.e. flat and crease free - connect the heat selector plug to the blanket socket, ensuring each plug is pushed fully into the housing (fig 4).
- Fit your bottom sheet over the secured underblanket (fig 3).
- **DO NOT OVER TENSION THE UNDERBLANKET.**
- Check regularly to ensure the underblanket remains secure.
- To disconnect from the socket simply raise the flap slightly and pull gently out.
- **DO NOT OPERATE IN THE FOLDED CONDITION** - This will trip the over heat sensor in the heat controller.
- Misuse of your electric under blanket i.e. using whilst folded, creased or not secured correctly to your mattress will render your guarantee null & void.

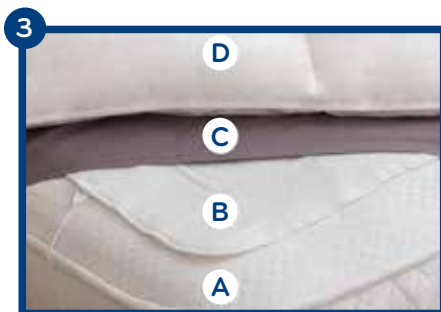

A. Mattress B. Underblanket
C. Fitted Sheet. D. Top sheet / duvet

For illustration only.

Using Your Blanket

Once the blanket has been fitted to the bed correctly and the power source has been connected as instructed on page 5, plug the power lead into the closest socket at the pillow end, using an extension lead if needed to ensure that the lead is not stretched.

This product is designed to preheat your bed to the desired temperature using the temperature control switch. The controls vary depending on which model you choose.

Switch Control

This underblanket has 3 heat settings and the timing is done manually.

Setting the heat

- The numbers on the control panel represent the following heat levels (fig 1).
 - 0 = Off Position.
 - 1 = Low Heat Level.
 - 2 = Medium Heat Level.
 - 3 = High Heat Level.
- Move the heat setting on the control switch to the desired heat level (fig 2).

Time it takes

- The blanket will start to heat after a few minutes providing it is covered correctly with a duvet or blanket (this will depend on room temperature and the type of bedding used).
- If using the blanket all night or for extended periods please use a low heat setting 1.



For illustration only.

After Sales Support

Examine the cord and blanket on a frequent basis for signs of wear and damage.

Please check the following if the blanket fails to operate:

- The plug and socket have not become disconnected.
- The supply plug is correctly connected to the flex.
- Check the supply fuse and 3 amp plug fuse.

If the product is still faulty and you have proof that the blanket was purchased within the last 3 years, please contact the customer services.

HELPLINE

Should you need any advice regarding this product, please contact the helpline.

9.00 - 17.00 Monday - Thursday

9.00 - 16.00 Friday

Telephone -

03303 322575

**TO VALIDATE YOUR GUARANTEE PLEASE
REGISTER YOUR PRODUCT ONLINE AT
www.silentnightguarantee.co.uk**

Your Guarantee

Please retain the retailers receipt as proof of purchase. Staple your receipt to the back cover of this instruction book.

This guarantee is only valid if the appliance has been used for domestic use only in accordance with the instructions provided.

All Silentnight products are individually tested before leaving the factory. If the fault develops within **28 days** of purchase please return to the place of purchase for a replacement.

If the fault develops after 28 days and within the **36 months** of original purchase, you should contact the helpline and customer service department following the simple instructions.

You will be asked to return the product (packaged appropriately) to the address below together with proof of purchase and your contact details.

**Unit B11, Broadlands,
Heywood Distribution Park
Heywood,
OL10 2TS**

All faulty products (apart from the exceptions below) will be replaced and returned within 28 days.

Exclusions:

Silentnight shall not be held liable to replace or repair the goods under the terms of the guarantee in the following cases:

- Fault caused through accidental use, misuse, negligence or used contrary to the manufacturers recommendations and care instructions.
- Used on the incorrect voltage supply.
- If the appliance has been tampered with by an unqualified person.

This guarantee does not affect your statutory rights as a customer. The guarantee does not confer any rights other than those expressed and in particular we shall not be liable for any indirect or consequential loss or damage.

Silentnight Bedding

A range of classic Silentnight products offering a wide choice of price, quality and sleep benefits.



Egyptian Cotton:

Made from the finest quality soft weave cotton fabric that gives extra comfort and softness.



Warm & Cosy:

Deep filled with soft hollowfibre, this collection will keep you warm and cosy all night long.



So Soft:

This collection features luxury Percale cotton covers and is deep filled with small clusters of fibre.



Deep Sleep:

Generously filled with soft spring like hollowfibre that provides extra warmth and comfort for an indulgent night's sleep.



Ultrabounce:

Filled with layers of bouncy hollowfibre for extra comfort. Bounces back to its original shape time and time again.



Essentials:

Made with soft microfibre and filled with hollowfibre, this affordable collection of products offer the ideal solution to a great night's sleep.



Airmax:

Airmax maximises airflow and breathability around your body to keep you comfortable in every season



Anti-allergy:

Filled with specially treated anti-allergy fibres to combat dust mites and bacteria. A fresh and healthy option for everyone.