

 
148X210mm

BOUNCY HOUSE AND POOL

Assembly & User Instructions - Please keep for future reference 616/6151



Assembly

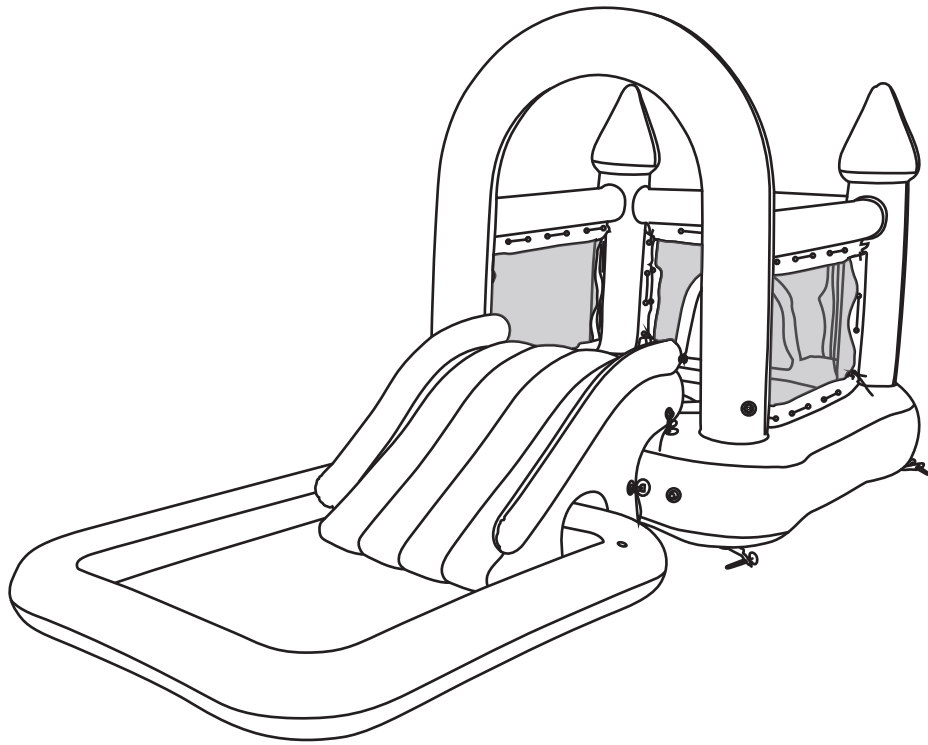

Important

Age: 3 + years

The dimension of assembled product: L300x W140 x H155CM

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

Safety Information

Important – Please read these instructions fully before assembly or use

General safety

- Adult assembly required.
- Before use, please ensure the item is on a stable and level surface.
- Do not use the item if any part is broken, torn and missing.

 
Warning

- This is not a life saving device. Only to be used under the direct supervision of an adult. Do not leave child unattended while in use.
- This product is not suitable for children under 36 months due to cord potential entanglement hazard.
- Change the water of the pool frequently (particularly in hot weather) or when noticeably contaminated.
- This product should be assembled on a level surface at least 2m away from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- This product should not be installed over concrete, asphalt or any other hard surface. Do not drag on concrete or other rough surfaces.
- Suitable for maximum of 1 child, maximum weight 30kgs for the bounce house,maximum weight 35kgs ramp & pool.
- Adults should ensure that the valves are fully inserted and check regularly for leakage.
- Warning: Sudden gusts of wind may lift the product off the ground. Please ensure anchors are suitably secure prior to use.
- Assembly and storage must be done by an adult.
- When used, the ramp should be positioned such that a child using it is not looking directly into the sun.
- Set up away from water and any potential fire hazards.
- Ensure ground anchors are fully located and level with the ground to reduce tripping hazards.
- Exceeding the weight limit may damage the product as well as its bouncing function. Serious injury or death many also be caused as a result.
- Loose or baggy clothing, or clothing containing long cords, should not be worn whilst playing on this product.
- The product should periodically be examined for potentially unsafe conditions such as damage to the fan or ground anchor straps.
- Do not allow pets near this product.
- Empty pool completely after each use and store the empty pool in such a way that it does not collect water from the rain or any other source.
- Warning: Never using any footwear whiling jumping . Jump in the middle of the jumping area.

- Warning. Never leave your child unattended – drowning hazard.
- Warning. Only for domestic use. Only for outdoor.
- Children can drown in very small amounts of water.
- Empty the pool when not in use.
- Do not install the padding pool over concrete, asphalt or any other hard surface.
- Toy intended to be assembled by an adult.
- Adult supervision required. Keep away from fire.
- Do not use in water.
- Recommend user weight: 18-30kg.

- Recommend back towards the sun when playing.
- Modifications made by the consumer to the original activity toy shall be carried out according to the instructions of the manufacturer. Please do not use the rope or net that the minimum diameter less than 2mm or the maximum length more than 30cm.

Please check you have all the parts and fittings listed below

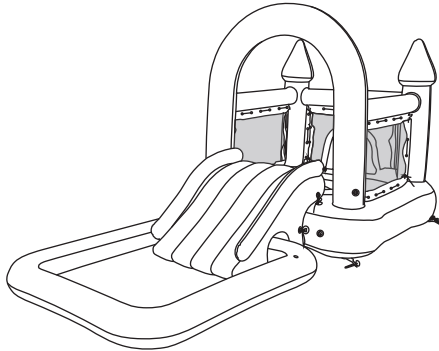

1 Cord x 4

 
2 The Nail x 6

3 Repair patch x 1


Note: The quantities above are the correct amount to complete the assembly. In some cases more fittings may be supplied than required.

Assembly Instructions


Take out the play center and spread it on the ground.
Inflating by hand pump or foot pump is recommended, never use air compressor.

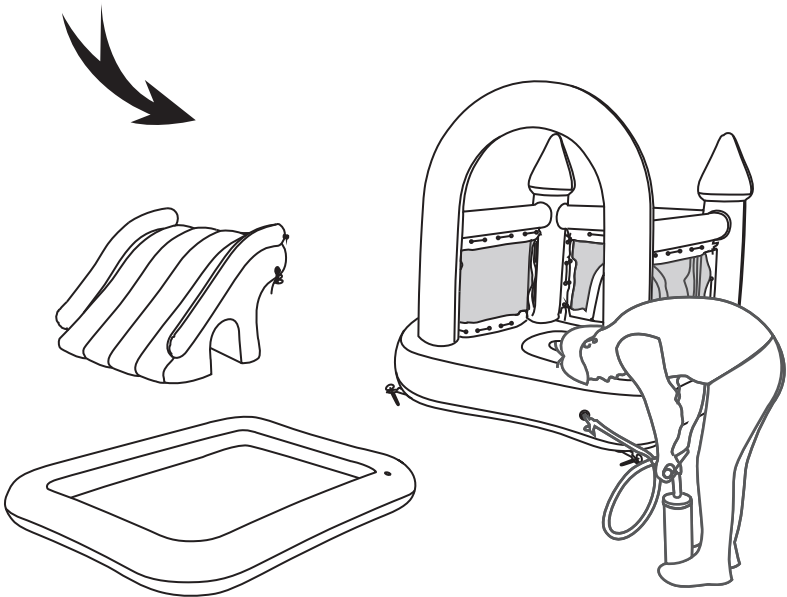

 Using the ropes provided, tie the ramp securely at the 4 positions to the bounce house.

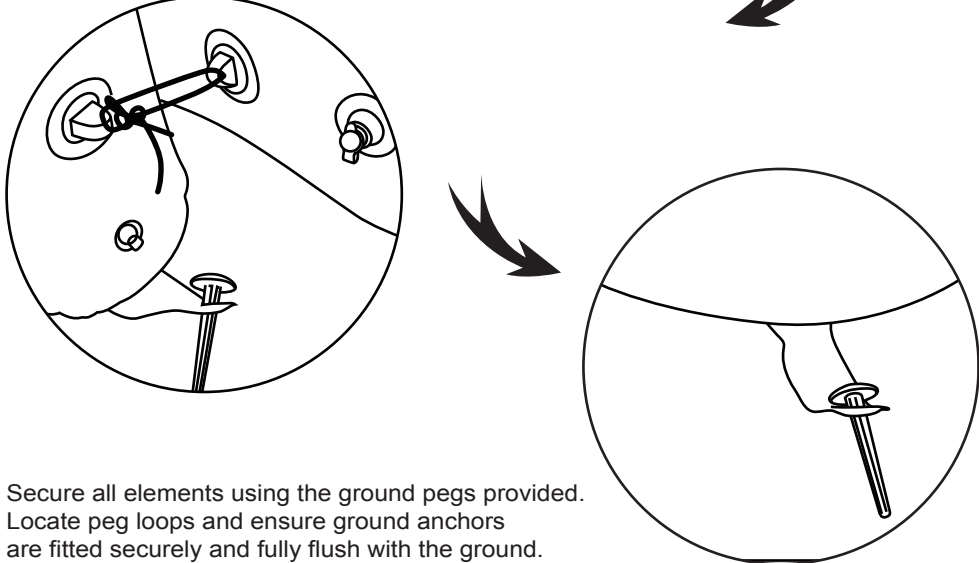

 Secure all elements using the ground pegs provided.
Locate peg loops and ensure ground anchors are fitted securely and fully flush with the ground.
Fill the pool with water til the capacity reached 3/4 roughly.

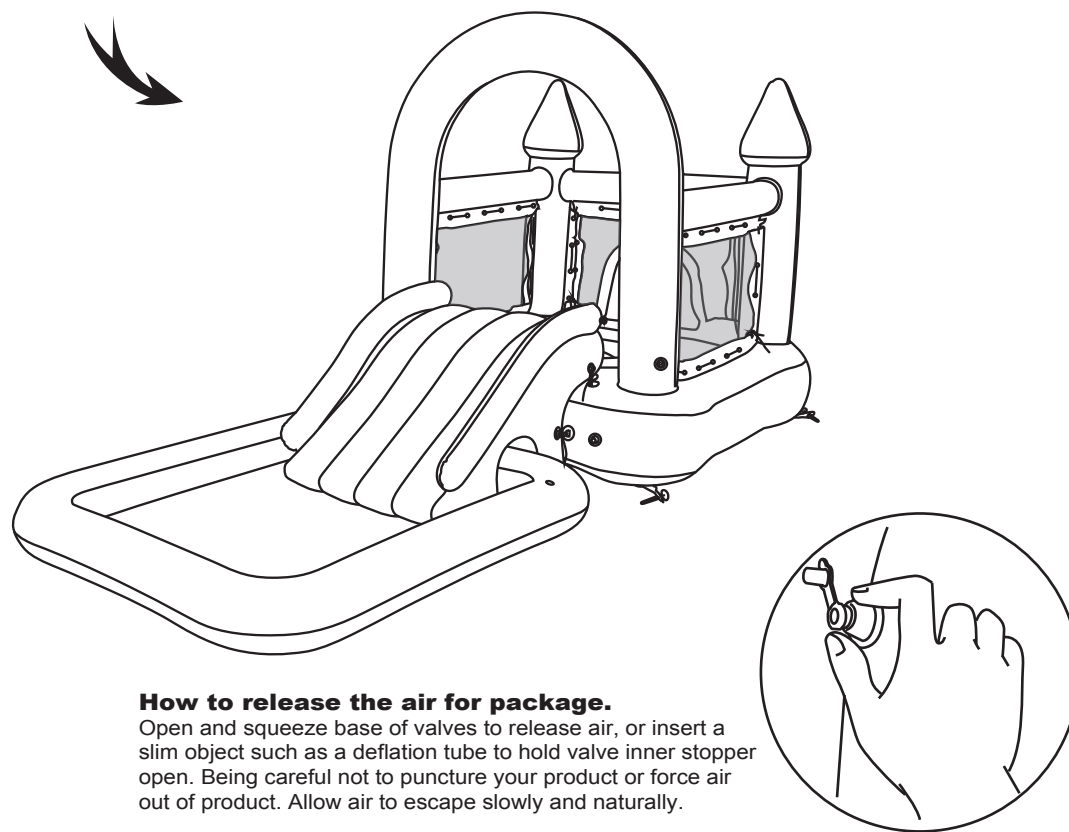

How to release the air for package.

Open and squeeze base of valves to release air, or insert a slim object such as a deflation tube to hold valve inner stopper open. Being careful not to puncture your product or force air out of product. Allow air to escape slowly and naturally.

Care and Maintenance

- It is necessary to carry out checks and maintenance of the main parts(crossbeams, suspensions, anchors etc.) at regular intervals, if these checks are not carried out the activity toy could overturn or otherwise become a hazard.
- Replace defective parts in accordance with the manufacturer's instructions.
- It is of particular importance to carry out the maintenance operations and follow and respect the supplied recommendation at the beginning of each season as well as at regular intervals during the usage season.
- Change the water of paddling pools frequently(particularly in hot weather) or when noticeably contaminated, unclean water is harmful to the user's health.
- Clean the product with clear water, then leave it in shady and cool place for airing, fold it into original package and place it indoor for next use. Caution: Do not use the alkali or acid detergent to clean product! Do not leave product exposed under sunlight directly because it will shorten the using-life of product.
- When use the repair patch please read the instruction on the back of the repair patch carefully.
- Please keep the repair patch away from Children.

CE



Not suitable for children under 3 years due to cord potential entanglement hazard.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**.
Produced for Chad Valley Toys. *Country of origin:* CHINA.
Address: 489 - 499 Avebury Boulevard, Central Milton Keynes, MK9 2NW. www.argos.co.uk/chadvalley