


# Cot Top Changer

## ASSEMBLY INSTRUCTIONS

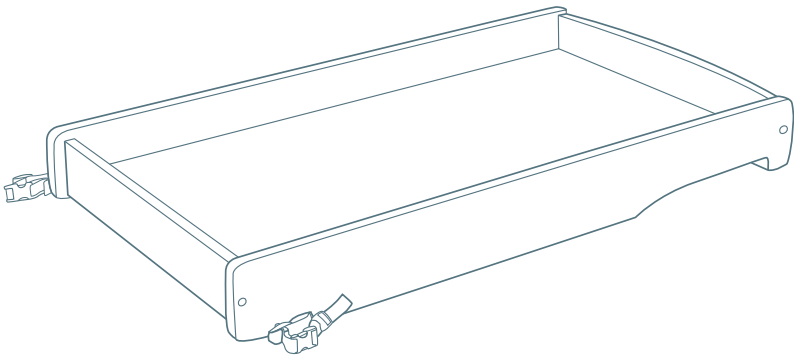

- Dimensions(mm): (L)860 x (W)510 x (H)10\*
- Suitable for use with with Kinder Valley Sydney Cot and Kinder Valley Sydney Cot Bed.
- This changer top is suitable for use by infants from birth until approximately 12 months old, or a maximum weight of 11kg.

\*Approx. measurements only. Sizes may vary.

Need Help?  
Email [sales@kinder-valley.com](mailto:sales@kinder-valley.com)

**IMPORTANT- Read these instructions carefully before use and keep for future reference.**

# Opal Folding Stand

## Assembly Instructions

### BEFORE YOU START

#### IMPORTANT - RETAIN FOR FUTURE REFERENCE - READ CAREFULLY


- The furniture you have purchased is produced from carefully selected natural timbers. You may notice some variation in the grain and colour of different component parts, which is normal for furniture produced using natural wood. Even within the same tree, the colour of the timber will vary depending on the age of the growth. Colour variation is a natural characteristic of most timber products.
- This changer is suitable for use by infants from birth until approximately 12 months old.
- This changer top should only be used in conjunction with the appropriate cot specified. Suitable for use with Kinder Valley Sydney Cot and Kinder Valley Sydney Cot Bed.
- We recommend that a changing mat should always be used. Approximate dimensions L800 x W490mm.
- We suggest you spend some time reading this manual before following the simple step-by-step assembly instructions.
- Check you have all of the components and tools listed in this manual before you start.
- Make sure you have enough space to lay out the parts before starting.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this furniture be aware of the safety of yourself and others.
- Some of the assembly will be easier with two people. Seek assistance when lifting large or heavy items.
- Assemble your furniture on a clean, soft and level surface to avoid damaging the floor or your product.
- Keep any tools provided or spare fittings for future use. Only use the tools specified.
- Assemble all parts loosely, by hand, before tightening any bolts or fixings.
- Once built, do not dismantle for purposes of transportation or storage.
- Clean with a damp cloth.
- This product conforms to BS EN 12221-1 & 2: 2008 + A1 2013.

# WARNINGS

- Do not leave your child unattended. Always keep within arms reach.
- To prevent your changer top tipping and causing serious or fatal injuries, ensure this product is firmly attached to the cot using the fixings supplied.
- This changer top is only intended to be used by one child at a time.
- This changer is not suitable for children over 12 months or a maximum of 10kg.
- Do not leave the child unattended or out of arms reach when using the changer.
- Do not move the changer top with a child on it.
- Do not use the changer top whilst a child is in the cot.
- Remove the changer top from the cot as soon as it is finished with.
- Do not use your changer top if any part is broken, torn or missing. Please contact Customer Services.
- All assembly fittings should be tightened properly and checked regularly to ensure that no screws are loose and re-tightened as required. Loose screws or fittings could trap parts of the body, or clothing (e.g. ribbons, drawstrings, necklaces ) this could pose a risk of strangulation.
- Do not place or leave anything in the changer top, attach anything to the changer top or place it close to another product which could present a danger of suffocation or strangulation (e.g. ribbons, strings, blind cords etc.).
- Do not place your changer top near heat sources, windows, other furniture or electrical sockets.
- Do not place your changer top in the close proximity of an open fire and other sources of heat, such as radiators, electric or gas fires.
- Keep plastic bags away from children or animals.
- Keep fittings and small parts out of reach of children and animals.
- Do not place components directly onto hard floors or other abrasive surfaces where they may become damaged.
- Do not use power tools such as drills and power drivers, as this may damage the frame or fittings. Only use hand screwdrivers.
- Do not modify or alter the changer top in any way.
- Do not allow older children to play with or around the changer top.
- Please ensure that any visitors that use the furniture are aware of its correct use and operation.
- The changer should be attached to the centre of the cot sides. Ensure there is a gap of not less than 250 mm between the changer and cot ends.

# PARTS & FITTINGS

**A** x2 Changer Base

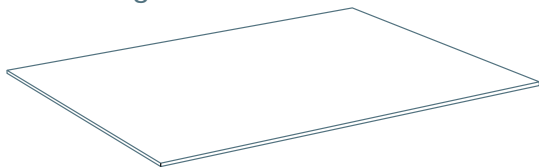


**B** x1 Small End




**C** x1 Curved End




**D** x1 Left Side

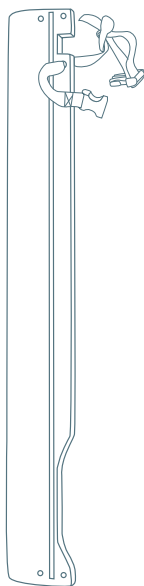


**E** x1 Right Side

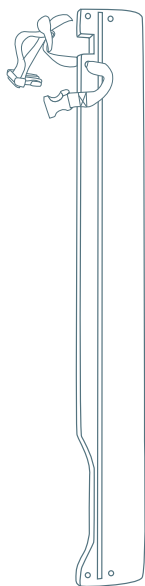


**F** x4 30mm

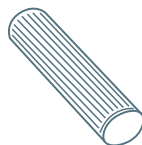

**G** x4 50mm

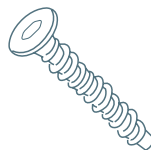

**G** x1

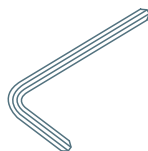


**You will need:**



## Step 1

Secure dowels and screws into the long sides **D** and **E** in the end closest to the belt and fasten the small side.

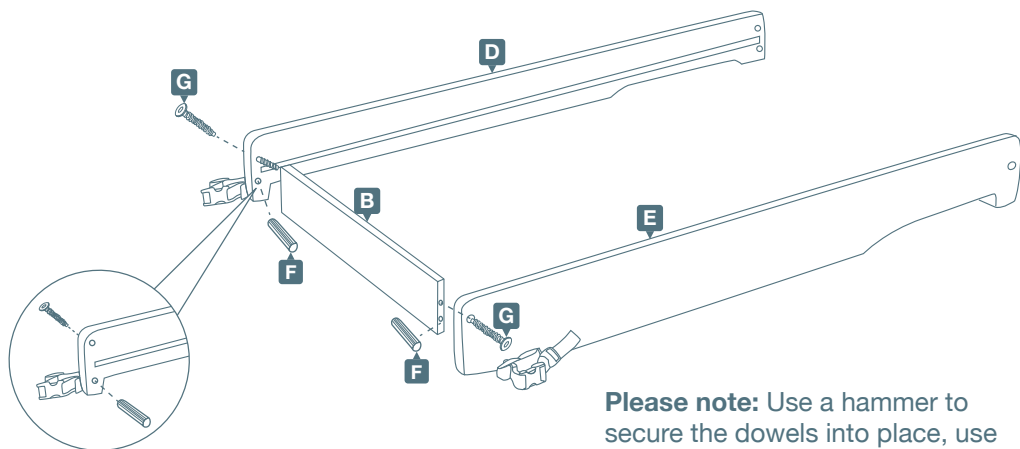


**Please note:** Use a hammer to secure the dowels into place, use the allen key to secure the screws into place.

## Step 2


Place the two changer bases **A** back to back, so the painted sides are on the outside. Slide them down the long side grooves.

**Please note:** Make sure the sides line up.

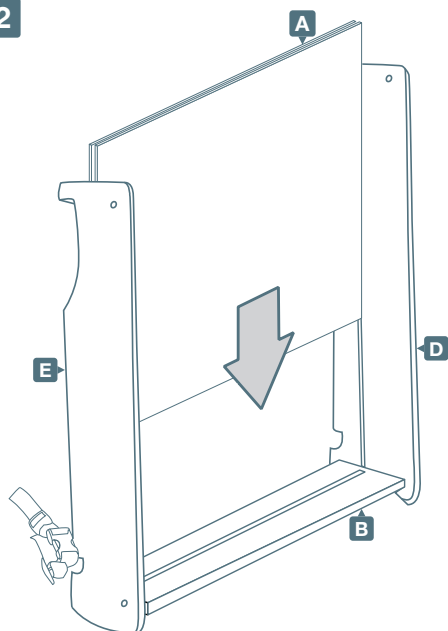

### Step 3

Insert dowels and screws to secure the small curved side into place.

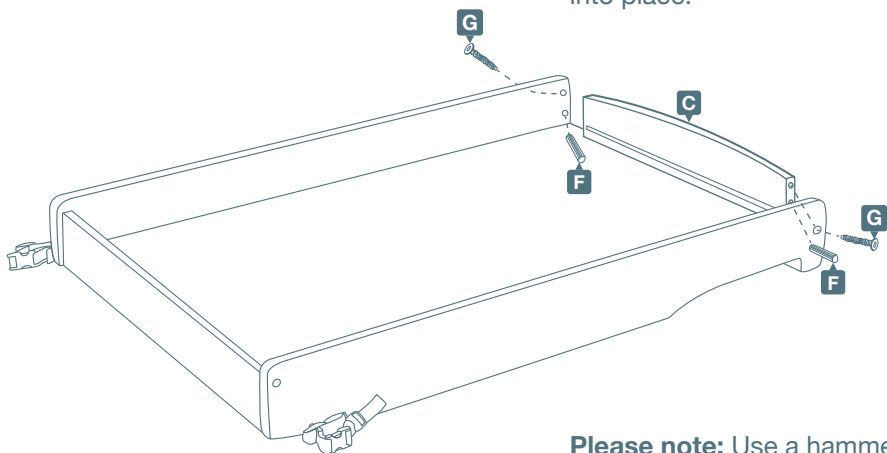

**Please note:** Use a hammer to secure the dowels into place, use the allen key to secure the screws into place.

### Step 4

Fit the cot top changer onto your cot, ensuring the locking straps fit around the side rail, lock and tighten the strap using the buckle.

**Please note:** Only use the changer on the cots specified, ensuring that it is correctly located and the fixing straps are tightened and locked.

