

Dolls Moses Basket

CARING FOR YOUR DOLLS BASKET



Need Help? Email sales@kinder-valley.com

IMPORTANT

KEEP FOR FUTURE REFERENCE. WARNING - Not suitable for children under 36 months. Small Parts.

CLEANING YOUR DOLLS BASKET

Basket: Sponge clean lightly with warm water and mild detergent. Dressing: All covers are machine washable, they can be washed at 40° with a fabric softener to obtain best results.

ADULT ASSEMBLY REQUIRED HOW TO ASSEMBLE THE HOOD *comes already assembled TO DISASSEMBLE THE HOOD FOLLOW STEPS IN REVERSE:

1. Firstly, thread the 2 hood supports through the fabric hood situated on the underside; 1 to support the front and 1 to support the middle of the hood

2. Place the screws on the inside of the basket, 1 on either side. In 1 of the holes near to the handle.

3. On both supports, there is a hole at the ends; place these onto the screwyou must ensure that the front support goes on first, followed by the middle, to stop the straps from crossing over.

4. Fit the nut on to the screw, from the outside of the basket- ensuring it is tightened to where you desire the hood, you can adjust the screws accordingly.

5. Lastly, use the elastic loops to hook over the nuts on both sides of the basket, and tuck the ends of the canopy over, pull the back fabric of the hood over the basket, to create the canopy.



IMPORTANT - RETAIN FOR FUTURE REFERENCE