### Components

A 1 x Hanger

B 2 x Lower Side Support

© 1 x Top Crossbar

① 2 x Upper Side Support (Inserted inside component B)

0 0 0 0 0 0

② 2 x Bottom Crossbar

(F) 2 x Connector

(H) 2 x Lock

① 4 x Castor








© 2 x Leg Section



# **Grey And Chrome Tidy Rail With Two Rails**

Simple Assembly Instructions - Please keep for future reference 8755027

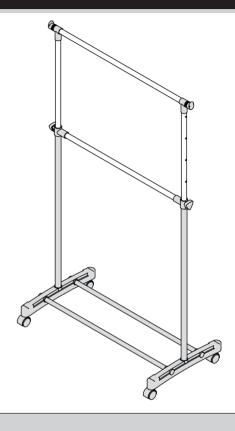

#### **IMPORTANT**

- 1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
- Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
- **3**. Take all the fittings out of the plastic bag and separate them into their groups.
- **4**. Ensure you have enough space to lay out all the parts before assembly.
- **5.** To avoid scratching it is recommended that you assemble the unit on a soft level surface.
- 6. Phone After Sales 08456 400 800

9-07

# **Assembly Instructions**

# **Assembly Instructions**

### Stage 1 — Fitting the Feet

## Stage 2 - Fitting the Rail


**Check Before Assembly** 

There are many different kinds of Screws and Panels. Ensure you check all before assembly.

NOTE: It would be useful to ask someone to help you at this stage.

 Insert Bottom Crossbar ( into the Leg Section. ( See fig. 1.


3. Insert Castors ① into the Feet ⑥. See fig. 3.

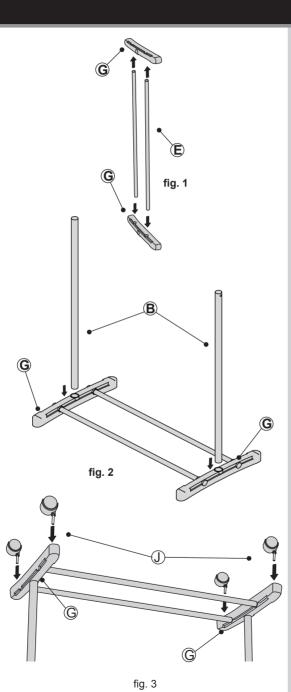


NOTE: It would be useful to ask someone to help you at this stage.

 Insert Top Crossbar © into the Connectors F.
See fig. 4.

 2. Insert Upper Side Support ① into the Connectors ⑤. See fig. 5.



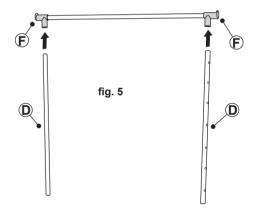

# **Assembly Instructions**

# **Assembly Instructions**


### Stage 3 — Fitting the Hanger

NOTE: It would be useful to ask someone to help you at this stage.

- 1. Insert Hanger (A) into the Lock (H). See fig. 6.
- 2. Insert Locks (H) into the Bottom Side Support (B). See fig. 7.
- 3 Insert Locks (H) into the bottom of Upper Side Support D.

NOTES: Align all the holes of the componets B, D& H) before locking.


4. Set the height of the unit: Using the holes on Upper Side Support ① . Ensuring the Locks (H) are loosened See fig.8., slide the Upper Side Support D to the desired height and tighten the Locks (H) to fix in position. See fig. 9 . & fig. 10. Adjustment Range:99.5 ~ 167 cm.

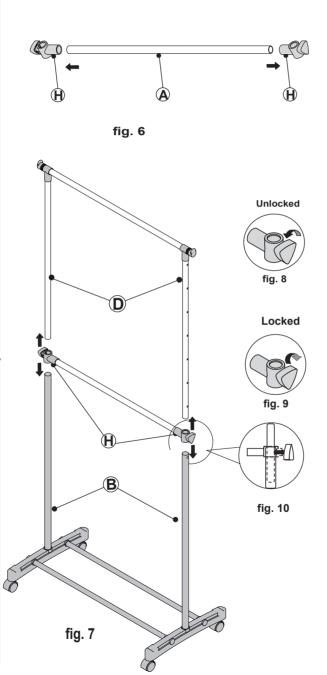

### Stage 4 — Finishing the Unit

NOTE: It would be useful to ask someone to help you at this stage.

1. Carefully place the unit in the desired location. See fig.11

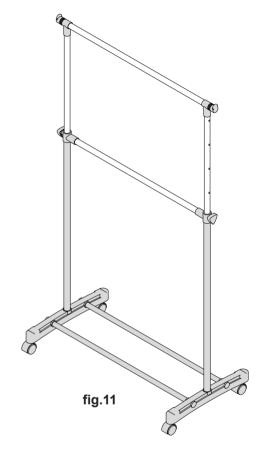

NOTE: Before use always make sure the unit is secure.

#### Care and Maintenance

#### **Safety**

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

#### Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

#### Fitting

From time to time please ensure there are no loose screws on the product.