
Calgary - Corner Desk

Assembly Instructions - Please keep for future reference

476/7978

462/6930

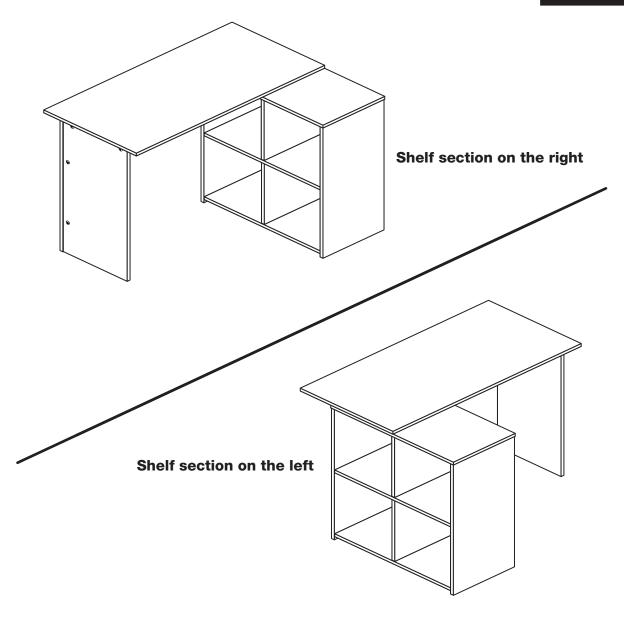

Dimensions

Width - 100cm

Depth - 82cm

Height - 74cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- *Warning:* This unit weighs approximately 24kgs. Please lift with care.
- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Parts of the assembly will be easier with 2 people.

- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

- Safety note: If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the panels listed below

When applicable, remove any protective film before use

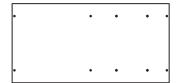






Shelf Base (DF6423) (61.5 x 31.9cm)




3 Shelf Panel (*DF4611*) (61.5 x 31.9cm)

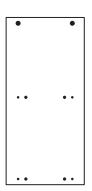

•

5 Shelf Divider (DF4612) (32.25 x 31.5cm) x 2




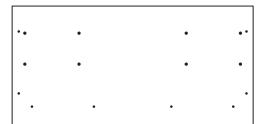

6 Desktop (*DF4608*) (99.6 x 49cm)



7 End Panel (DF4609) (70.6 x 35.4cm)

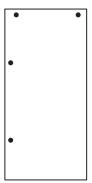

8 Back Panel (DF4614) (70.6 x 33.8cm)



Components - Fittings

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.


For any other queries please contact the Customer Helpline on: 0345 640 2020

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A	B 🚱	
Metal dowel (F901) x 22	Large locking nut (F900) x 26	Double metal dowel (F566) x 2
•		
Wooden dowel (F22) x 8	Plastic Nail (F91) x 7	25mm Screw (F50) x 1
	B	0
25mm Screw (F484) x 4	Plastic Insert (F502) x 4	Allen Key (F36) x 1
Foot (F854) x 1		

Tools required

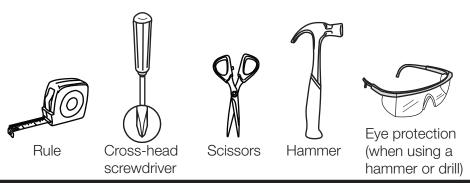

Ruler - Use this ruler to help correctly identify the screws mm 10 20 30 40 50 60 70 80 90 100 110 120 130 140 150 160 170

Step 1


Prepare the shelf panel


Insert 4 large locking nuts **3** into the shelf panel **3**.

Note: The arrows on the locking nuts **must** point towards the holes in the edge of the panels.

Tap 4 wooden dowels **D** into the shelf panel **3**.

Note: Wooden dowels must not stick out from the edge by more than 10mm or they may damage other panels.

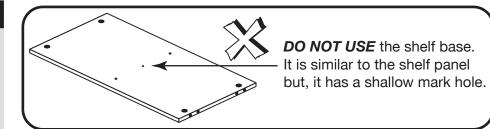


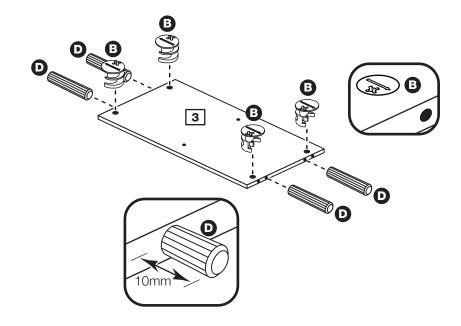

Step 2

Prepare the 2 shelf dividers

Insert 4 large locking nuts **3** into each of the 2 shelf dividers **5**.

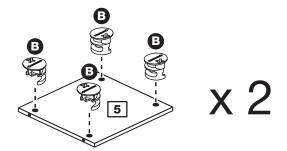


Step 3


Fit a divider to the shelf panel


a: Tap 2 double metal dowels • through the holes in the middle of the shelf panel 3 and push a divider 5 onto them until they "bottom out".

b: Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the divider **5**.

Note: Turn the large locking nuts **3** as far as they will go - more than 1/2 a turn.

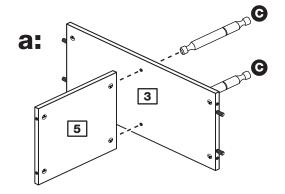

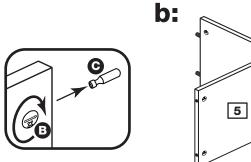

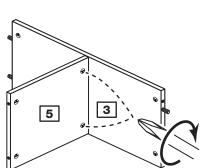


Step 4

Fit the other divider

Push the divider **5** onto the shelf panel **3**.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the divider **5**.

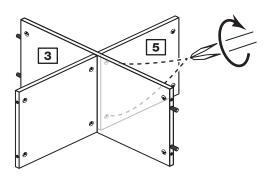

Step 5

Prepare the shelf base


a: Insert 4 large locking nuts **B** into the shelf base **2**.

Tap 4 wooden dowels **D** into the shelf base **2**.

Turn the shelf base over

b: Screw 2 metal dowels **(A)** into the shelf base **(2)**.

Note: Tighten the metal dowels up fully against the panels.

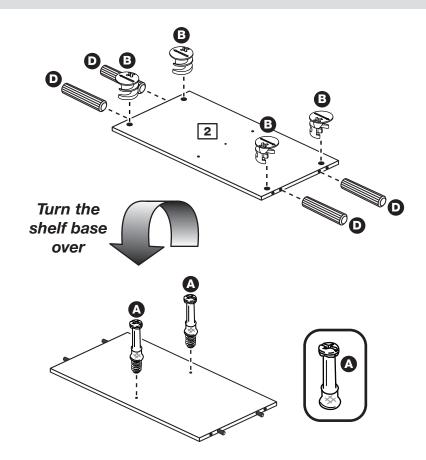


Step 6

Fit the shelf base

Push the shelf base 2 onto the divider 5.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the divider **5**.

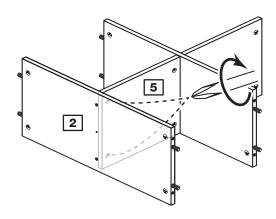


Step 7

Prepare the 2 shelf ends

Screw 4 metal dowels **A** into each of the 2 shelf ends **4**.

Insert 2 large locking nuts **B** into each of the 2 shelf ends **4**.

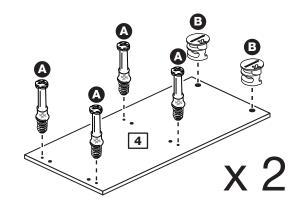


Step 8

Fit a shelf end

Push a shelf end 4 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts **3** fitted to the shelf base **2** and the shelf panel **3**.

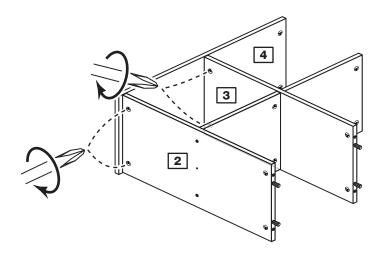


Step 9

Fit the other shelf end

Push a shelf end 4 onto the assembly.


Use a screwdriver to tighten the 4 large locking nuts **3** fitted to the shelf base **2** and the shelf panel **3**.

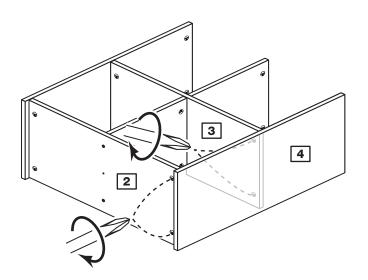

Step 10

Prepare the shelf top

Screw 6 metal dowels **A** into the shelf top **1**.

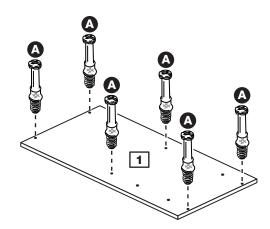


Step 11

Fit the shelf top

Push the shelf top 1 onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts **B** fitted to the 2 shelf ends **4** and the divider **5**.

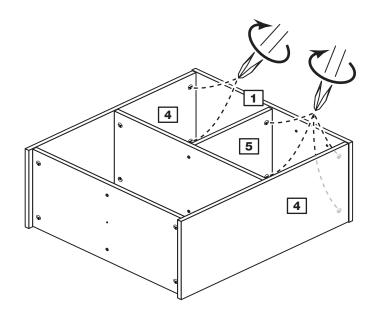

Step 12

Fit the foot and plastic nails


Screw the foot **①** onto the shelf base **②** using screw **⑤**.

Tap 2 plastic nails (a) into the bottom edge of each of the shelf ends (4).

Carefully stand the assembly up for the next step.



Warning: The unit is heavy. Lift with care.

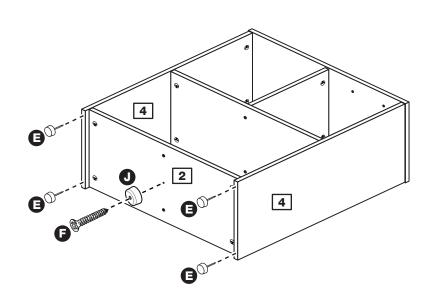


Step 13

Prepare the end panel

Screw 2 metal dowels **A** into the end panel **7**.


Insert 2 large locking nuts (3) into the end panel (7).

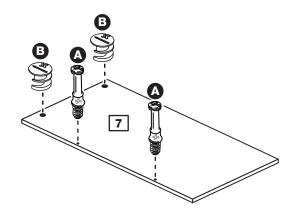

Step 14

Prepare the back panel

Insert 4 large locking nuts **B** into the back panel **8**.

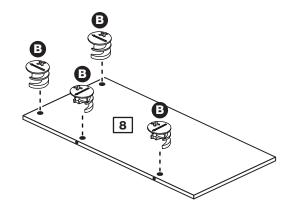


Step 15

Fit the back panel to the end panel

Push the back panel 8 onto the end panel 7.

Use a screwdriver to tighten the 2 large locking nuts **B** fitted to the back panel **8**.

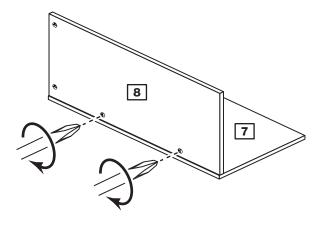

Step 16


Prepare the desktop


Screw 4 metal dowels **A** into the desktop **6**.

Tap the 4 plastic inserts **H** into the desktop **6**.

IMPORTANT!

Only follow the 2 steps on this page if you are going to have the shelf section on the left. If you are going to have the shelf section on the right, follow the 2 steps on the next page.

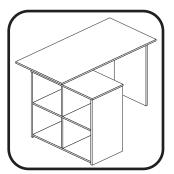

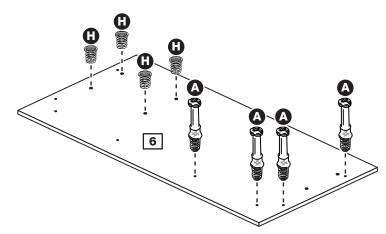


Step 17

Fit the end panel and back panel assembly onto the desktop

Lower the end panel 7 and back panel 8 onto the desktop 6.

Use a screwdriver to tighten the 4 large locking nuts **3** fitted to the end panel **7** and back panel **8**.

Tap 2 plastic nails into the bottom edge of the end panel 7 and 1 into the back panel 8.

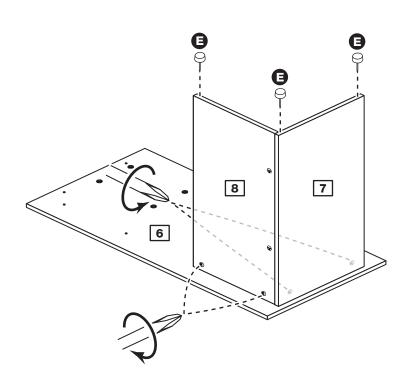

Step 18


Prepare the desktop


Screw 4 metal dowels **A** into the desktop **6**.

Tap the 4 plastic inserts **H** into the desktop **6**.

IMPORTANT!

Only follow the 2 steps on this page if you are going to have the shelf section on the right. If you are going to have the shelf section on the left, follow the 2 steps on the previous page.

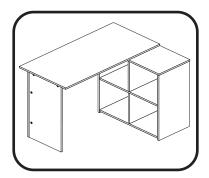

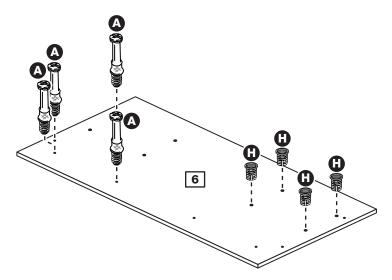


Step **19**

Fit the end panel and back panel assembly onto the desktop

Lower the end panel 7 and back panel 8 onto the desktop 6.

Use a screwdriver to tighten the 4 large locking nuts **3** fitted to the end panel **7** and back panel **8**.

Tap 2 plastic nails into the bottom edge of the end panel 7 and 1 into the back panel 8.

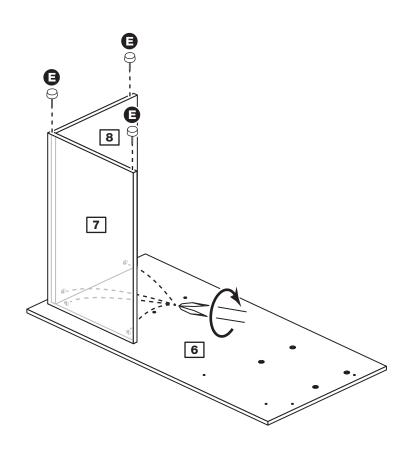

Step 20

Fit the desktop to the shelf top

Lower the desktop 6 down onto the shelf top 1.


Using screws **G**, screw up through the shelf top **1** and into the plastic inserts in the desktop **1**.

Tighten up the screws **G** with the allen key **1**.

IMPORTANT!

Only follow this step if you are going to have the shelf section on the left.

If you are going to have the shelf section on the right, follow the next step.

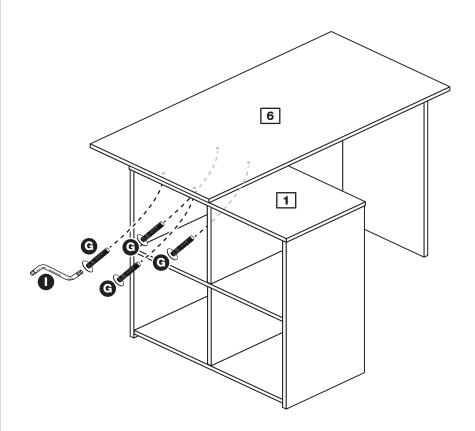

Step 21

Fit the desktop to the shelf top

Lower the desktop 6 down onto the shelf top 1.


Using screws **G**, screw up through the shelf top **1** and into the plastic inserts in the desktop **1**.

Tighten up the screws **G** with the allen key **1**.

IMPORTANT!


Only follow this step if you are going to have the shelf section on the right.

If you are going to have the shelf section on the left, follow the previous step.

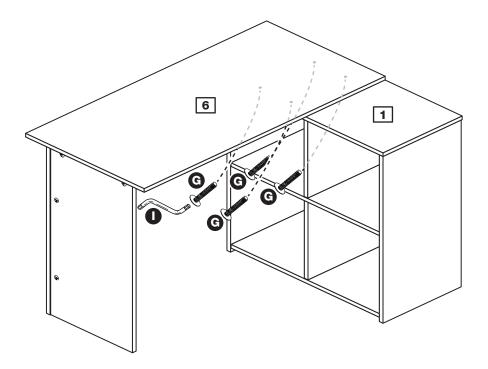

Step 22

Assembly is complete

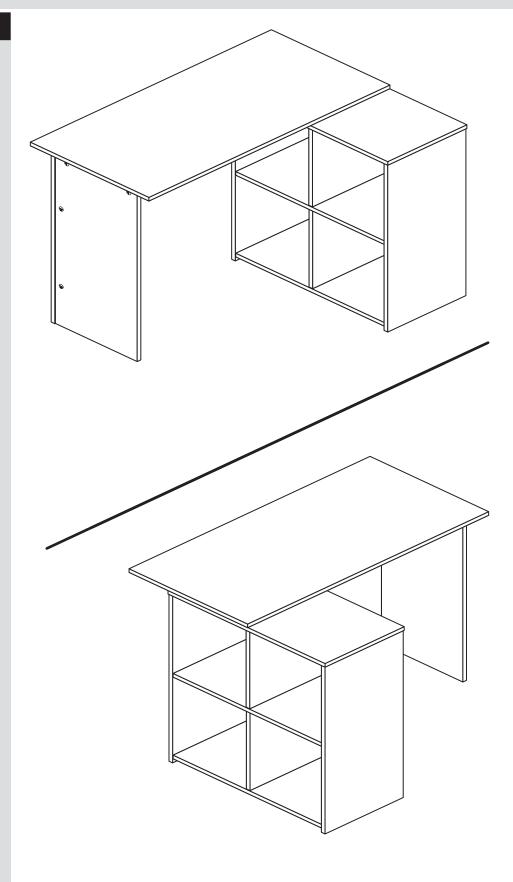

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk or email: Help@ClickSpares.co.uk (quoting your original order number)

Alternatively, call the Spares Helpline on: 0370 112 1928.

For any other queries please contact the Customer Helpline on: 0345 640 2020