Jenson Gloss



470/5961 564/1701



IMPORTANT - Retain these instructions for future reference

Spare Parts

Visit: www.argos-support.co.uk Email: Help@ClickSpares.co.uk Call: 0370 112 1928

Customer Support

Call: 0345 640 2020

Safety

Important - Please read these instructions fully before starting assembly

- · Warning: This unit weighs approximately 47kgs. Please lift with care.
- Assembly to be carried out by a competent adult only.
- During assembly children should be kept away from the product due to possible risk of injury.

 Installation shall only be carried out exactly according to the manufacturer's instructions otherwise a safety risk can occur if incorrectly installed.

- Do not use this item if any components are missing or damaged.
- Regularly check all fastenings to ensure they are properly tightened.

 WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 2 overbalance protector kits supplied.

• A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.

 Refer to guide after section 42 for wall fixing information.

Care Advice

- Check you have all the components and tools listed on relevant pages.
- Remove all fittings from the specified plastic bag and separate them into their groups.
- Parts of the assembly will be easier with 2 people.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).
- Only clean with a damp cloth.



• Assembly videos are available throughout **E** these instructions by scanning in the QR codes.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Please explore a sustainable (re-selling/donation to charity) or a responsible (local tip) way of disposal at the end of use of this product.

Cabinet Panels



10 59.1 x 31.8cm X 2

Drawer Panels Note: the internal drawer panels are grey



Fittings

Use these drawings to correctly identify the fittings



Fittings















A

2nd hole

E





2





Fixing Bottom Mounted Runners https://www.youtube.com/watch?v=Z6IGMy19h7Q









Screw directly into panel as illustrated















Fitting Ball Bearing Runners

www.youtube.com/watch?v=yG4xtiJJeSg



11

Ŷ ■

















Only use 1 Screw to fit each Bracket























WARNING! In order to prevent overturning this product must be used with the

2 wall attachment devices provided



See the next section for a guide to wall mounting and fixings



Slide the Brackets against the wall. Fit the 2nd screws supplied with the Brackets into the underside of the Shelf panel.

Mark the slot at the back of the Brackets for drilling into the wall.

Wall fixings are not supplied as they will need to suit the wall type.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

walls are made of brick, breeze block, concrete, stone or wood.

You can use one of the following types of wall plug if your

Types of walls

No.1 "General Purpose" wall plug



Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug



For use when attaching light loads on to plasterboard partitions.

Care &

Maintenance

No.3 "Cavity Fixing" wall plug



For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.

Safety: Always check the fitting and location to ensure your safety in and around the home. Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Pedestal Drawers Assembly







Drawer Assembly

www.youtube.com/watch?v=InNBV_uuMmo

























Fit each of the 4 Drawers by sliding both of its Runners forward and locate the Drawer Sides between them, lining up the holes in the Drawer Sides with the 2nd 'threaded' holes in the Runners.

Working from the inside of the Drawer, insert 2 Screws through the Drawer Sides and out into the 2nd threaded hole in the Runner.

Note: Do not overtighten the Screws.

If they catch on the runner you may need to loosen them slightly.

Top Drawer Assembly









52

























Slide the wheels of the 4 Runners fitted to the Drawer, over the wheels of the Runners fitted to the panels and push the drawer into position.



Assembly is complete

Please remove any blue protective film from panel edges and clear protective film from panel surfaces