

BUSH

Instruction Manual

 
BUSH Oxford DAB+ Clock Radio

Model No. DS-982



Need technical support? Call our experts on 0345 604 0105

or go online at bush-support.com



You'll soon be enjoying your new DAB+ Clock Radio.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We are here to help you get the most from DAB+ Clock Radio. Should you require any guidance, a simple solution can often be found online at:

bush-support.com

If you still require further assistance, call one of our experts on **0345 604 0105**.

Contents

1	Safety information	
	Important Safeguards	5
2	Getting to know your DAB+ clock radio	
	Clock radio	8
3	Using your DAB+ clock radio	
	Power Source	10
	General operation	10
	System settings	10
	DAB+ Operation	11
	How to store a preset	12
	How to recall a preset	12
	FM Operation	13
4	Other information	
	Specification	15
5	Product support	
	Help and assistance	17
	Disposal	18
	Declaration of Conformance	18
	Bush Guarantee	19

Safety information 1

Safety information

Important - Please read these instructions fully before use



* This appliance is intended for domestic household use only and should not be used for any other purpose or in any other application, such as for non-domestic use or in a commercial environment.

* Ventilation

* Allow at least a 10cm gap all around the product.

* The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

* No naked flame sources, such as lighted candles, should be placed on the apparatus.

* Attention should be drawn to the environmental aspects of battery disposal.

* This apparatus is not suitable for use in a tropical climate.

* The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

* Never let anyone push objects into holes and ventilations slots.

* Do not attempt to repair this product yourself; always get a qualified service agent carry out adjustments or repairs.

* The marking plate is located at the rear of the apparatus.

* To prevent possible hearing damage, do not listen at high volume levels for long periods.



Getting to know your DAB+ Clock Radio

2

Getting to know your DAB+ CLOCK RADIO

You'll be up and running in no time

 
Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation. If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Unpacking

Remove all items from the packaging. Retain the packaging. If you dispose of it, please do so according to local regulations.

The following items are included:

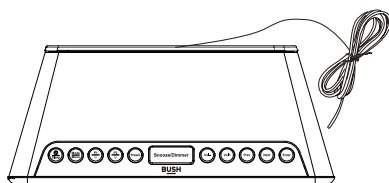

Main Unit



UK Mains AC/DC adaptor

 


Instruction Manual

Getting to know your DAB+ CLOCK RADIO

You'll be up and running in no time


CLOCK RADIO

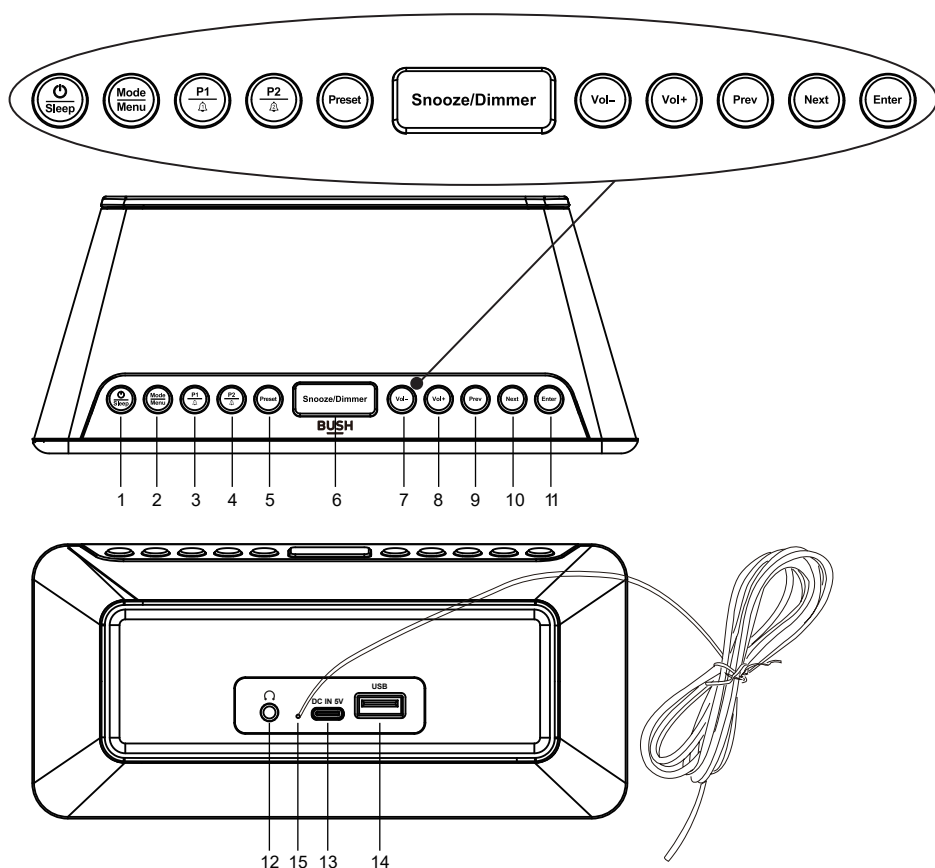

- | | |
|-----------------------|-----------------------------|
| 1. POWER/SLEEP | 8. VOL + |
| 2. MODE / MENU(Back) | 9. PREV |
| 3. PRESET 1 / ALARM 1 | 10. NEXT |
| 4. PRESET 2 / ALARM 2 | 11. ENTER |
| 5. PRESET | 12. HEADPHONE JACK |
| 6. SNOOZE / DIMMER | 13. DC IN PORT (TYPE USB-C) |
| 7. VOL - | 14. USB |
| | 15. WIRE ANTENNA |

Need technical support? Call our experts on 0345 604 0105

 Using your DAB+ CLOCK RADIO 3

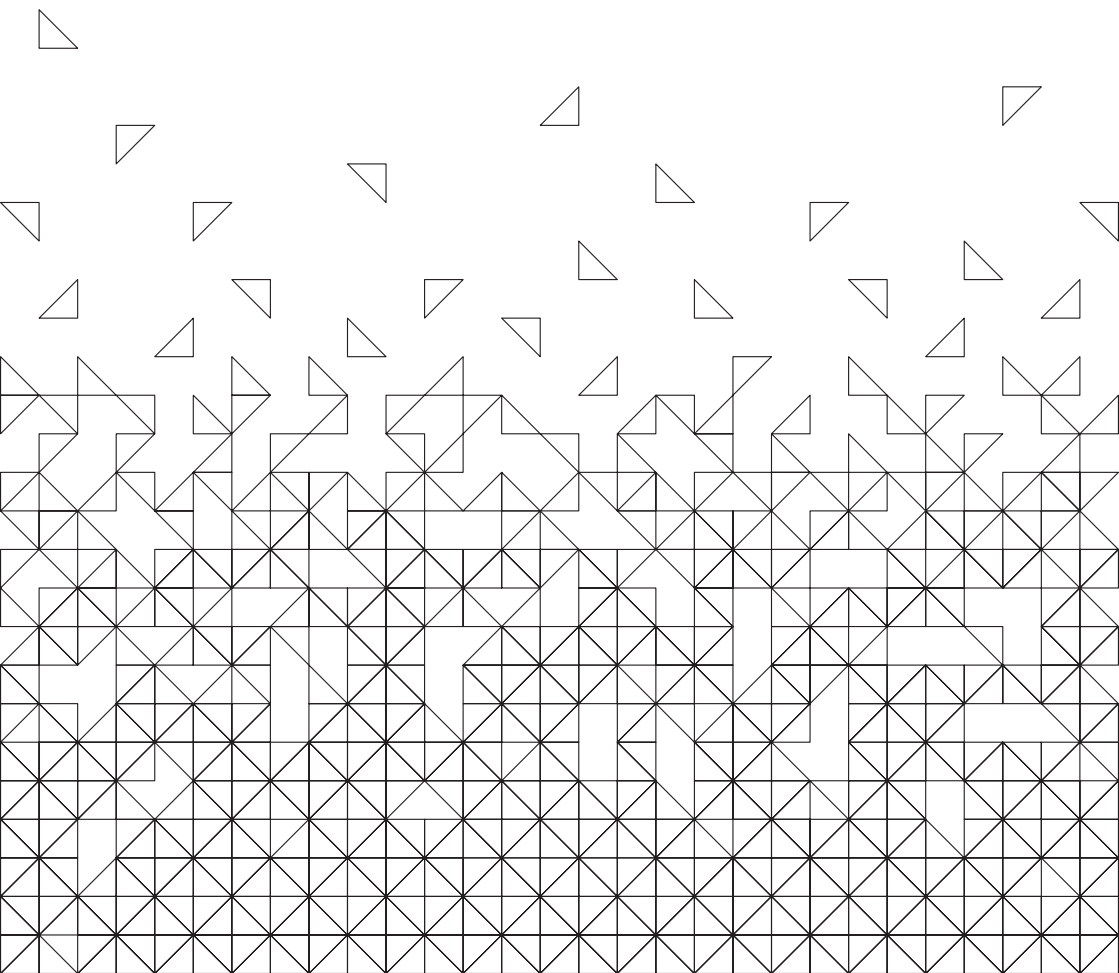

Need technical support? Call our experts on 0345 604 0105
or go online at bush-support.com

Using your DAB+ CLOCK RADIO

Let's get started

Power source

Unwind the main adaptor cable to its full length. Connect the end of the cable to the DC IN Socket at the rear of the unit and then connect to the mains adapter to the mains socket.

General operation

Unwind the wire antenna to its full length.

Press  to turn the radio on and the display will show "WELCOME".

When DAB mode is activated for the first time, a scan will automatically commence and will play the first station once finished.

If you can receive a DAB signal in your location, the unit will synchronise to the current local time.

Adjust the wire antenna to get good reception if need.

- Press  to switch the unit to ON mode.
- Press  to switch the unit back to STANDBY mode.
- Please turn the unit off completely to save energy when not in use

Selecting modes

Press and hold MODE/ MENU to switch between Digital Radio & FM modes.

Adjusting the Volume

Press VOL+ or VOL - to increase/decrease the volume.

Sleep:

The device features a sleep timer function, which switches the radio off after a certain time if no actions have been performed up until then.

1. In Standby mode, press and hold  button into Sleep timer selection.
2. Press PREV/NEXT to select either OFF-10-20-30-40-50-60-70-90 minutes.
3. Press ENTER to confirm your selection.

System settings

Press MODE /MENU to access the menu and then press ENTER to select SYSTEM.

Time

1) Set Time

Press PREV/NEXT to select hour/min/date/month/year, then press ENTER to confirm and saved.

2) Update

Press PREV/NEXT to select 'ANY' or 'DAB' or 'FM', or 'NONE', then press ENTER to confirm.

Please note the time is displayed in 24hr format only. It is not possible to change to 12hr am/pm format.

Need technical support? Call our experts on 0345 604 0105

Page 10 of 20

or go online at bush-support.com

V4.5:04/26

Using your DAB+ CLOCK RADIO

Let's get started

Dimmer

Press PREV or NEXT to select from "High", "Medium", or "Low" and press ENTER to confirm.

Factory reset:

Press PREV or NEXT select "Y or N" and press ENTER to confirm.

Alarm setting

Note: Check that the radio has the correct time and date before you set an alarm.

1. At Standby mode, press  or  into Alarm setting.
2. Wake Up time : press PREV/NEXT to select hour/min and press ENTER to confirm.
3. Source: press PREV/NEXT to select Buzzer / DAB /FM and press ENTER to confirm. When selecting Digital Radio or FM, the radio will play the station that was last listened to as the alarm.
4. Frequency: Press PREV/NEXT to select Daily, Once, Weekends or Weekdays, press ENTER to confirm.
5. Volume: 1- 16, Press PREV/NEXT to select and press ENTER to confirm.

Press PREV/NEXT to select OFF or ON and press ENTER to confirm and saved.

Note: Once the alarm sounds, press SNOOZE/DIMMER to delay the alarm for another 5 mins. The radio will go to Standby mode.

To cancel a sounding alarm, or an alarm in snooze, press .

DAB Operation

Press and hold MODE / MENU to switch to DAB mode.

The DAB mode will automatically be selected and the first time the radio is connected to the supply the radio will perform a quick scan. The display will show a slide bar that indicates the progress of the scan, the name of the last station found and the total number of stations found so far.

When the scan is finished the radio will play the first alphanumerically found station. If the radio does not find any stations, 'NO DAB' displayed. Press NEXT to scan again.

To listen to all stations that have been stored use the PREV and NEXT button to scroll through them. Press ENTER when on the required station.

Using your DAB+ CLOCK RADIO

Let's get started

The radio will display station information when you press ENTER. Press multiple times to view all information available.

When you turn on the radio again after it switching off, it will automatically tune to the same station (DAB or FM) that was last selected.

Remarks : In DAB mode, the radio will synchronize with the time and date of the station.

Station information for DAB Radio

Signal Strength : Displays a signal bar with the strength of the current station.

PTY (Programme Type) : shows the type and description of the program provided by the DAB station.

Station name : Shows station name

Channel and Frequency: Displays the station's transmission channel number and frequency.

Signal Error : Provides details of the signal error rate.

Bit Rate : The data rate which the signal is being transmitted.

Time : Shows the hour/min/sec

Date: shows DD/MM/YEAR

How to store a preset station (DAB /FM)

Up to 40 DAB+ and 40 FM presets can be stored. To store a station that you are currently playing : Press and hold  or . 'Empty' will show on the display, press ENTER, the display will then show 'Stored'.

Press and hold PRESET, press 'PREV' or 'NEXT' button to select the number (1-40) you want to store the station as. Then press ENTER to save. The display will then show 'Stored'.

How to recall a preset radio station (DAB/FM)

Press  or  into preset 1 or preset 2 to play the stored station.

Press PRESET, and press PREV / NEXT to scroll through your preset stations. Press ENTER button to confirm.

SCAN

Press MODE/MENU, SCAN will display, then press ENTER to start full scan.

Manual Scan

Select "Manual" by pressing ENTER to choose from 5A 174.928mhz to 13F 239.200mhz, then press ENTER to play.

DRC

Select 'DRC' by press ENTER and press PREV/NEXT to select DRC off/DRC high/DRC low, then press ENTER to confirm.

Prune

If want to delete such stations without signal in the station list, press ENTER, select 'Y' or 'N' by press PREV/NEXT button, then press ENTER to confirm.

Using your DAB+ CLOCK RADIO

Let's get started

FM Operation

Press and hold MODE/MENU to switch to 'FM' mode. The first time you do this, FM frequency '87.5 MHz' will be displayed on the screen.

Press MODE/MENU, SCAN will display, then press ENTER to start full scan, then the stations will be stored at Preset, and play the first station.

Press PREV / NEXT can scan back or forward by each 0.05mhz.

The radio will display station information when you press ENTER, press multiple times to view all information.

Scan setting

Press MODE/MENU button to step into, then press NEXT to select 'Setting', press ENTER to confirm.

Press NEXT to select 'DISTANT' or 'LOCAL', then press ENTER to confirm.

Audio setting

Press NEXT to select 'Stereo' or 'Mono', then press ENTER to confirm.

Station information for FM Radio

Signal Strength : Displays a signal bar with the strength of the current station.

PTY (Programme Type) : shows the type and description of the program provided by the FM station.

 
Station name : Shows station name

Audio Type : Displays the audio type of the station you are listening to. It will either be stereo or mono.

Time : Shows the hour/min/sec

Date : Shows the date/month/year

Other information 4

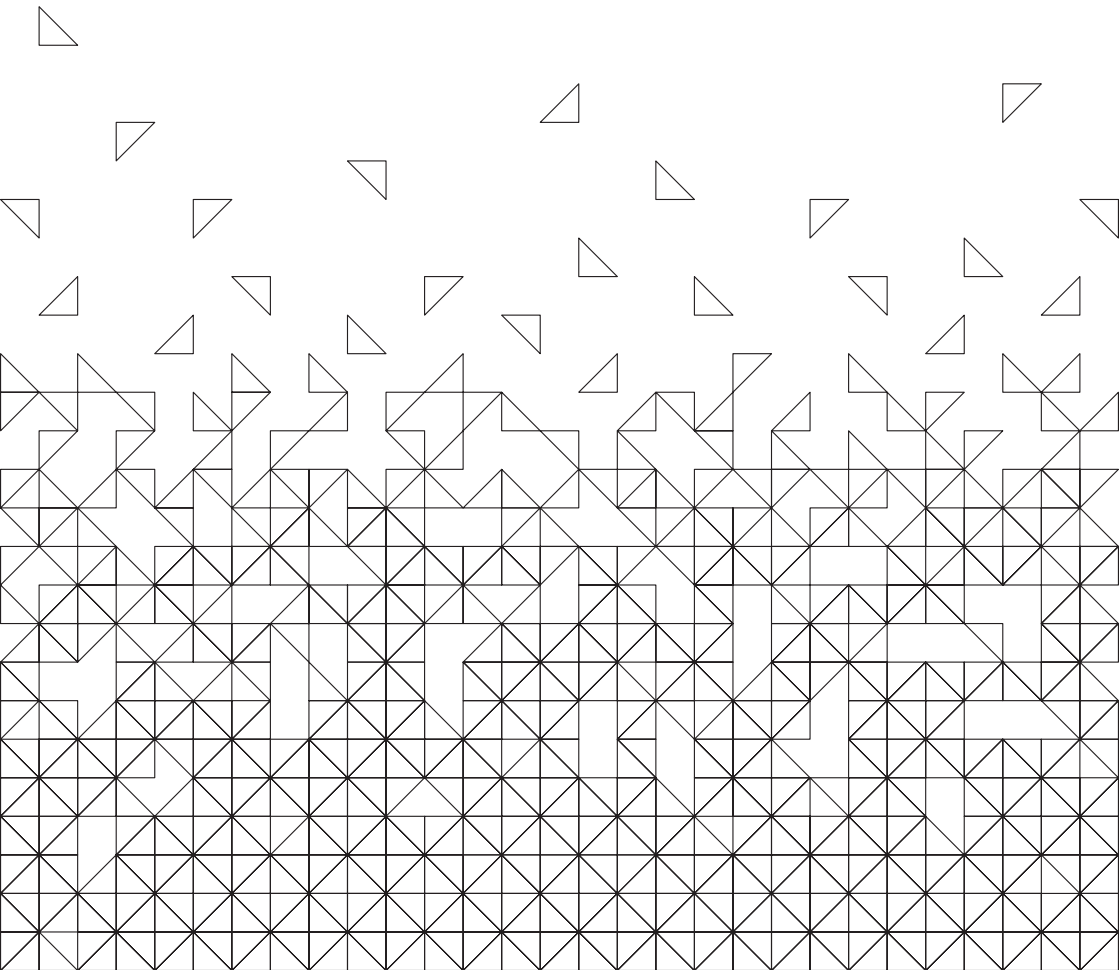

Need technical support? Call our experts on 0345 604 0105
or go online at bush-support.com

Other information

Specifications


Model No.	DS-982
Power Supply	DC 5V $\overline{\text{---}}$ 2A (10W)
Power Consumption	10 W
Speaker Output Power	5W RMS
Working Environment -Temperature	0 ~ 40°C
Net Weight (Approx)	330g
Unit Dimension (Approx)	17.2 x 8 x 7.5 cm
Radio Frequency	FM 87.50 – 108.00 MHz DAB+ 174 - 240 MHz
Adaptor Model No.	AD1500502000UK-Type-C
Input	100-240V ~50/60Hz 0.5A Max
Output	5V 2A (10W)

The audible alarm tone (beep) at maximum volume is approximately 94dB.
When using the radio function as the alarm, maximum volume is approximately 88dB.

SW version:

Press MODE/MENU to access the menu and then press Enter to select System, and press PREV/NEXT to select SW version, press ENTER to check the SW version of your DAB+ Clock radio.

 Product support 5

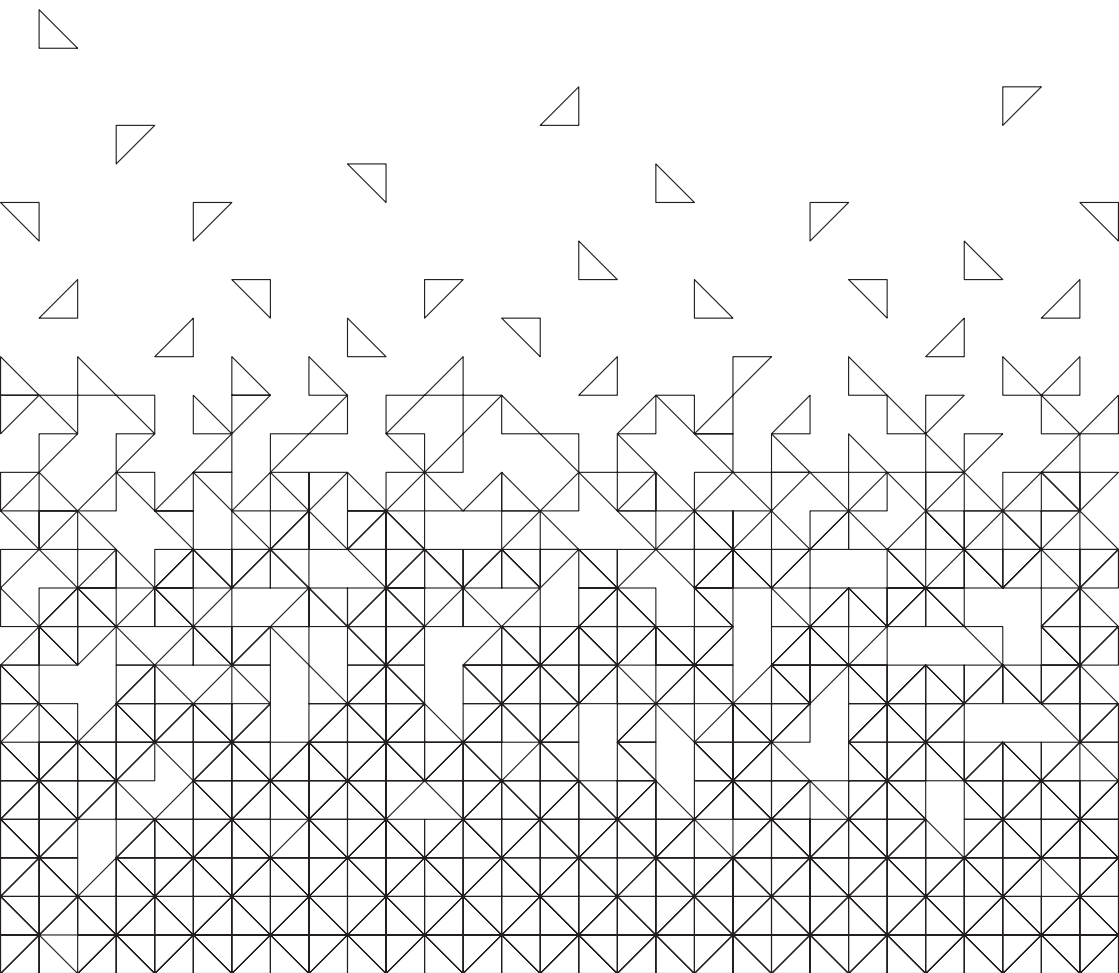

Product support

Help and assistance

If you require any technical guidance or find that your DAB+ Clock Radio is not operating as intended, a simple solution can often be found online at **bush-support.com**

If you still require further assistance, call one of our experts on **0345 604 0105***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.	DS-982	You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.
Serial number		
Date of purchase		This will be shown on your receipt

Local call rates applies*

Line open 8am-7pm Monday to Saturday and 10am-4pm Sunday

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored.

Disposal



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information, please contact the local authority or your retailer where you purchased the product.

This product is intended for use within the UK and Northern Ireland. This equipment complies with the essential requirements for the Radio Equipment Directive 2014/53/EU and the Radio Equipment Regulations 2017.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting bush-support.com



Produced in China for

Argos Limited, London, EC1M 6HA, UK.

Argos(N.I.)Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK



Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

**FREEPHONE*
0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is
 - re-sold or has been damaged by inexperienced repair.
 - Specifications are subject to change without notice.
 - Bush disclaim any liability for loss or damage arising from the breakdown of the product.
 - This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited, London, EC1M 6HA, UK.
Argos(N.I.)Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK

BUSH

Contact:

bush-support.com

argos.co.uk/help/contact-us

Helpline: 0345 604 0105

digitalradio

**Need technical support? Call our experts on 0345 604 0105
or go online at bush-support.com**