


LARGE STEEL CHIMENEA

Assembly Instructions - Please keep for future reference

5021864

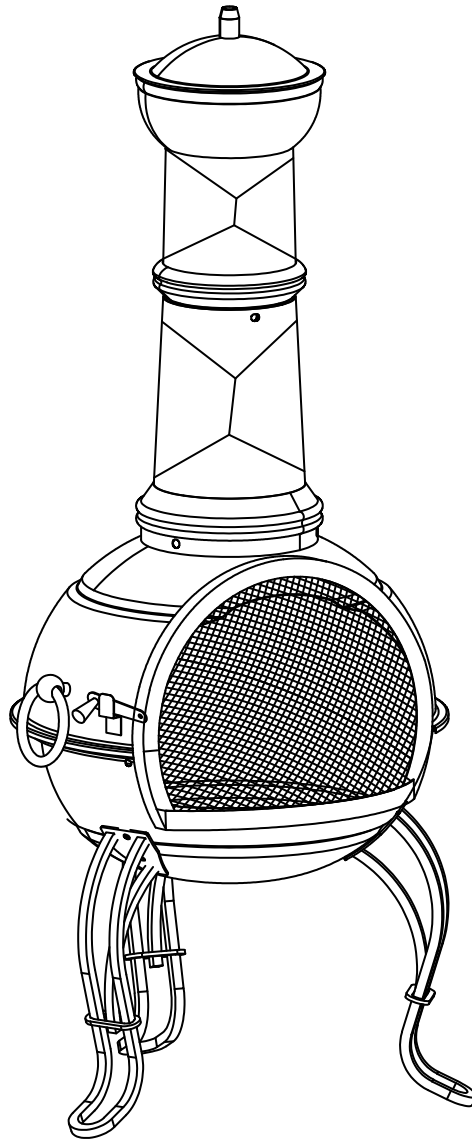

Dimensions

Width - 43 cm
Depth - 43 cm
Height - 112 cm



Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Before you start

- Please read these instructions fully before assembling or using your chimenea. Failure to follow these instructions could result in serious bodily injury, and/or property loss.
- We suggest you spend some time reading this guide before following the simple step-by-step assembly instructions.
- Before you start, make sure you have the correct tools. The tools required for building this chimenea are a cross head screw driver and an adjustable spanner.
- Do not discard any of the packaging until you have checked that you have all parts and fittings listed. When discarding packaging take care and consideration for others and the environment.
- When assembling this chimenea, be aware of the safety of yourself and others.
- Assemble this chimenea on a clean, flat and level surface e.g. the cardboard packaging.
- If after reading these instructions you are unsure of how to safely assemble or use your Chimenea, please refrain from doing so and contact our customer services department for further assistance.



Warnings and safety advice

Important: Please read these instructions fully before starting assembly

- Do not use indoors.
- This chimenea is for outdoor use only, and should NOT be used in a building, garage or any other fully or partially enclosed area.
- Do not use in or near tents.
- Do not use as a refuse incinerator, it is only intended for use with charcoal or timber.
- Avoid using soft wood such as pine or cedar as they are likely to throw sparks.
- Never position on a surface that is liable to be damaged by heat.
- Do not use in high winds.
- Position on a smooth flat surface.
- Do not use the chimenea unless it is completely assembled, and all parts securely fastened.

CARELESS USE OF CHIMENEAS CAUSES FIRE

Do not use in areas which prohibit open fires.

Do not use close to flammable materials, including wooden decking and fences.

Do not use near dry vegetation.

WARNING! This chimenea will become very hot, do not move it during operation.


Do not leave unattended when lit.

Do not use spirit or petrol for lighting or relighting!

Use only firelighter complying to EN1860-3

WARNING! Keep children and pets away.

Read instructions before assembly and use. Keep for future reference.

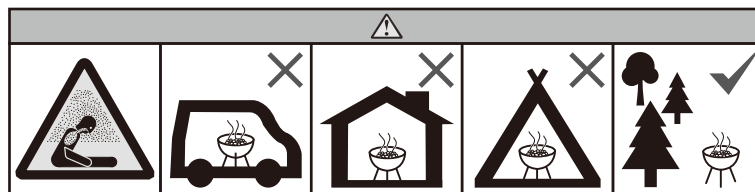

Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon or carbon monoxide poisoning fatality.




Care and use

- This chimenea is for household outdoor use only, not for commercial use.
- Take care when building as exposed edges may be sharp.
- Choose a suitable location before lighting, away from footpaths and high foot traffic areas.
- Allow a minimum of 1 meter from any surfaces or things that may be affected by heat.
- Always used on a flat, firm and level surface.
- Allow to cool completely before moving.
- Ensure chimenea is completely cold before storage.
- Periodically check all bolts are secure and retighten if necessary.

Component - Parts

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**

Please check you have all the parts listed below

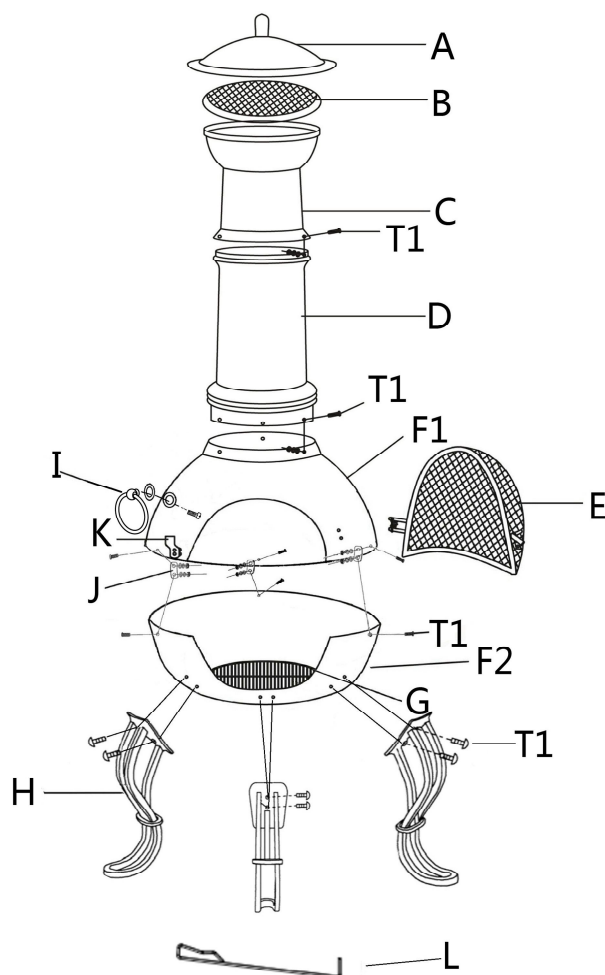

Item.	Parts	Pic	Qty.
A	Rain Lid		1
B	Flue Grill		1
C	Top Flue		1
D	Main Flue		1
E	Mesh Spark Guard Door		1
F1	Top Bowl		1
F2	Bottom Bowl		1
G	Charcoal Grid		1
H	Leg		3
I	Side Handles		2
J	Connection Plate		3
K	Mesh Door Hook		1
L	Poker		1
T1	Bolt M6X15mm		18
U	Washer		18
V	Nut		18
X	Lock Washer		18
Z	Large Washer		2

Ruler- Use this ruler to help correctly identify the screws




The screws length is measured from the head to the point (30mm screw shown).

Assembly Instructions

Step 1

- (1) Assemble Legs (H) to Bottom Bowl (F2) with the six M6 X 15 Bolts (T1), Washers (U), Lock Washers (X) and Nuts (V)
- (2) Assemble Top Bowl (F1) to Bottom Bowl (F2) with three Connection Plate (J), six M6 X 15 Bolts (T1), Washers (U), Lock Washers (X) and Nuts (V).
- (3) Assemble Main Flue (D) to Top Bowl (F1) with three M6 X 15 Bolts (T1), Washers (U), Lock Washers (X) and Nuts (V)
- (4) Assemble Top Flue (C) to Main Flue (D) with three M6 X 15 Bolts (T1), Washers (U), Lock Washers (X) and Nuts (V)."
- (5) Attach Mesh Door Hook (K) to the left of the Top Bowl (F1) with preassembled bolts and nuts, then assemble Mesh Spark Guard Door (E) to the right of Top Bowl (F1) with preassembled Bolts, Washers, Lock Washers and Nuts.
- (6) Assemble the Side Handle (I) to Top Bowl (F1) by screwing the preassembled bolts from inside of the top bowl with one big washer inside and another big washer outside of the bowl into the screw threaded hole of handle .
- (7) Insert the Charcoal Grid (G) into Bottom Bowl (F2).
- (8) Put Flue Grill (B) and Rain Lid (A) on top of Top Flue (C)
- (9) Assembly is now complete - check the chimenea is standing upright and then tighten all fixings.

DO NOT OVER TIGHTEN THE FIXINGS

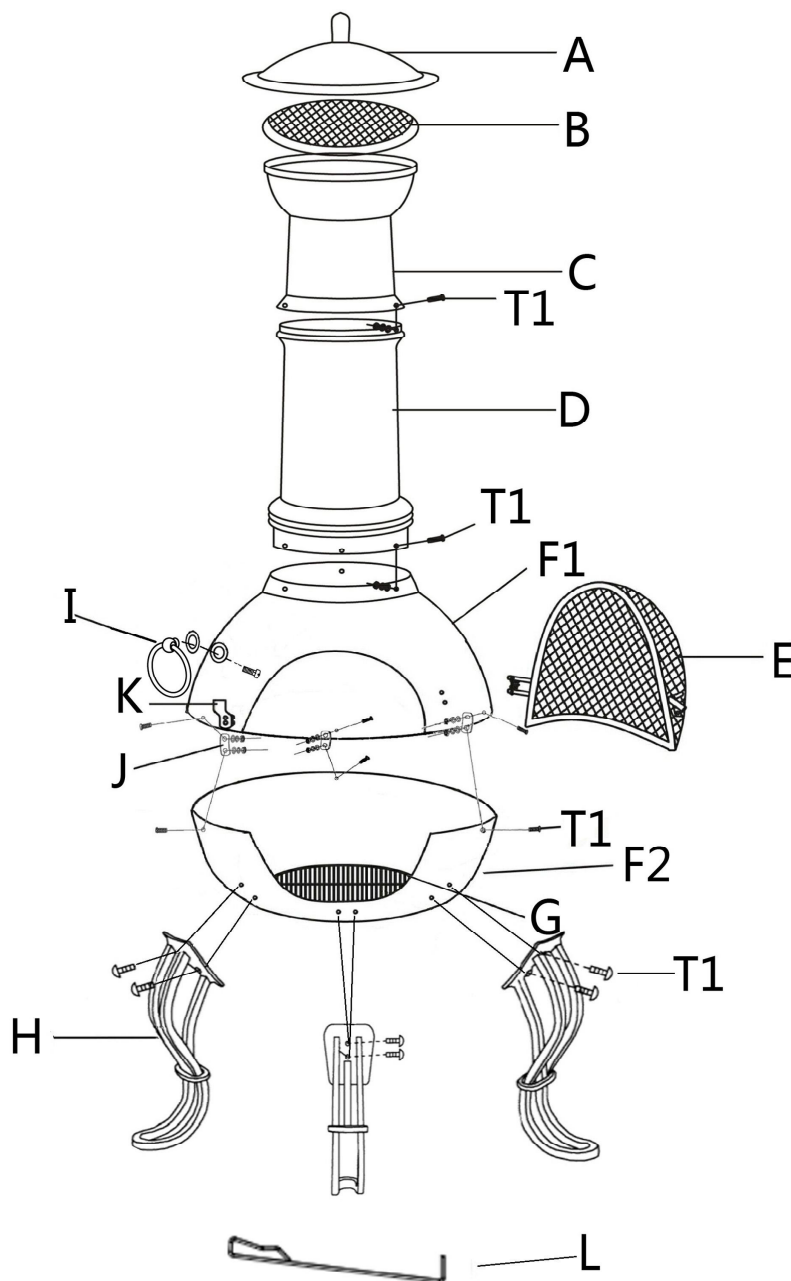

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Made in China for Argos Limited. Sainsbury's Supermarkets Ltd., London, EC1N 2HT, UK. Argos (N.I.) Ltd. and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast. BT8 6FX, UK.