

BUSH

Instruction manual

JT-212

133336641



You'll soon be enjoying your new CD Radio Boombox.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

Help and Guidance

We're here to help you get the most from your CD Radio Boombox. Should you require any guidance, a simple solution can often be found online at:

www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Contents

1 Safety information

Power source.	6
Moisture and water	6
Heat sources and flames	6
CD compartment	7
General safety information	7

2 Getting to know your CD Radio Boombox

Connection	12
Power connection / Inserting batteries (optional)	13
Auxiliary connection	14

3 Using your CD Radio Boombox

Using the CD player	18
Inserting a CD	18
Playing a CD	18
Programmed play mode	19
Remove a CD	20
FM and AM Radio	21

4 Other information

Technical specification.	24
--------------------------	----

 
5 Product support

Troubleshooting	28
Help and assistance	29
Declaration of Conformance	30
Your Bush Guarantee	31

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Safety information

This page is left intentionally blank

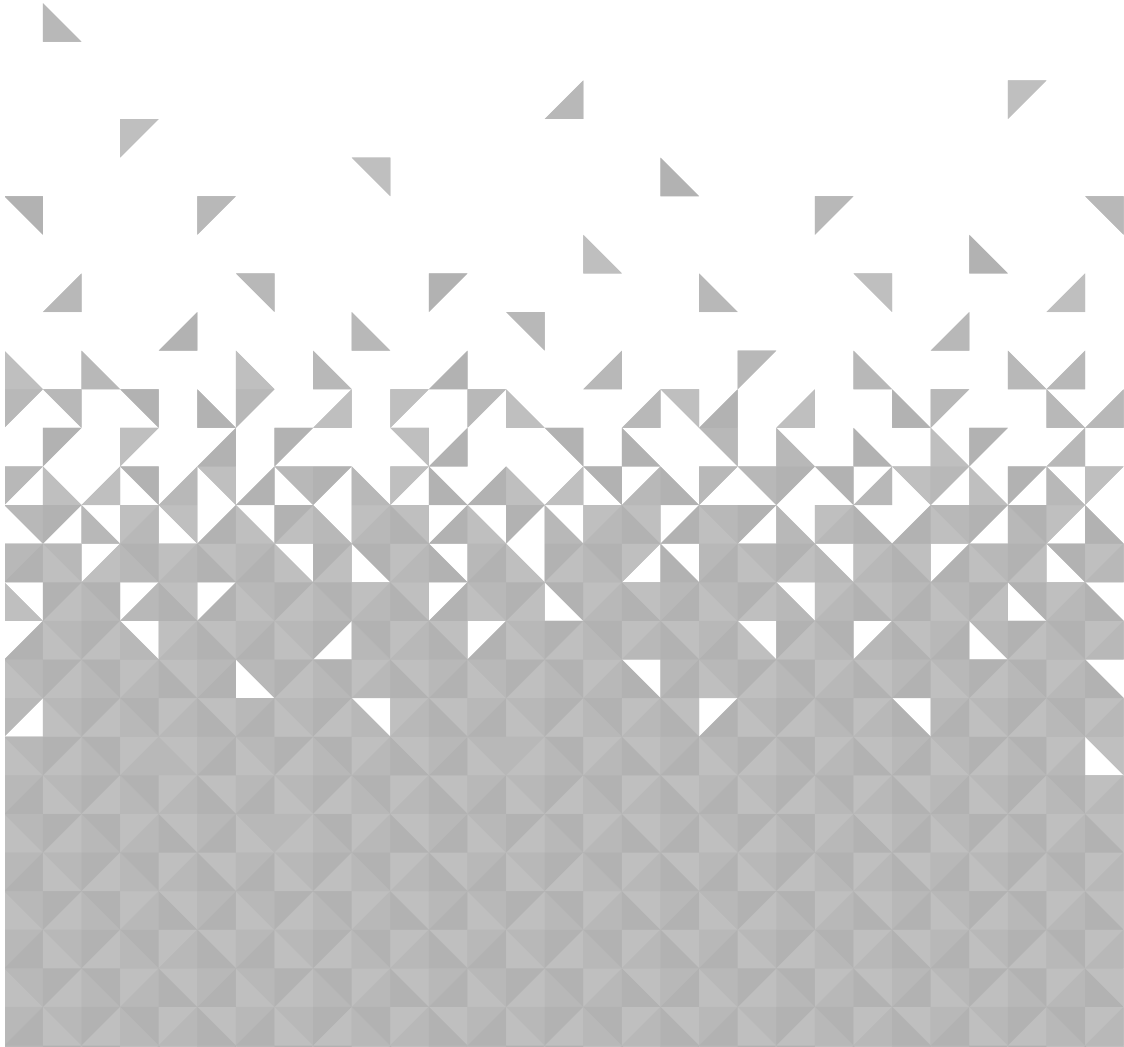



Safety information

Important - Please read these instructions fully before installing or operating

Power source.

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Boombox from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Boombox, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If your Boombox will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the batteries are removed.
- Only use recommended batteries or those of the same equivalent type.
- Do not mix old and new batteries or batteries of different types
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Dispose of old batteries carefully. Never throw batteries in a fire or attempt to open the outer casing. Do not expose them to excessive heat, such as sunshine.
- Batteries are harmful if swallowed, so keep away from young children.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry.
- **Do not** leave this product in low temperatures as moisture can form inside the product, which may damage the circuit board.

Heat sources and flames

- **Do not** leave this product in high temperatures as electronic devices and plastic parts may warp in heat.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

CD compartment



Caution

This is a CLASS-1 laser product. Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure. Do not open the cover and do not attempt to repair it yourself. Refer servicing to qualified personnel.



Caution

Never touch or look into the optical ends within the CD compartment.

- **Do not** place foreign objects into the CD compartment.

General safety information

- Keep the product and all of its parts out of reach of small children.
- This product is not intended for use by persons (including children), with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- **Do not** block or cover slots, holes, or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- **Do not** use your Boombox near emergency/intensive care medical equipment; or if you have a pacemaker fitted or during an electrical storm.
- The underneath of this product may become warm after a long period of use. This is normal.



Caution

 
To avoid possible hearing damage do not listen to this product at high volume levels for long periods of time. Always keep the volume within reasonable limits.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your CD Radio Boombox

2

This page is left intentionally blank

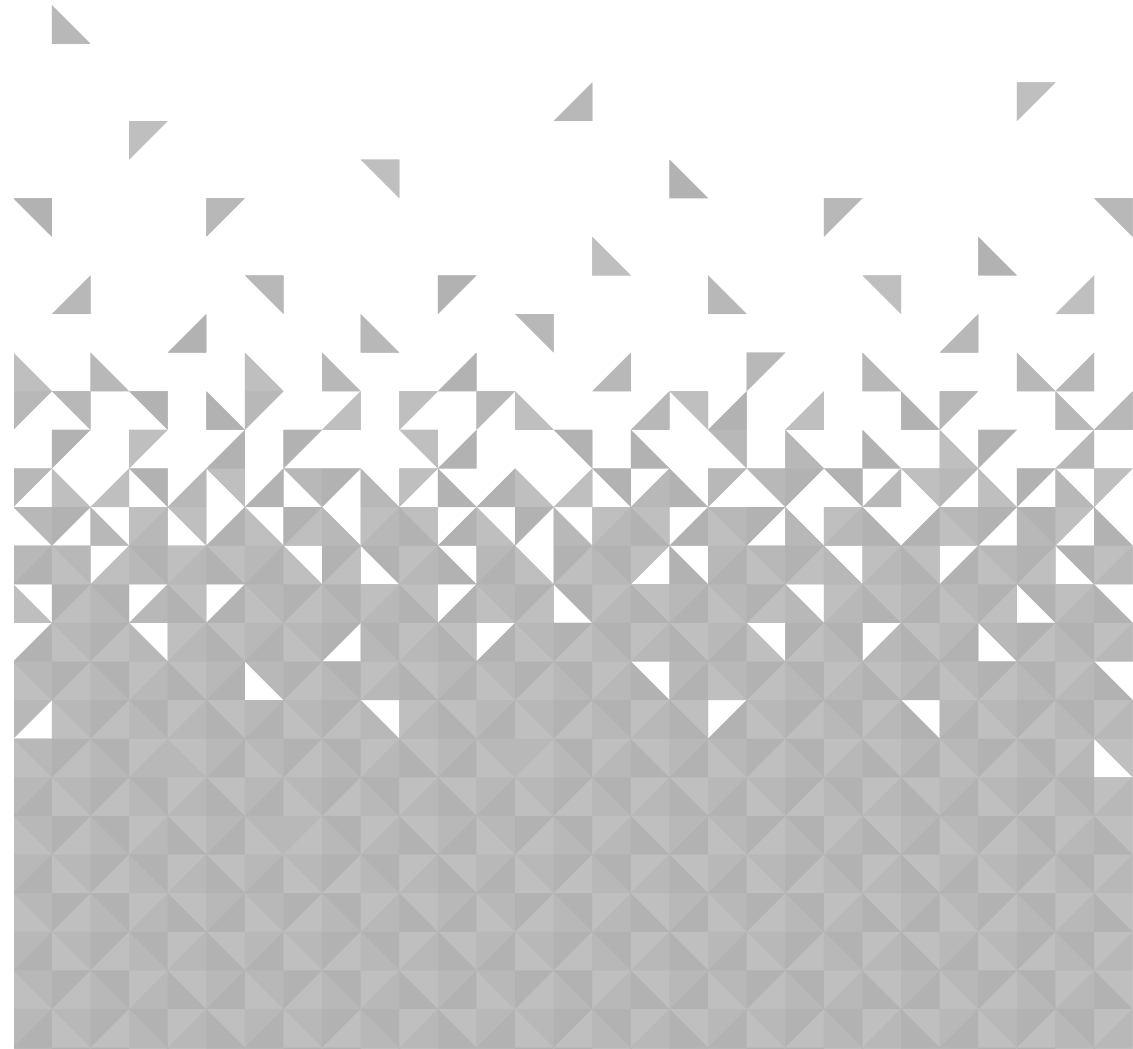

Getting to know your CD Radio Boombox

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Getting to know your CD Radio Boombox

You'll be up and running in no time

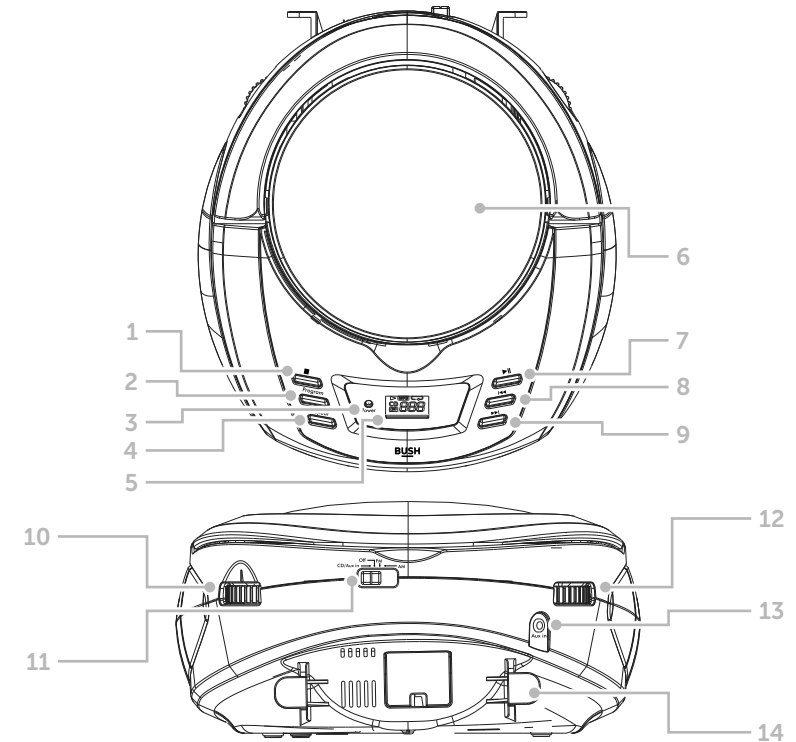 


Fig 1.

- | | |
|-------------------|---|
| 1. Stop. | 9. Skip forward |
| 2. Program | 10. Tuning wheel for the FM/AM radio |
| 3. Power on LED | 11. Power/Mode switch turns on and selects CD/Aux/FM/AM radio modes |
| 4. Repeat | 12. Volume control wheel |
| 5. Display | 13. Aux in socket |
| 6. CD compartment | 14. Cable tidy (when not in use) |
| 7. Play/Pause | |
| 8. Skip back | |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your CD Radio Boombox

You'll be up and running in no time

Connection

Please consider carefully where your boombox will be situated and make sure that it is:

- on a flat and stable surface
- within 1.4 metres of a power socket
- where you can fully extend the wire radio aerial
- at least 1 metre away from other electrical appliances to avoid interference.

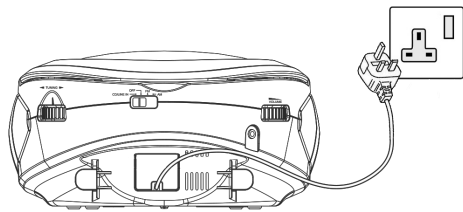 


Fig 2.

1. Unwind the power cable from the back of the boombox.
2. Extend the wire radio aerial. A vertical position is recommended for maximum signal strength.
3. Plug the mains power plug into the mains power wall socket and switch on (Fig 2). The red power LED to the left of the display will light up.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your CD Radio Boombox

You'll be up and running in no time

Power connection / Inserting batteries (optional)

Before inserting the batteries (not included), please ensure that the Boombox is switched off (slide the Power/Mode switch at the back of the Boombox to 'Off') and is unplugged from the mains power supply.

1. Underneath the Boombox, press in the two battery compartment tabs and pull up to remove the battery compartment cover.
2. Insert 6 x 1.5V C-size (also known as LR-14 and UM-2) batteries (Fig 3), making sure to note the '+' and '-' markings and position the batteries the correct way around.
3. Replace the battery compartment cover, making sure that it 'clicks' home.

Note: When the battery power is low, you will notice that the audio quality will be a little distorted and the volume will be quieter. Please switch off the Boombox and replace the batteries.

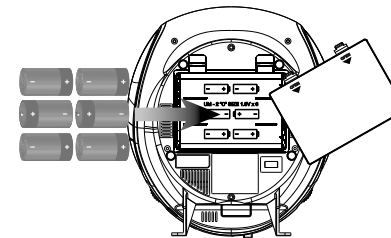 


Fig 3.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Getting to know your CD Radio Boombox

You'll be up and running in no time

Auxiliary connection

Using a 3.5mm audio input connection cable (not included), allows for a quick and easy connection to an external sound source.

1. Connect one end of a 3.5mm audio connection cable to the headphone or auxiliary out socket of your secondary device, connect the other end to the Line in socket on the back of your Boombox.
2. Slide the Power/Mode switch on the back of the Boombox to CD/Aux in.
3. Press the Play button on your external device to start playback through the Boombox speakers.
4. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Boombox.

 
Note: It is recommended that you unplug the audio cable from the Line in socket after you have finished listening to your external device, as the CD player cannot be used whilst an audio cable is connected. Please wait for approximately 15 seconds after unplugging the audio cable, for the Boombox to return to CD mode.

This page is left intentionally blank

Using your CD Radio Boombox

3

This page is left intentionally blank

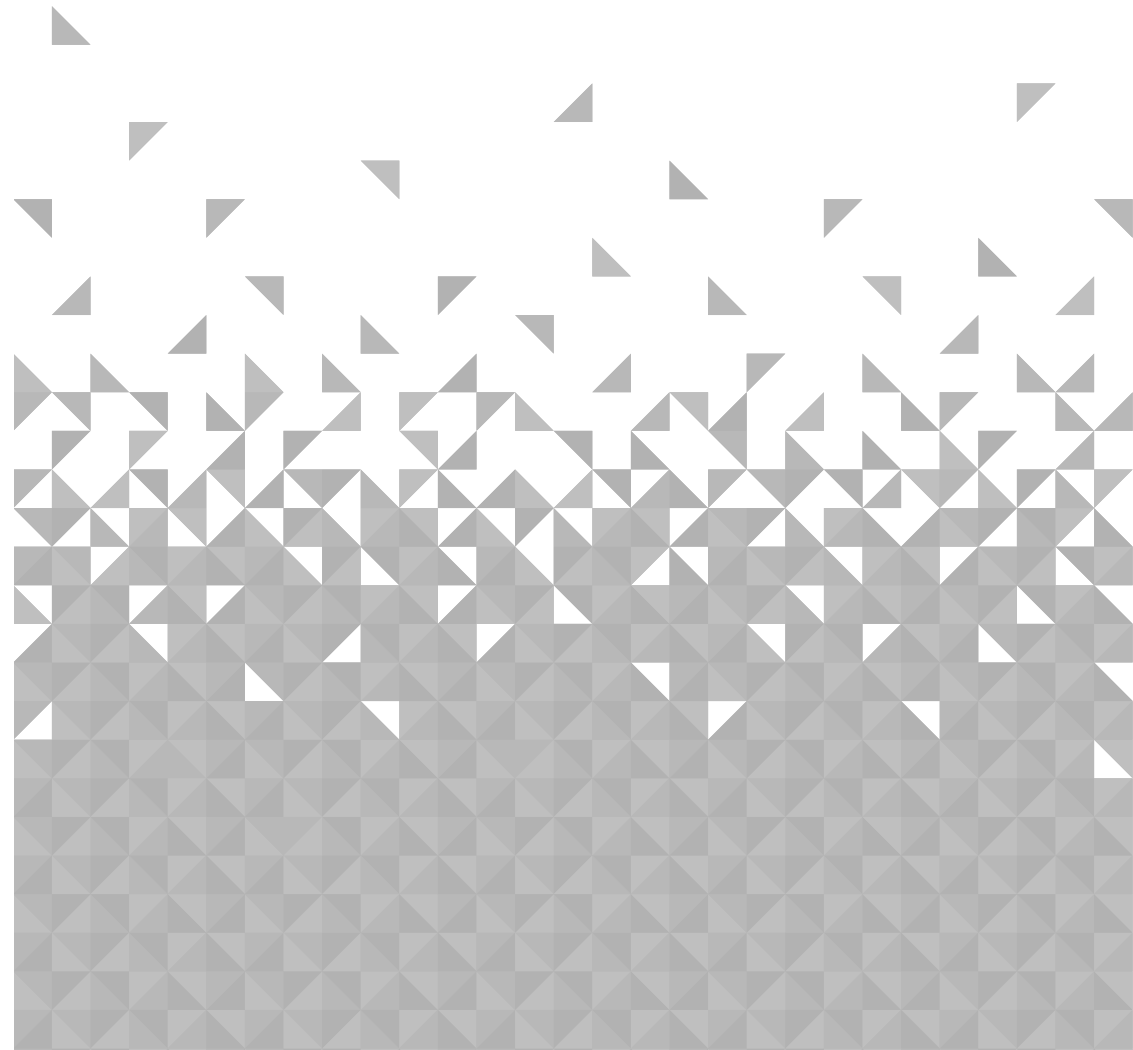

Using your CD Radio Boombox

Let's get started

Using the CD player

Inserting a CD

Check that your Boombox is in CD mode. If you are not already in CD mode, slide the switch on the back of the Boombox to CD/Aux in.

1. Lift up the lid of the CD player on the front edge, where there is a scooped recess.







Note: On first use, please remove the protective card from the CD compartment.

2. Place an audio CD, label side up, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press into place.
3. Close the lid of the CD player. '--' will flash in the display, followed by the number of tracks on the CD e.g. 16.

Playing a CD

Your Boombox will play audio CDs as well as CD-Recordable (CD-R) and CD-Rewritable (CD-RW) CDs. It is not possible to play DVD or computer CDs on your Boombox.







Note: If you stop or pause playing a CD for 15 minutes, your Boombox will switch off automatically.

- Play
Press and release the  button. The first track will begin to play, the  icon and each track number will be displayed.
- Pause
Press and release the  button. The CD will continue to rotate in pause mode and the  icon will flash in the display. Press and release the  button again to continue to play the track/CD.
- Next track:
Press and release the  button.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**






Using your CD Radio Boombox

Let's get started

- Previous track:
Press and release the  button.
- Fast forward within a track:
Press and hold the  button.
- Fast backward within a track:
Press and hold the  button.
- Stop:
Press and release the  button.
- Repeat:
Press and release the Repeat button,  is displayed and the current track will be repeated.
Press the Repeat button again to repeat all of the tracks on the CD.  is displayed.
Continuously press and release the Repeat button to cycle through the available options of Repeat (current track), Repeat all (all the tracks on the CD) or Repeat off.

Programmed play mode


In programmed play mode, you can programme the play order of the tracks on your CD. You can program up to 20 tracks in total.

1. In CD mode, with the CD you wish to programme in the CD compartment and stopped, press and release the Program button. The  icon and '01' for the first track in the programmed play list, will flash in the display.
2. Use the  or  buttons to go to the track number that you would like to program to play first. Press and release the Program button to confirm.
3. '02' will now be displayed and you can use the  or  buttons to select the second track. Continue to select each track as in Step 2 above, up to a total of 20 tracks. Press and release the Program button again to confirm the last track in the programmed play mode list.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Using your CD Radio Boombox

Let's get started

4. Press and release the ►|| button to play the programmed tracks.
5. To exit programmed play mode, press and release the ■ button twice. The  icon in the display will go out.

Remove a CD

1. Lift up the lid of the CD player on the front edge, where there is a scooped recess.
2. Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.
3. Close the lid of the CD player.

Caring for CDs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your CD Radio Boombox

Let's get started

FM and AM Radio

Note: When using the FM or AM radio, the red power LED will light up, but no information will be shown on the product display.

 
1. Please make sure that the wire radio aerial on the back of the Boombox is fully extended. A vertical position is recommended for maximum signal strength.
2. Slide the switch on the back of the Boombox to FM or AM as appropriate.
3. Use the tuning wheel on the right hand side of the Boombox to tune to each radio station.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Other information

4

This page is left intentionally blank

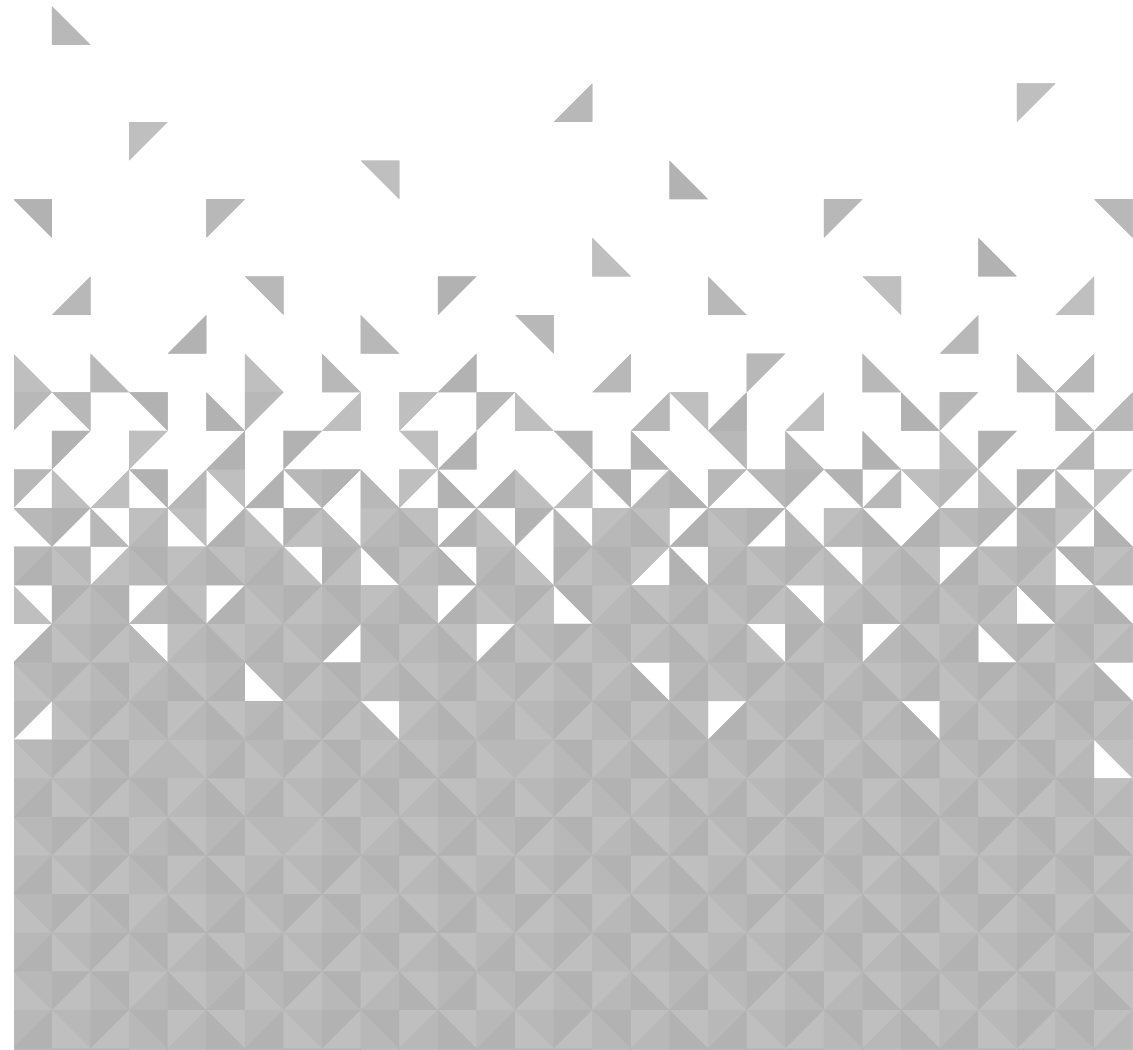

Other information


Helpful technical information

Technical specification.

Power supply	230-240V 50Hz
Batteries (optional, not supplied)	6 x 1.5V C size (LR14)
FM Frequency range	87.5MHz to 108MHz
AM Frequency range	522kHz to 1620kHz

This page is left intentionally blank

 This page is left intentionally blank

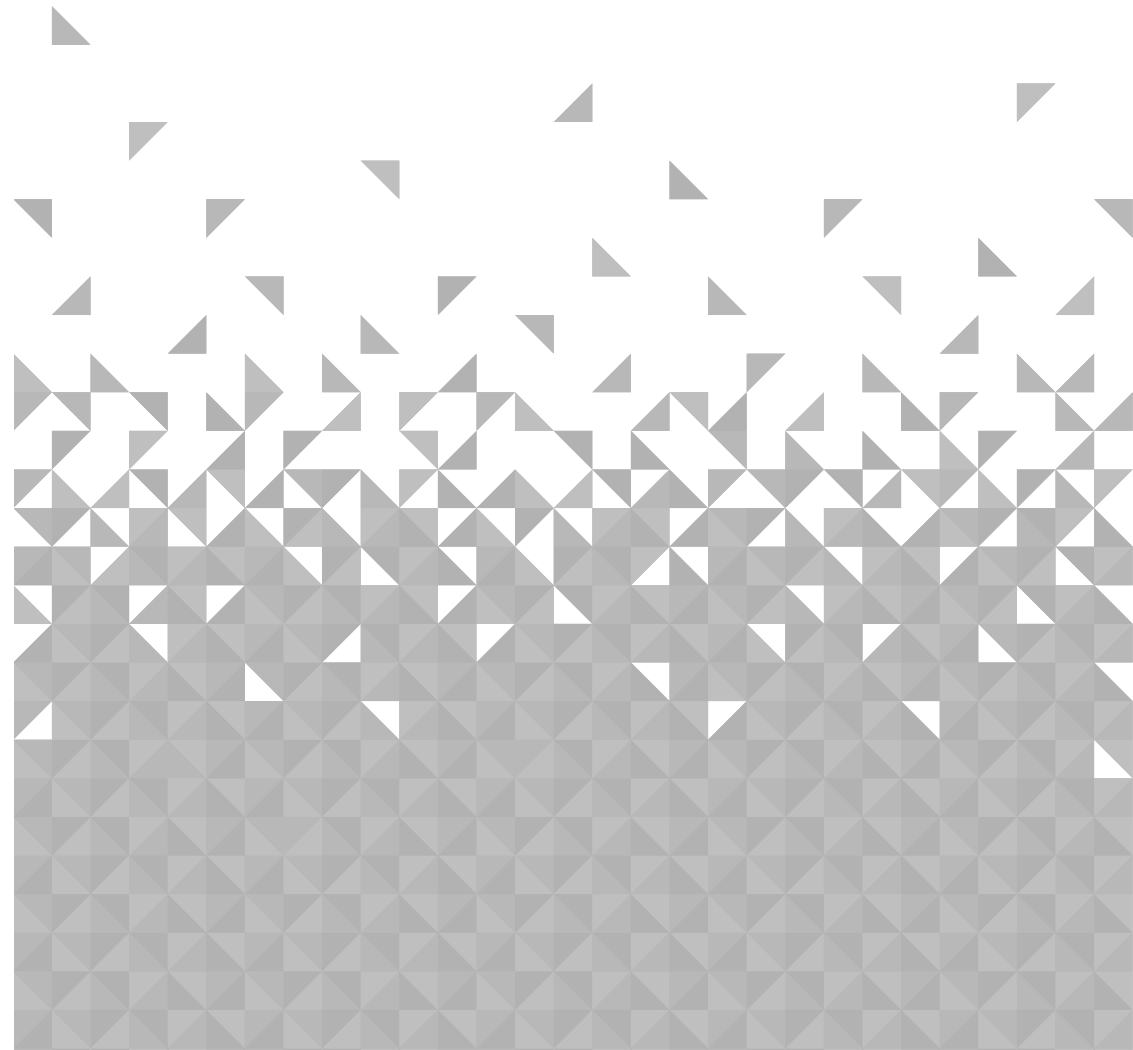

Product support

Help is always at hand

Troubleshooting

CD does not play.

- Check that you are in CD mode. If you are not already in CD mode, slide the switch on the back of the Boombox to CD/Aux in.
- If you have an audio cable plugged into the Line in socket on the Boombox, you must unplug this before you can use the CD player. After unplugging the audio cable, please wait for approximately 15 seconds for the Boombox to return to CD mode.
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Boombox or may skip or not rotate correctly in the CD compartment.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

The function buttons do not respond.

- Check that mains power wall socket is switched on.
- Slide the switch on the back of the Boombox to the mode you would like to use. The red power LED to the left of the display will switch on.
- Check that you are trying to use the function buttons for the mode that you are in.
- If you are using batteries, they may be exhausted and need to be replaced.
- If you are using mains power, unplug the mains power. Leave the Boombox for 3 minutes and then reconnect the power.

Radio reception is poor.

- Check that you have extended the wire radio aerial in a vertical position. .
- Move the tuning wheel slowly to tune to each radio station.
- Check there are no other electrical appliances within 1 metre of your Boombox, which may be causing interference.
- Try moving your Boombox to another location.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your CD Radio Boombox is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.bush-support.com

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Serial number

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Bush enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.



This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this CD Radio Boombox JT-212 / 133336641 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.bush-support.com/>

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

BUSH

Call us now and register your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

To find out how we and Domestic & General Insurance Plc use your data please refer to the guarantee registration material or visit www.bushregistrations.co.uk.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at www.bush-support.com If you still require further assistance, call one of our experts on **0345 600 3021**.

BUSH



Contact:

www.bush-support.com

Helpline: 0345 600 3021