 


正面 规格: 630*145MM



Parts and Controls

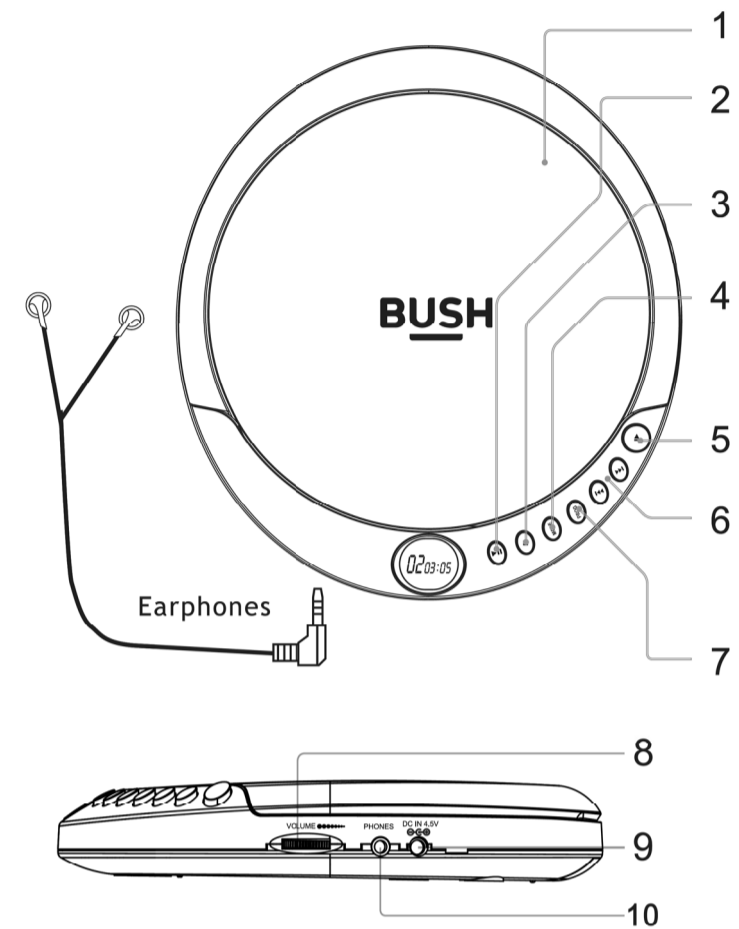

- 1 **CD DOOR**
- 2 **PLAY/PAUSE**
Press to play or pause a loaded CD.
- 3 **STOP/OFF**
Press to stop a CD during play. In stop mode, press to power off the CD player.
- 4 **MODE**
Press to repeat a single track or an entire CD, play tracks in a random order, or play the CD in intro mode.
- 5 **OPEN**
Press to open the CD DOOR.
- 6 **SKIP/SEARCH**
Press to skip between tracks on a loaded CD. Press and hold to search an individual track on a loaded CD.
- 7 **PROG**
Press to program a loaded CD to play tracks in a specified order.
- 8 **VOLUME**
- 9 **DC POWER INPUT**
- 10 **STEREO EARPHONE JACK**

Features

- CD player: CD, CD-R / CD-RW
- 60 second anti-skip protection
- Analog volume control
- LCD display
- Low battery indicator
- DC power: requires 2, AA size, batteries (not included)
- DC power input: requires an AC/DC power adaptor (not included)

 
Includes

- One set of stereo earbuds

Setup


Power

Requires an AC/DC power adaptor (not included).
External adaptor(not included)Output: 4.5V ---, 600mA

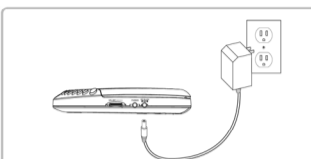

Battery Power

 Requires 2, AA size, batteries (not included)

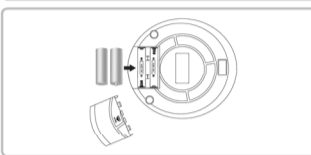

Operations

Note: This unit is not compatible with MP3 CDs.

Loading a CD

1. Press the **OPEN** button to open the CD DOOR.
2. Load a CD into the player, label side up.
3. Close the CD DOOR.

Playing a CD

1. Follow the instructions for Loading a CD.
2. Press the **PLAY/PAUSE** button to begin playing the loaded CD.

Programming a CD

1. Follow the instructions for Loading a CD and Playing a CD.
2. Press the **STOP** button to stop the CD during play.
3. Press the **PROG** button. "00" will begin to blink on the DISPLAY.
4. Press the **SKIP/SEARCH** buttons to select the track you wish to program.
5. Press the **PROG** button to save the selected track to the program.
6. Repeat steps 4 and 5 to program up to 20 tracks to play in the order they are programmed.
7. Press the **PLAY/PAUSE** button to begin playing the programmed tracks.

SPECIFICATIONS

| | |
|---------------------------------|---|
| CD Frequency Response | 20 Hz -- 20 KHz |
| Wow and Flutter | Below measurable limits |
| Sampling Frequency | 44.1 KHz |
| D/A Converter | 16-bit DAC |
| Error Correction Method | Cross - Interleave Reed-Solomon (CIR) |
| Pickup | Optical 1-beam semiconductor laser (780 nm wavelength) |
| Headphone Jack | For headphones with 1/8" (3.5 mm) diameter plug and 16-32 Ω impedance |
| Maximum Output (headphones) | 16 mW + 16 mW (32 Ω) CD/ |
| Compact Disc Format | CD / CD-R / CD-RW |
| Power Source | 2 x UM-3 or "AA" Size Batteries |
| AC Power Adaptor (not included) | Output: DC 4.5V, 600mA |
| Anti skip | 60 sec for CD |

MAINTENANCE AND CARE

To clean the Personal CD player

- Ensure the unit is in standby.
- Wipe the case with a slightly moist, lint-free cloth.
- Do not use any cleaning fluids containing alcohol, ammonia or abrasives.
- Do not spray an aerosol at or near the unit.
- Do not allow liquids to spill or objects to drop into any openings.
- Always use original packaging if it is necessary to transport the unit at any time.

If this unit is used in a dusty environment, it may be necessary to have the unit serviced at your local dealer periodically.

It is not advisable to allow large deposits of dust to accumulate within the unit as it may prevent adequate cooling. Similarly dust deposits which become damp can sometimes lead to electrical problems which may cause severe damage to the delicate electronics within this unit

Handling Discs

To remove the disc from its storage case, press down on the centre of the case and lift the disc out. Hold it carefully by the edges as shown below



Insert the disc into the unit with the label of the disc facing UP. Gently wipe the disc using a soft cloth from the centre to the outer direction to remove dust, fingerprints or any other particles on the disc surface. Never use chemicals, such as record sprays, anti-static

背面 规格: 630*145MM

MAINTENANCE AND CARE

sprays, benzene or thinners to clean the CD. These chemicals can damage the disc surface permanently.

To avoid serious scratches on CD, keep them in the cases after each use. Scratches can cause the laser pick-up skip in the future play. Do not place stickers or write anything on the disc.

IMPORTANT SAFETY INFORMATION



CAUTION CLASS 1 LASER PRODUCT
Use of contents or adjustments of performance of procedures other than those specified herein may result in hazardous radiation exposure

LASER SAFETY

This unit employs a laser, only qualified service personnel should attempt repair.
DANGER: Invisible laser radiation when open and interlock failed or defeated avoid direct exposure to beam
CAUTION: hazardous laser radiation when open and interlock defeated

- | | |
|-------------------------|---------------------------------------|
| Read these instructions | Do not use this apparatus near water. |
| Keep these instructions | Clean only with a slightly damp cloth |
| Heed all warnings | Do not block ventilation openings |
| Follow all instructions | |

Install in accordance with the manufacturer's instructions

Do not install or operate near any heat sources such as radiators, stoves or other apparatus that produce heat

Unplug this apparatus during lightning storms or when unused for long periods of time
Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as the power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped

WARNING: To reduce the risk of fire or electric shock, do not expose this product to rain or moisture
The product must not be exposed to dripping and splashing and no object filled with liquids such as a vase of flowers should be placed on the product
No naked flame sources such as candles should be placed on the product

CAUTION: Changes or modifications not expressly approved by the manufacturers could void the user's authority to operate this device

CAUTION: Usage of controls or adjustments or performance of procedures other than those specified herein may result in hazardous exposure

SAFETY INFORMATION CONTINUED

IMPORTANT: This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Consult the dealer or an experienced radio/TV technician for help.

CONTENTS

 
The carton should contain:

- 1 x Personal CD player
- 1 x Earphone
- 1 x Operating manual

If any items are missing or damaged, contact your nearest Argos store for a replacement. Have your receipt ready when you call. Retain the packaging. If you dispose of it, do so having regards to any recycling regulations in your area.

BATTERY INSTALLATION

1. Slide off the battery cover as shown by the 2 arrows in the diagram (it is hinged so it will not remove completely).
2. Insert 2 x AA batteries as shown. Take care to match the + & - polarity markings.
3. Replace the battery cover.

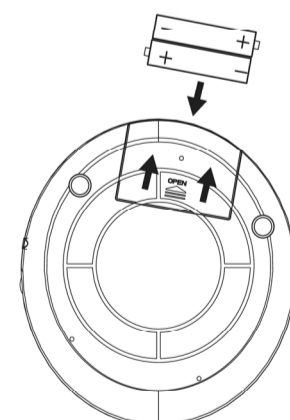

BUSH

Your BUSH Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items
- The product must be correctly installed and operated in accordance with the instructions contained in the manual
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice
- Alba disclaim any liability for loss or damage arising from the breakdown of the product
- This guarantee is in addition to and does not diminish your statutory or legal rights

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW