

# *BaByliss*<sup>®</sup>



TITANIUM PEARLESCENT 235

**Model 2540U**

# *BaByliss*<sup>®</sup>

## **TITANIUM PEARLESCENT 235**

The BaByliss Titanium Pearlescent 235 straightener reaches a top temperature of 235°C for high heat salon performance. The sheer glide Titanium-Ceramic plates, easily slide through the hair giving smoothness and shine. With variable heat settings and fast 30 second heat up, it is ideal for all hair types and gives fast results.

## **FEATURES**

- Up to 235°C salon temperature performance
- Ready to use in 30 seconds
- 1" Titanium-Ceramic plates
- 6 temperature settings: 140°C, 160°C, 180°C, 200°C, 220°C, 235°C
- On/off button
- 2.2m swivel cord
- Safety straightener lock
- Auto shut off
- Heat protection mat
- 5 year guarantee

## **SAFETY CAUTIONS**

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

## **IMPORTANT CHILD SAFETY**

**WARNING!** Polythene bags over a product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

## **WARNING! THIS APPLIANCE GETS HOT!**

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

## **IMPORTANT SAFETY**

**WARNING!** Do not use this appliance near water contained in basins, bathtubs or other vessels.





- Do not use the appliance in the bathroom.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not use the appliance if the lead is damaged. In the event of damage, discontinue use immediately. If the lead is damaged it must be replaced by the manufacturer. Return the appliance to the Customer Care Centre (refer to 'UK After Sales Service' section for further information). No repair must be attempted by the consumer.
- Do not leave the appliance unattended when switched on or plugged in.

- Do not place the appliance on any heat sensitive surface whilst in operation, even when using the heat mat provided.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular the eyes, ears, face and neck.
- In the event of the appliance left switched on, the appliance will automatically shut off after 72 minutes. If you wish to continue using the appliance after this time, simply press the ' ⏻ ' button to turn the power on.
- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use, do not coil the lead around the appliance as this may cause damage. Instead, coil loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

## **INSTRUCTIONS FOR USE**

### **General**

- Comb through dry hair and divide into sections.
- To turn on the appliance, press the  button.
- The appliance will automatically set to 200°C and will blink until the temperature has been reached. Once the temperature has been reached, the indicator will remain solid in colour.
- To select a temperature setting suitable for your hair type, press the 'HIGH' or 'LOW' button.
- Separate a section of hair and place between the plates, close to the roots.
- Close the plates together and hold the hair firmly between the plates.
- Slide down the length of hair, from root to tip.
- Repeat as necessary through the remaining sections.
- Allow the hair to cool before combing through.
- After use, press the button marked  to switch off the appliance and then unplug from the power point.
- For additional heat protection after use, close the appliance and slide the safety switch to lock the plates together.
- Immediately wrap the appliance in the heat mat provided and allow to fully cool down before storing away.

### **HEAT SETTINGS**

There are 6 heat settings available to suit all hair types from 140°C to 235°C.

**LOW heat button:-** When pressing the LOW button, you can switch between the lower heat settings of 140°C, 160°C, 180°C or 200°C only. Keep pressing the button until it moves to the temperature you desire. Should you want to use a temperature higher than 200°C, press the HIGH button. The lower heat settings are suitable for enhancing heat protection on fine, delicate or coloured hair.

**HIGH heat button:-** When pressing the HIGH button, you can switch between 220°C and 235°C only. Keep pressing the HIGH button until it moves to the heat setting you desire. Should you want to select a


temperature lower than 220°C, press the LOW button. The high heat settings are suitable for thick or coarse hair types.

On initial use, start on a lower heat setting and increase temperature until you find a suitable temperature for your hair type.

### **Heat Protection Mat**

The straightener comes with a heat protection mat for use during and after styling. During use do not place this appliance on any heat sensitive surface, even when using the heat mat provided. After use, switch off and unplug the appliance. Immediately wrap the appliance in the heat mat provided and allow to fully cool down before storing away. Continue to keep it out of the reach of children as it will remain hot for several minutes.

### **Auto Shut Off**

This appliance has an automatic shut off feature for added safety. If the appliance is switched on for more than 72 minutes continuously, then it will automatically switch off. To continue using the appliance after this time, simply press the  button to turn the power on.

### **CARE & MAINTENANCE**

To help keep your straightener in the best possible condition follow the steps below:

- Do not wrap the lead around the appliance, instead coil the lead loosely by the side of the appliance.
- Do not use the appliance at a stretch from the power point.
- Always unplug after use.

## **UK GUARANTEE**

This BaByliss appliance is guaranteed for consumer use for 5 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

## **UK AFTER SALES SERVICE**

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or email your enquiry to [ukinfo@conair.com](mailto:ukinfo@conair.com).


The return address is:

Customer Care Centre  
Conair Logistics  
Unit 4, Revolution Park  
Buckshaw Avenue  
Buckshaw Village  
Chorley  
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

## SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


## UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 3A fuse. If this plug is removed from the appliance please ensure it is disposed of safely as a disconnected plug is dangerous if reconnected to the mains. If any other type of plug is used, a 3A fuse must be fitted.