

BaByliss[®]



TITANIUM PEARLESCENT 2100

Model 5168U

BaByliss[®]

TITANIUM PEARLESCENT 2100

The BaByliss Titanium Pearlescent 2100 dryer has a professional long-life AC motor with 2100W to give a powerful airflow for fast drying results. Titanium-Ceramic technology combined with the active ionic conditioning system gives salon smoothness and a frizz-free shiny finish.

FEATURES

- 2100W
- AC motor for fast drying results
- 3 heat / 2 speed settings plus cold shot
- Titanium-Ceramic technology
- Ionic conditioning for a frizz-free finish
- Slim concentrator nozzle
- Removable rear filter for easy cleaning
- Hanging loop for tidy storage
- 2.2m length cord
- 5 year guarantee

SAFETY CAUTIONS

- This appliance should only be used as described within this instruction booklet. Please retain for reference.

IMPORTANT CHILD SAFETY

WARNING! Polythene bags over product or package may be dangerous. To avoid danger of suffocation, keep this wrapper away from babies and children. This bag is not a toy.

WARNING! THIS APPLIANCE GETS HOT!

- **ALWAYS** keep out of reach of children (during and after use and whilst cooling).
- This appliance should not be used, cleaned or maintained by children.
- Always take extra care if used on children or near children.
- Do not use on very young children.

IMPORTANT SAFETY

- **UK Only:** This appliance must not be used in the bathroom. If using the appliance in a bathroom, unplug after use as the proximity of water can be dangerous even if the appliance is switched off. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

WARNING! Do not use this appliance near water contained in basins, bathtubs or other vessels.

- Do not use this appliance in the bathroom.
- Do not immerse the appliance into water or other liquids.
- Never look directly into the barrel of the hairdryer when it is switched on.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged or if the appliance has been dropped. In the event of the appliance being damaged, discontinue use



immediately and and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).

- Do not use the appliance if the lead is damaged. In the event of the appliance being damaged, discontinue use immediately and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Do not leave the appliance unattended when switched on or plugged in.
- This unit is equipped with a safety thermostat. In the event of overheating the appliance will either stop automatically or run hot and cold intermittently. Should this happen, switch the dryer to the "0" position, unplug and allow to cool for 10 minutes. Before use, ensure the rear filter is clear of hair and other debris. Plug in and switch on. If the appliance continues to overheat discontinue use immediately, switch off and unplug and contact the Conair Customer Care Line (refer to 'UK After Sales Service' section for further information).
- Take care that the air vents do not become blocked when in use. Ensure the rear filter is clear of hair and other debris before use.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- Take care to avoid the hot surface of the appliance coming into direct contact with the skin, in particular

the ears, eyes, face and neck.

- This appliance should not be used by adults whose reduced physical, sensory or mental capabilities, or whose lack of experience and knowledge, might cause a hazard, unless they have been correctly instructed to understand the safe use and hazards involved and are adequately supervised.
- Allow appliance to cool before storing away.
- After use do not coil the lead around the appliance as this may cause damage to the lead. Instead coil the lead loosely by the side of the appliance.
- This appliance complies with the requirements of Directives 2004/108/EC (Electromagnetic Compatibility) and 2006/95/EC (Electrical Safety of Domestic Appliances).

Ionic Technology

Many aspects of modern living, including air conditioning contact with man-made fibres and air pollution contribute to a build-up of static electricity in the hair. Even brushing and towel drying the hair can increase these levels, causing the surface of the cuticle to become rough. Consequently, hair may have a dull appearance. High levels of static charge cause hair to become “fly-away” and difficult to style. The ion generator produces a stream of negative ions which act to neutralise the static charge, smoothing the cuticle for shiny, smooth and manageable hair.

INSTRUCTIONS FOR USE

General

- Towel dry and detangle hair.
- Plug the hairdryer into a suitable mains socket.
- Select the required heat and speed settings.
- After use, switch off and unplug the hairdryer.
- Allow to cool before storing away.

IMPORTANT! Always keep the rear of the hairdryer away from the hair during use, to prevent it being drawn in through the rear air filter.

Heat and Speed Settings

There are 3 heat and 2 speed settings plus the cold shot button. Use the higher heat and higher speed settings for initial drying and use the lower heat and lower speed settings for styling and scrunch drying as the hair begins to dry.

Cold Shot Button

Use the cold shot button on warm hair to rapidly cool the hair and set the style in place for a long-lasting effect.

Slim Concentrator Nozzle

Use the concentrator nozzle to direct the airflow where you want it and to make styling easier. When using the concentrator nozzle use a low heat and speed setting.

STYLING TIPS

Body and Volume

To help create extra body and volume in the hair, lean forward so the head is upside down when drying. Direct the airflow towards the roots for maximum lift. When the hair is dry, brush back into required style.

Straightening

To create a smooth straight look, first divide the hair into sections. Attach the concentrator nozzle, then using a brush, hold the hair taut and roll the ends under slightly whilst drying.

Making Waves

To create tousled natural-looking waves, position the head upside down. Using the dryer without the nozzle, grasp the hair at the roots and scrunch between fingertips whilst drying. When the hair is dry, style into position for a casual, natural look.

CLEANING & MAINTENANCE

To keep your dryer in the best possible condition, please follow the steps below:

General

- Do not wrap the lead around the dryer, instead coil the lead loosely by the side of the dryer.
- Do not use the dryer at a stretch from the power point.
- Always unplug after use.

Cleaning the Filter

- Ensure the appliance is switched off, unplugged and cool.
- Holding the handle of the appliance firmly, twist the rear filter to the left to remove.
- Using a soft brush, clean any hair and other debris from the filter.
- Replace the rear filter by aligning the grooves and turning to the right until the filter clicks back in to place.
- To clean the outside of the dryer, wipe with a damp cloth. Make sure no water enters the dryer and it is completely dry before use.

UK GUARANTEE

This BaByliss appliance is guaranteed for consumer use for 5 years.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repairs by unauthorised persons. If the appliance does not perform satisfactorily due to defects in materials or manufacture, it will be repaired or replaced through Conair UK After Sales Service. The Conair Group Ltd reserves the right to amend terms and specifications without prior notice.

This guarantee in no way affects your statutory rights.

UK AFTER SALES SERVICE

For further advice on using the appliance or should you need to return your product, please contact the Conair Customer Care Line on 0370 5 133191 (09:00 to 17:00 Monday to Friday) or e-mail your enquiry to ukinfo@conair.com.


The return address is:

Customer Care Centre
Conair Logistics
Unit 4, Revolution Park
Buckshaw Avenue
Buckshaw Village
Chorley
PR7 7DW

Please enclose your returns number, name and address details, together with a copy of proof of purchase and details of the fault.

SAFE DISPOSAL



The  symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed to an appropriate collection point for the recycling of Electrical and Electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.


UK WIRING INSTRUCTIONS

The wires in the mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

As the colours of the wire in the mains lead of this appliance may not correspond with the colour marking identifying the terminals on your plug, proceed as follows:

- The wire which is coloured BLUE must be connected to the terminal which is marked with the letter N.
- The wire which is coloured BROWN must be connected to the terminal which is marked with the letter L.
- Neither the BLUE nor BROWN wires should be connected to the terminal which is marked with the letter E or the  symbol.

This appliance is supplied fitted with a BS1363 mains plug and a BS1362 13A fuse. If this plug is removed please ensure it is disposed of safely as a disconnected plug is dangerous if connected to the mains. If any other type of plug is used, a 13A fuse must be fitted.

