



# Instruction manual

Tower Speaker HT-700



You'll soon be enjoying your new Tower Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Tower Speaker. Should you require any guidance, a simple solution can often be found online at:

**[www.argos-support.co.uk](http://www.argos-support.co.uk)**

If you still require further assistance, call one of our experts on **0345 600 3021**.

## Contents

### 1 Safety information

Safety information 7

### 2 Getting to know your Tower Speaker

Ready? Let's begin 12

Power connection 14

Remote control 14

Initial set-up 14

Connect to a Bluetooth device 14

Change the mode 15

Adjusting the volume 16

Mute 16

Adjusting the Tone 16

Change the EQ setting 16

### 3 Using your Tower Speaker

Bluetooth mode 20

Listening to Music/Audio using Bluetooth 20

Aux in mode 21

### 4 Other information

Technical specification 24

### 5 Product support

Troubleshooting 28

Help and assistance 29

Disposal 30

Guarantee 31

section of these instructions, or online at **[www.argos-support.co.uk](http://www.argos-support.co.uk)** If you still require further assistance, call one of our experts on **0345 600 3021**

# Safety information

1

This page is left intentionally blank

## Safety information

**Important** - Please read these instructions fully before installing or operating

### Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Tower Speaker from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Tower Speaker, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Tower Speaker will not be used for a long period of time, make sure that the mains power is unplugged and battery is removed from the remote control battery compartment.
- Only use recommended batteries or those of the same or equivalent type.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

### Moisture and water

- Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

### Heat sources and flames

Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.

## Safety information

**Important** - Please read these instructions fully before installing or operating

### Ventilation

Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.

### Positioning the Tower Speaker

It is important that you consider carefully in advance where your Tower Speaker will be situated and make sure that it is:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead is not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- Never place your Tower Speaker directly onto antique or polished surfaces.

### Caution

To avoid possible hearing damage, do not listen to this Tower Speaker at high volume levels for long periods of time. Always keep the volume within reasonable limits.

### General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.



## Safety information

**Important** - Please read these instructions fully before installing or operating


- Do not attempt to open the product. This product does not contain any user serviceable parts. Unauthorised handling of the device may damage it and will void your warranty.
- Do not use your Tower Speaker near emergency/intensive care medical equipment; if you have a pacemaker fitted or during an electrical storm.

This page is left intentionally blank

## Getting to know your Tower Speaker

2

This page is left intentionally blank

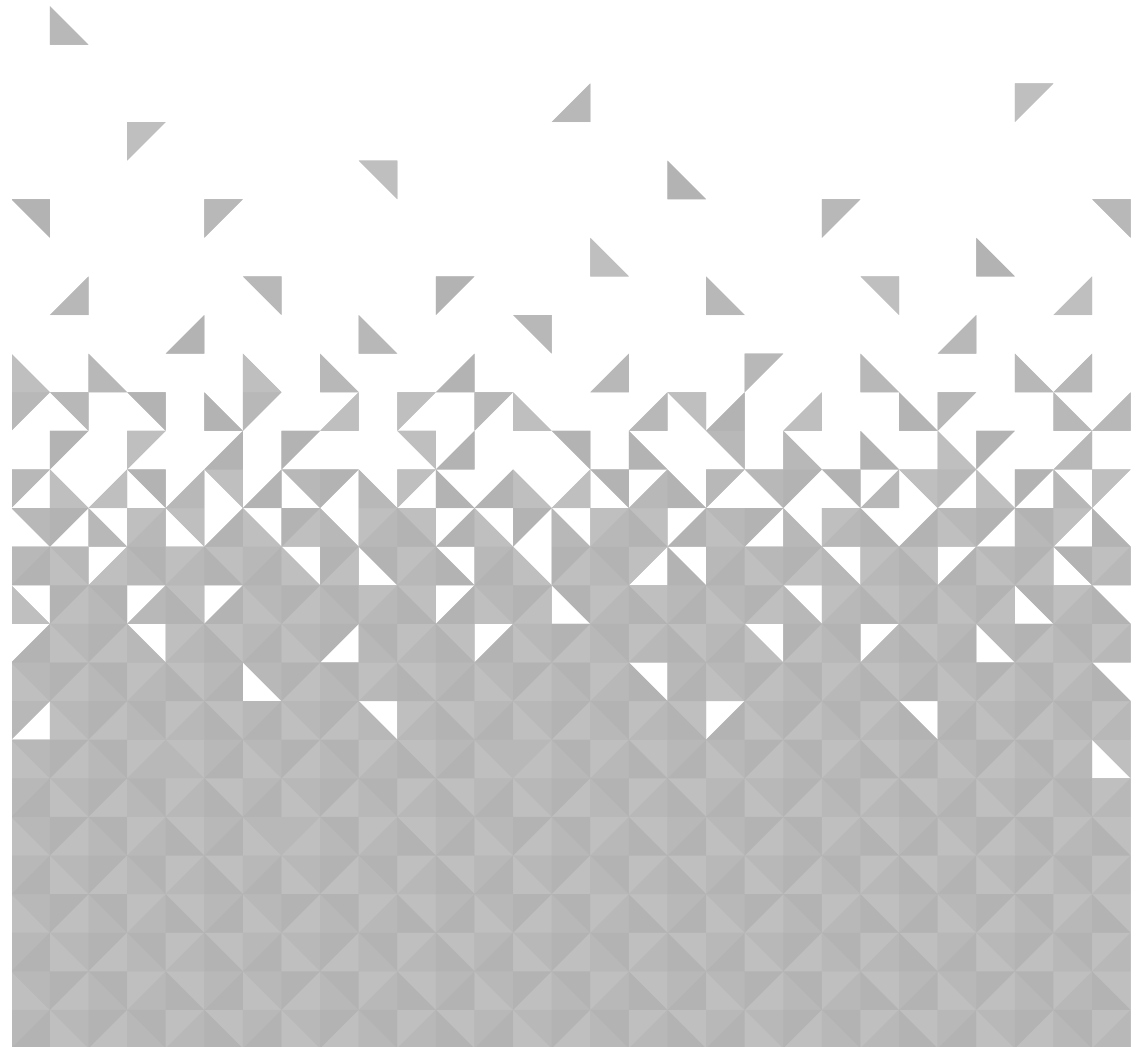

## Getting to know your Tower Speaker

You'll be up and running in no time

### Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

## Getting to know your Tower Speaker

You'll be up and running in no time

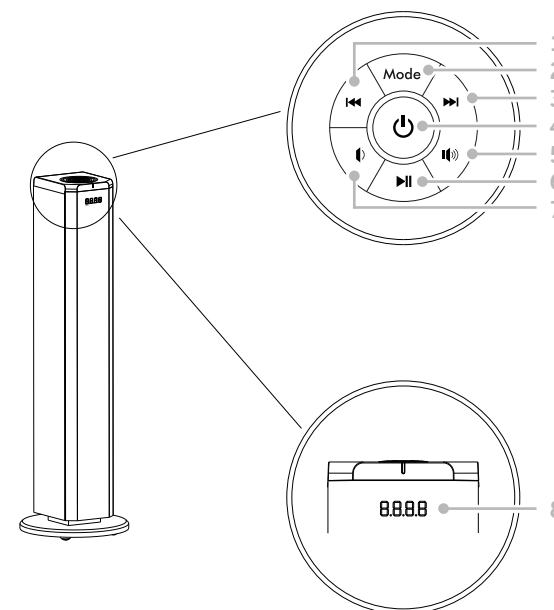


Fig 1.

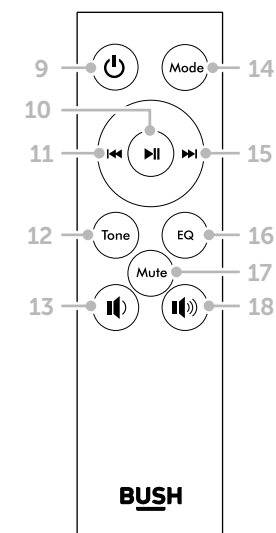


Fig 2.

### Tower Speaker

1. Skip back
2. Change the mode (Bluetooth/Aux-in)
3. Skip forward
4. Power on/Standby
5. Volume up
6. Play/Pause
7. Volume down
8. Display

### Remote Control

9. Power on/Standby
10. Play/Pause
11. Skip back
12. Change the tone
13. Volume down
14. Change the mode (Bluetooth/Aux-in)
15. Skip forward
16. Change the EQ setting
17. Mute/Unmute the sound
18. Volume up

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021

## Getting to know your Tower Speaker

You'll be up and running in no time

### Power connection


1. Connect the mains power lead into the socket on the back of the Tower Speaker.
2. Plug the power adaptor into the mains power wall socket and switch on.
3. Press and release the On/Off power switch on the back of the Tower Speaker. The first time you use your product it will power on in Bluetooth mode.
4. The display will light up and the blue LED in the middle of the top front edge will begin to flash whilst your Tower Speaker begins to search for Bluetooth devices.

### Remote control

1. Pull out the safety strip on the remote control to activate the battery.

### Initial set-up

In Standby mode:

1. Press and release the  button on the Tower Speaker or on the Remote control. The first time you switch on your product, it will power up in Bluetooth mode. '-bt-' will be displayed and the blue LED in the middle of the top front edge will begin to flash whilst your Tower Speaker begins to search for Bluetooth devices.

### Connect to a Bluetooth device

In Bluetooth (BT) Mode:

1. When the blue LED on the top front edge of the Tower Speaker is flashing,
2. On the device that you would like to connect to your Tower Speaker via Bluetooth (e.g. iPhone/ iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

---

**Note:** If necessary, refer to the instructions for your device to add or set up Bluetooth.

---

3. Select to 'Add new device', if necessary.

## Getting to know your Tower Speaker

You'll be up and running in no time

---

**Note:** Some products will automatically search for a new device and so the 'Add new device' option is not available.

---

4. When found, your Tower Speaker will be displayed as 'Bush Tower'. Select the device name to begin pairing.

---

**Note:** If your device requests a password, please enter '0000' to complete the device pairing.

---

5. When pairing is complete you will hear an audible alert and the blue LED will stop flashing and will remain constantly on.
6. Now that you have paired your device with the Tower Speaker, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Tower Speaker unless you decide to disconnect or 'unpair' it.

---

**Note:** If your Tower Speaker becomes disconnected from the other Bluetooth device at any time, the blue LED will begin to flash as it searches for a Bluetooth connection, select 'Bush Tower' on the device you wish to connect to, to reconnect.

---

### Change the mode

On the Tower Speaker or on the Remote control:

- Press and release the Mode button to change between Bluetooth and Aux-in modes. Please check the display, which will confirm the mode.

---

**Note:** You must connect an Aux-in cable (not supplied) to the Aux-in socket on the back of the product, to use Aux-in mode.

---

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.







# Getting to know your Tower Speaker

You'll be up and running in no time

## Adjusting the volume

On the Tower Speaker or on the Remote control:

- Press and release the  button to increase the volume in steps.
- Press and hold the  button to progressively increase the volume.
- Press and release the  button to decrease the volume in steps.
- Press and hold the  button to progressively decrease the volume.

Check the display, which will confirm the volume level. 32 is the maximum volume level.

## Mute

On the Remote control:

- Press and release the Mute button to mute the volume 'U-00' will be displayed.
- Press and release the Mute button to turn the sound on again

This page is left intentionally blank

## Adjusting the Tone

On the Remote control:

- Press and release the Tone button to change the tone

## Change the EQ setting

On the Remote control:

- Press and release the EQ button to change the EQ setting, there are 5 settings available. Check the display, which will confirm the setting.

## Using your Tower Speaker

3

This page is left intentionally blank

# Using your Tower Speaker

Let's get started

## Bluetooth mode

Check that your Tower Speaker is in Bluetooth mode. If you are not already in Bluetooth mode, press and release the Mode button on the Tower Speaker or on the Remote control until you are in Bluetooth mode (check the display).

## Listening to Music/Audio using Bluetooth






In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Tower Speaker. Adjust the volume on the connected device and/or your Tower Speaker.

**Note:** If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select Bush Tower to reconnect.



2. You can use the controls on your paired Bluetooth device as well as those on your Tower Speaker and Remote control.


Controls available on your Tower Speaker and Remote control:

- Volume:
  - Press and release the  button to increase the volume in steps
  - Press and hold the  button to progressively increase the volume
  - Press and release the  button to decrease the volume in steps
  - Press and hold the  button to progressively decrease the volume.
  - Check the display, which will confirm the volume level. 32 is the maximum volume level.
- Play/Pause:
  - Press and release the  button to play/pause.

# Using your Tower Speaker

Let's get started

- Skip back:
  - Press and release  to skip back to the previous track.
- Skip forward:
  - Press and release  to skip forward to the next track.

**Note:** If you do not use your Tower Speaker for approximately 20 minutes and no audio signal is received, it will automatically go to Standby mode. Press and release the  button on the Tower Speaker or on the Remote control to switch the Tower Speaker back on.

## Aux in mode

Check that your Tower Speaker is in Aux in mode. If you are not already in Aux in mode, press and release the Mode button on the Tower Speaker or on the Remote control until you are in Aux in mode (check the display).

1. Connect one end of a 3.5mm audio cable (not supplied) to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket on the back and at the top of your Tower Speaker.
2. Press the play button on your external device to start playback through the Tower Speaker.
3. To gain optimal volume levels, adjust the volume level on both the secondary device and on the Tower Speaker.

**Note:** It is recommended that you unplug the audio cable from the Aux in socket on the back of the Tower Speaker, after you have finished listening to your external secondary device.

## Other information

4

This page is left intentionally blank

## Other information

Helpful technical information

### Technical specification

|                    |   |
|--------------------|---|
| Power supply:      | Input: 220-240V~, AC 50-60Hz                        |
| Battery (Remote)   | 1 x CR2032 3V                                       |
| Audio output:      | 2 x 15W RMS   |
| Aux in:            | 3.5mm socket  |
| Bluetooth:         | 2.402GHz-2.480GHz                                   |
| Bluetooth version: | 2.1 + EDR   |
| Pairing name:      | Bush Tower  |
| Profiles           | HFPV1.5, A2DPV1.2, AVRCPV1.4, HSP1.2, GAVDP1.2, IOP |

This page is left intentionally blank

**Product support**

5

This page is left intentionally blank

## Product support

Help is always at hand

### Troubleshooting

 
#### No sound / power:

- Adjust the volume.
- Check that the mains power wall socket is switched on and that your Tower Speaker is not in Standby mode.
- If you are using a Bluetooth connected device, increase the volume on the secondary device and on your Tower Speaker.

#### Unable to pair with a Bluetooth device:

- Check that you are in Bluetooth mode.
- Ensure that you are within range of the Tower Speaker for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Tower Speaker and Bluetooth device away from other Bluetooth devices/ electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

#### The function buttons do not respond:

- Check that the mains power lead is connected at the back of your Tower Speaker and the mains power wall socket is switched on. Check that the power switch on the back of your Tower Speaker is switched on. Press and release the  button on the Tower Speaker or on the Remote control.
- If you are trying to use the Remote control, the battery may be exhausted and need to be replaced. Please use a new, good quality CR2032 3V battery.
- Unplug the mains power. Leave the Tower Speaker for 3 minutes and then reconnect the power.

## Product support

Help is always at hand

### Help and assistance

If you require any technical guidance or find that your Tower Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies\*

**Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.**

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

## Product support

Help is always at hand

### Disposal



- This product should not be treated as normal household waste and it should be recycled. Please take it to your nearest collection facility or for further details contact your local council or visit [www.recycle-more.co.uk](http://www.recycle-more.co.uk)
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing

## Product support

Help is always at hand

# BUSH

### Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

### Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

#### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

### Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# BUSH

Contact:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021

 DAB Digital  
**Radio**