

5FT PROMO TREE GREEN

Assembly Instruction – Please keep for future reference

5641213



Dimensions

Width - 86cm

Depth - 86cm

Height - 150cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456400800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- **PRODUCT IS INTENDED FOR INDOOR USE ONLY**
- This product is not designed for permanent or long-term use.
- Do not use this product for any other purpose than its intended use.
- Do not allow the product near/ in contact with a source of heat or flame, e.g. gas or electric heaters, fireplaces, candles or other similar heat sources.
- Unplug the light chain (if any) when leaving the house, when retiring for the night, or if unattended.
- This product is for decoration use only, not to be used by children as a toy. Watch over them when near the tree.
- Ensure the tree is stable, place on a firm and level surface, away from where it may be knocked. Do not overload with excessively heavy decorations.
- Artificial trees are made from small fibres and have small parts which may pose a choking hazard detached from the branches. Keep out of reach of small children and pets.
- Before using or re-using, inspect the product carefully. Dispose of the products if any parts are damaged and have sharp points and edges.

Installation - Selecting a Location

- Decide on an appropriate location for your product; make sure that you have plenty of space, a level surface and a clean dry area for assembly and location. Always try to assemble the product as close as possible to the intended location.

Components

Please check you have all parts listed below

- 3 x tree sections
- 4 x plastic legs

No tools required

Assembly Instructions

- 1) Carefully insert the tree base and slide each leg (Part A) upward into the corresponding slot on the tree base (Part B). (See **Fig. 1**)


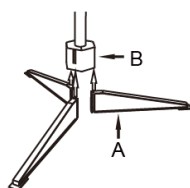


Fig 1

- 2) Insert the middle tree section into the tree bottom section and push down into position. The branches are hinged and will fold down easily, as shown in **Fig. 3**
- 3) Insert the treetop into the middle tree section and push down into position, as shown in **Fig. 2**



- 4) Finally shape the tree by arranging the tips on the branches to give the desired effect. Some tree styles have “side branches” attached to the main branch stem that require additional shaping as shown in **Fig.4**. After shaping the tree, the finished look should be natural and full.

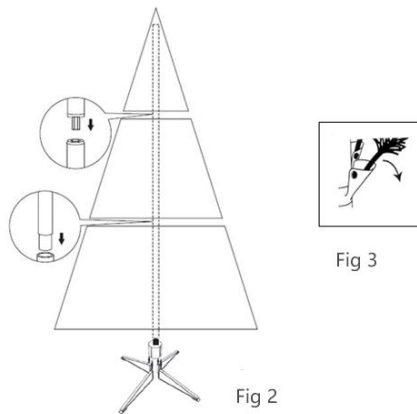

Storage

Before storing the product, carefully remove the product from wherever it is placed to avoid undue strain or stress on the product conductors, connections and wires.

- If you've attached the light string to the tree, unplug it from the power supply and remove the lights from the tree.
- Remove all decorations from the tree.
- Gather the branches upwards and secure them in place.
- Gently lift off the top and middle sections. Un-assemble the plastic legs from the tree stand.
- Carefully place the tree in its box and tape it shut. **STORE THE PRODUCT IN A COOL AND DRY LOCATION PROTECTED FROM SUNLIGHT AND WHERE THE TEMPERATURE DOES NOT EXCEED 40°.**

Trouble Shooting

If you need help or have damaged or missing parts call the customer helpline: 03456 400800

Made in China for Habitat, Argos Limited.
Sainsbury's Supermarkets Ltd, London,
EC1M 6HA, UK. Argos (N.I.) Ltd and
Sainsbury's (NI) Ltd. Forestside Shopping Centre,
Upper Galwally, Belfast, BT8 6FX, UK.

help.sainsburys.co.uk/help/contact-us
argos.co.uk/help/contact-us