

# REMINGTON®

## PRO-Luxe Straightener



S9100

Register online for  
£10,000 prize draw  
EXTRA year guarantee  
FREE rewards gallery

Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister)  
You must register within 28 days  
of purchase.




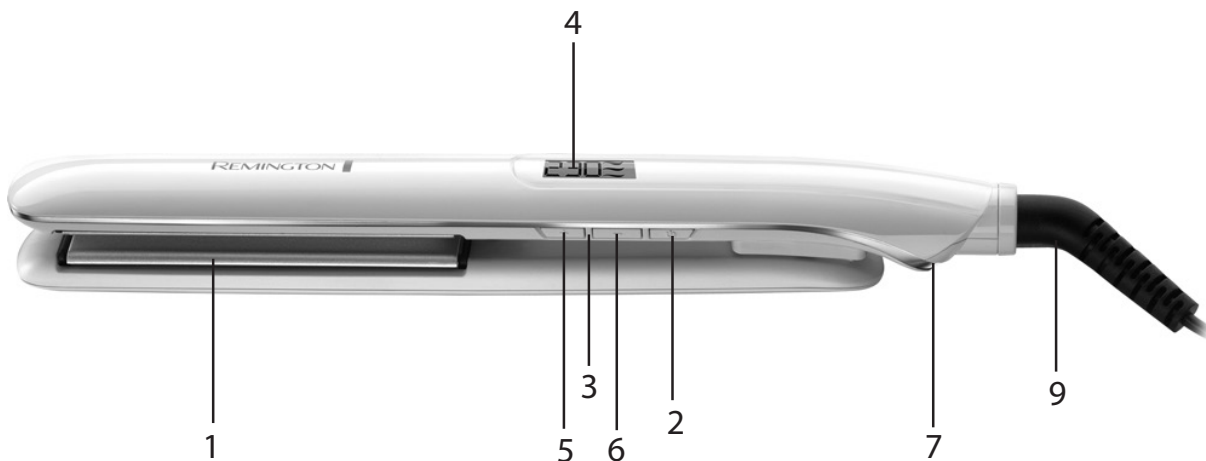
Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.  
Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Warning - for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice\*.
- 3 \*For UK household use only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 4 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 5 Warning: do not use this appliance near bathtubs, showers or basins or other vessels containing water. 
- 6 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- 7 Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- 8 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington service dealer for repair or replacement in order to avoid a hazard.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 Do not allow any part of the appliance touch the face, neck or scalp.
- 11 Do not leave the appliance unattended while plugged in.
- 12 Only set the appliance down on a heat-proof surface.
- 13 Do not place the appliance down on any soft furnishings.
- 14 Do not use attachments other than those we supply.
- 15 This appliance is not intended for commercial or salon use.
- 16 Let the appliance cool down before cleaning and storing away.



---

## KEY FEATURES

---

- 1 Ultimate glide ceramic coated plates
- 2 On/Off switch
- 3 Temperature controls
- 4 Temperature display
- 5 Pro+ setting
- 6 Temperature lock function
- 7 Hinge lock
- 8 Heat resistant pouch and mat (not shown)
- 9 Swivel cord

---

## PRODUCT FEATURES




---

- OPTIheat technology - intelligent heat sensor provides consistent heat where it matters to achieve longer lasting styles in one pass.
- Ultimate glide ceramic coating.
- Pro+ setting - Gently styles the hair at a lower temperature of 185°C for healthier results.
- 9 variable heat settings - 150°C to 230°C.
- Longer length 110mm floating plates - for even pressure on the hair as you straighten.
- Memory function - remembers the last temperature used.
- Automatic safety shut off - this unit will switch itself off if no button is pressed or it is left on after 60 minutes.
- Multivoltage: for home or abroad. At 120V times and temperatures may vary.

## ⚠ INSTRUCTIONS FOR USE

- Before use, ensure the hair is clean, dry and tangle-free.
- Section the hair prior to styling. Style the lower layers first.
- Plug the product into the mains power supply.
- Press and hold the on button to switch on.
- When the styler is plugged in but not turned on a lock symbol will show in the display window indicating the styler is standby mode.
- Select the desired temperature.
- To adjust the temperature use the +/- temperature controls on the side of the product. '+' increases the temperature '-' decreases the temperature.


### ✳ Recommended Temperatures

Symbol	Temperature	Hair Type
	150°C - 170°C	Thin/fine, damaged or bleached hair.
	180°C - 200°C	Normal, healthy hair.
	210°C - 230°C	Thick and difficult to style hair.

- The selected temperature will flash continuously until the desired temperature is reached.
- Working on one section at a time, run the straightener through the entire length of the hair without stopping.
- After use, press and hold the off button to turn off then unplug the appliance.
- Pro+ Setting: to activate, press and hold '+' for 2 seconds, this automatically selects the temperature at 185°C for healthier styling. Pro+ will appear on the screen as shown below:



### ✦ Temperature Lock Function

- To activate, press and hold '-' for 2 seconds. The  symbol will appear and all the keys will be locked. To deactivate, press '-' for 2 seconds.

### ✦ Hinge Lock for Storage

- The plates can be shut together for easy storage.
- To lock, close the plates and push the hinge lock up to the locked position.
- To unlock, pull the hinge lock down to the unlocked position.
- ✦ Note: do not heat the unit in the locked position.

### ✦ Memory Function

- Each time you use the product it will automatically set to the last temperature it was used on.

---

## CLEANING AND MAINTENANCE

---

- After use, ensure the product is cool and wipe all the surfaces with a damp cloth.
- Don't use harsh or abrasive cleaning agents or solvents.

---

## ENVIRONMENTAL PROTECTION

---

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



---

## SERVICE AND GUARANTEE

---

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.


Replacement parts and accessories are available to buy at [www.remington.co.uk/parts-accessories](http://www.remington.co.uk/parts-accessories)

---

## ➔ SERVICE CENTRE

---

### United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

[www.remington.co.uk](http://www.remington.co.uk)

### Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

[www.remington.co.uk](http://www.remington.co.uk)

---

## REGISTER ONLINE FOR

---

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

**Visit [www.remington.co.uk/productregister](http://www.remington.co.uk/productregister). You must register within 28 days of purchase.**



## **Model No. S9100**

17/UK/ S9100 T22-0004877 Version 01 /17

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.

Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

[www.remington.co.uk](http://www.remington.co.uk)

© 2017 Spectrum Brands, Inc.