



Patio



EN - Operating Instructions

General information

Prior to using the patio cleaner for the first time, be sure to read these instructions through and keep them with the patio cleaner for later reference.

Letters **X** refer to illustrations.

Purpose and intended use

The patio cleaner can be used with all Nilfisk Compact & Nilfisk Excellent high pressure washers.

Safety Instructions



WARNING

- Use this patio cleaner only with Nilfisk consumer high pressure washers.
- Please observe the safety instructions applying to your high pressure washer.
- Do not put your hand under the cabinet when the patio cleaner is operating.

A Preparing and using the appliance

1. Attach the patio cleaner to the lance of your high pressure washer.
2. The locking device can be tightened for better control. Be careful not to over-tighten the locking device.
3. Move the patio cleaner gently over the surface to be cleaned.

B Power control

The cleaning power can be adjusted on the power control regulation :

1. Reduced cleaning power: Used for brittle surfaces like wood.
2. Full cleaning power: Used for hard surfaces like concrete.

As high pressure can harm a delicate surface, it is recommended to test on a small area to see if the surface can stand the high pressure.

C Cleaning of nozzle

1. Remove the clip.
2. Pull out the nozzle.
3. Clean the nozzle with the nozzle cleaning tool.
4. Reinsert the nozzle.
5. Insert the clip.

