






Russell Hobbs

A BRITISH ICON SINCE 1952

27550

 www.russellhobbs.com

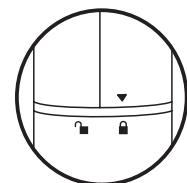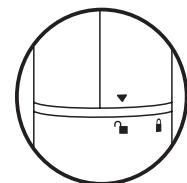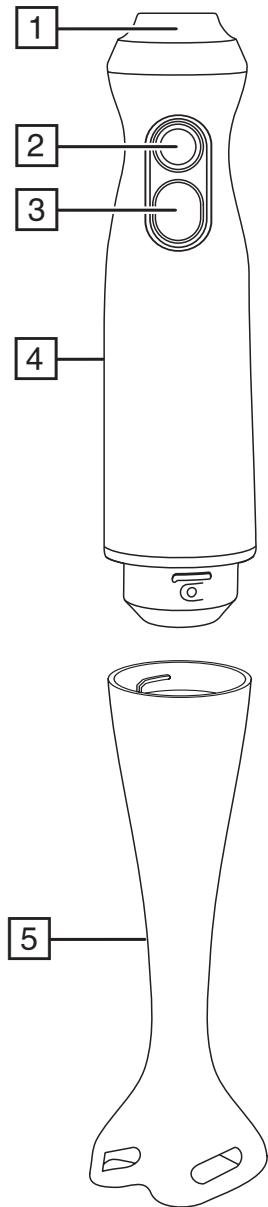

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children must not use or play with the appliance. Keep the appliance and cable out of reach of children.

⚠ To avoid injury, take care handling the blades, emptying the bowl, and cleaning.

⚠ Don't add hot liquid (over 40°C) to the bowl, as it may be ejected due to sudden steaming.

Misuse of the appliance may cause injury.

Unplug the appliance before assembly, disassembly, or cleaning.

Don't leave the appliance unattended while plugged in.

If the cable is damaged, it must be replaced by the manufacturer, its service agent, or someone similarly qualified, to avoid hazard.

🚫 Do not immerse in any liquid.

- Don't use the wand in hot oil – even moderately hot oil can cause a nasty burn.
- Don't try to chip ice, don't try to chop raw meat, and take great care with the blades.
- Don't fit an attachment or accessory other than those we supply.
- Don't use the appliance for any purpose other than those described in these instructions.
- Don't operate the appliance if it's damaged or malfunctions.
- If blending hot liquids in a pan, always remove the pan from the heat and allow it to cool down a little before blending.
- Never leave the blender resting in the pan because the bottom of the pan could still be very hot and damage the blender.
- Don't use the wand for more than 30 seconds, the whisk for more than 5 minutes or the chopper for more than 30 seconds. Allow the motor to cool for 2 minutes before using it again.

HOUSEHOLD USE ONLY

PARTS

1. Variable speed control	4. Motor unit
2. Start button	5. Wand attachment
3. Turbo button	

FITTING THE WAND

1. Unplug the appliance.
2. Fit the wand onto to the end of the motor unit with the  mark on the wand is aligned with the  mark on the motor unit. Next, turn the wand until the  mark is aligned with the  mark.
3. To remove, turn it until the  mark is aligned with the  mark and pull it off.

USING

Generally, the wand can do anything a normal blender can do. Make milkshakes, smoothies, or mayonnaise in a beaker. Purée ingredients in the pan you cook them in.

- Don't immerse the wand past its junction with the handle. Whatever container you use, make sure it's on a stable, flat surface, and support it with your free hand, to prevent it moving.
- 1. Put the plug into the power socket.
- 2. Press the start button to start the motor, release it to switch off.
- 3. Turn the speed control to the speed you want.
- 4. For rapid blending, press the turbo button which will activate your blender at its highest speed. Release it to switch off.
- Large quantities, thick mixes, and a high ratio of solids to liquids require longer timings and slower speeds.
- Smaller quantities, thinner mixes, and more liquids than solids require shorter timings and higher speeds.

To avoid spray/splashing:

- Keep the wand vertical.
- Don't switch on till it's inside the container.
- Switch off before removing it.
- With liquids, switch on and off with the blade under the surface.

HOT LIQUIDS

If blending hot liquids in a pan, always remove the pan from the heat and allow it to cool down a little before blending.

When using in hot liquids, don't let the blade break the surface at an angle, you may spray hot liquid outside the container.

Don't use the wand in hot oil. Splashes from even moderately hot oil cause nasty burns.

CARE AND MAINTENANCE

1. Switch the blender off, and unplug it.
2. Don't touch the blade – use a brush.
3. Wipe outer surfaces with a soft damp cloth.
4. Don't put any part in a dishwasher.bowl.

RECIPE

BANANA SORBET

- 300g frozen banana chopped into 10-15mm pieces
- 200 ml honey
- 2.5 ml vanilla extract

Process the ingredients with the chopping attachment for 5 seconds.

RECYCLING



To avoid environmental and health problems due to hazardous substances, appliances and rechargeable and non-rechargeable batteries marked with one of these symbols must not be disposed of with unsorted municipal waste. Always dispose of electrical and electronic products and, where applicable, rechargeable and non-rechargeable batteries, at an appropriate official recycling/collection point.

SERVICE

If you ring Customer Service, please have the Model Number to hand, as we won't be able to help you without it. It's on the rating plate (usually underneath the product).

The product isn't user-serviceable. If it's not working, read the instructions, check the plug fuse and main fuse/circuit breaker. If it's still not working, consult your retailer.

If that doesn't solve the problem – ring Customer Service – they may be able to offer technical advice.

If they advise you to return the product to us, pack it carefully, include a note with your name, address, day phone number, and what's wrong. If under guarantee, say where and when purchased, and include proof of purchase (till receipt). Send it to:

Customer Service

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester M35 0HS

email: support@russellhobbs.com

telephone: 0345 658 9700 (local rate number)

Please note: If you have purchased the product within the last 6 months, please contact the retailer in the first instance to deal with any matters relating to warranty.

GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions. Your statutory rights are not affected.

Guarantee period = 2 years from first retail purchase.

To claim an extra 1 year guarantee, register your product online within 28 days of purchase.

Register at: **uk.russellhobbs.com/product-registration**

Consumables are guaranteed only for their recommended lifecycle. Replacement/Spare parts* are excluded and are only covered by a 1 year warranty.

* Examples include filters, removable grill plates, drip trays/crumb trays etc.



www.russellhobbs.com for more products

BEAUTIFULLY BRITISH IDEAS

SINCE



1952