Bentwood Chair

Assembly Instructions - Please keep for future reference

600/6053

600/6022

248/3993

241/6764

702/3994





Dimensions

Width - 47cm

Depth - 52cm

Height - 87cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand

- or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- · Do not stand on the chair.
- Do not use this chair as step ladder.



 We do not recommend the use of power drill/drivers for inserting screws.

as this could damage the unit. Only use hand screwdrivers.

- Unit weight: 3.8 kgs.
- Maximum safe weight of user: 110kgs.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.

Components - Parts

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 640 0800

Please check you have all the parts listed below

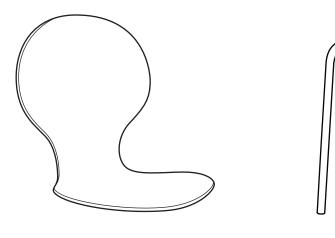

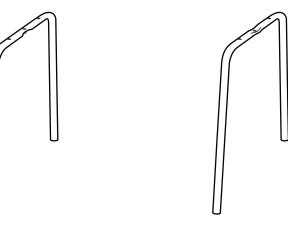


1 Seat (42.5 x 53 x 43cm)

- 2 Upper Leg (65.5 x 41.5 x 1.6cm)
- 3 Lower Leg (65.5 x 41.5 x 1.6cm)


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

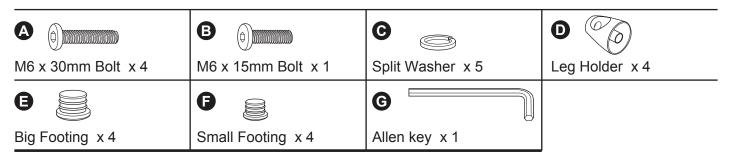

Tools required

 

Ruler - Use this ruler to help correctly identify the screws


0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

Assembly Instructions

Step 1

Attaching leg holders

Position and insert the leg holders **①** into legs **②** & **③** as shown. Move it up to the holes on the top surface of the legs.

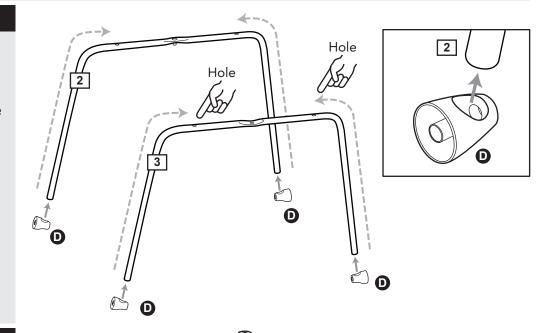

Step 2

Attaching big footings

Insert big footings ① on the ends of the legs ② & ③ as shown. Press firmly to secure.



Note: Insert and lock it carefully into holes by using a rubber mallet.


Step 3

Attaching legs

Position the legs upside down as shown. Place the upper leg 2 below the lower leg 3. Then fix through holes using bolt **B** and spring washer **G**.

IMPORTANT NOTE:

Fasten bolt using allen key but do not fully tighten at this stage.

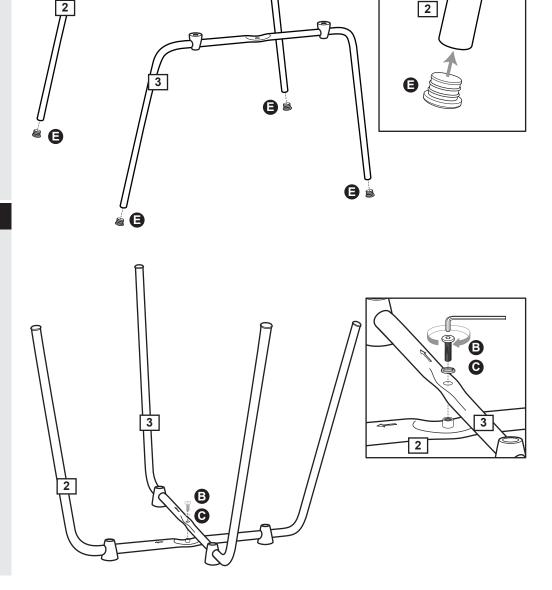

Assembly Instructions


Step 4

Attaching seat

Place seat 1 upside down on a raised protected surface and position legs 2 & 3 on the seat as shown.

IMPORTANT NOTE: Make sure the arrow on the legs are pointing to the front of the seat as shown.

Then fix through holes on the leg holders **D** & legs with bolts **A** & spring washers **G**.

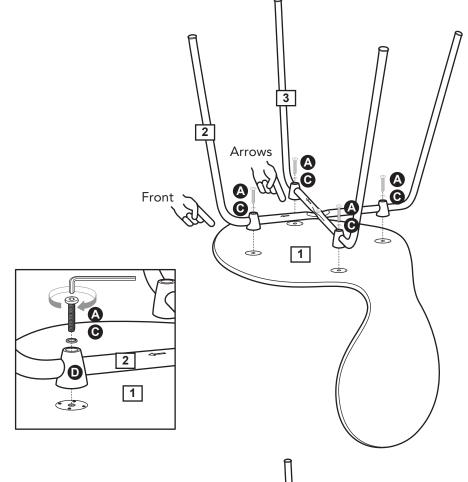

Step 3


Attaching small footings

Insert small footings **(F)** on the ends of the leg holder **(D)** as shown. Press firmly to secure.

IMPORTANT NOTE: Fasten bolts using allen key **G** and fully tighten bolts **A** and also bolt **B** assembled in step 3.

Carefully turn over the chair and place on a firm surface.

Assembly is complete.

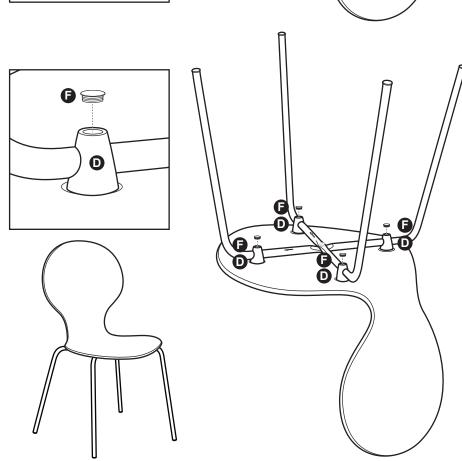

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**