
Dining Chair

Assembly Instructions - Please keep for future reference

600/6479 600/6486

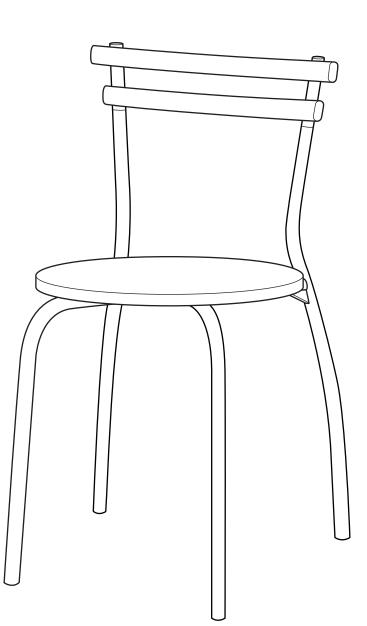

 
Dimensions

Width - 44.5cm Depth - 42cm

Height - 77cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Important - Please read these instructions fully before starting assembly

• Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.

• Discard all extra fittings and keep fittings out of reach of children.

• At least 2 people are required to assemble this product.

• Assemble this product on a flat surface.

- Assemble all parts loosely before tightening any bolts.
- Unit weight: 3.5kgs.
- Maximum safe weight of user: 110kgs.
- Retain Assembly Instructions for future reference.
- Dispose of all packaging carefully and responsibly.



• We do not recommend the use of power drill/drivers *for inserting screws*,

as this could damage the unit. Only use hand screwdrivers.

Warnings

• This product should only be used on firm, level ground.

• Make sure the legs remain in contact with the ground.

• Do not stand on the product.

Care and maintenance


• Please clean the table surface using either damp (not wet) cloth and a mild domestic soap solution or by using an appropriate polish. • Do not use any abrasive materials when cleaning.

• From time to time check that there are no loose bolts on this unit.

Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**

Please check you have all the parts listed below

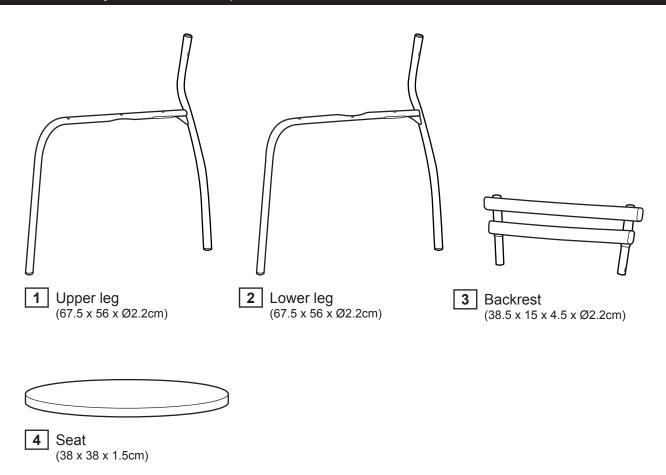

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

M6 x 12mm Bolt x 2	M6 x 30mm Bolt x 2	M6 x 32mm Bolt x 3
Allen key x 1		

Ruler - Use this ruler to help correctly identify the screws

 $0 \quad 5 \quad 10 \quad 15 \quad 20 \quad 25 \quad 30 \quad 35 \quad 40 \quad 45 \quad 50 \quad 55 \quad 60 \quad 65 \quad 70 \quad 75 \quad 80 \quad 85 \quad 90 \quad 95 \quad 100 \quad 105 \quad 110 \quad 115 \quad 120 \quad 125 \quad 130 \quad 135 \quad 140 \quad 145 \quad 150 \quad 155 \quad 160 \quad 165 \quad 170 \quad 100 \quad 10$

Assembly Instructions

Step 1

Attaching backrest

Position the upper leg 1 and lower leg 2 in a crossed position as shown.

With the help of an assistant holding the legs, insert the backrest into holes on the legs as shown.

Then fix through holes using bolts \triangle and tighten with allen key \bigcirc .



Important: Do not fully tighten the bolts at this stage.

Step 2

Attaching seat

Place the seat 4 face down on a flat and raised surface.

Position the chair frame on the seat 4 as shown then fix through holes using bolts 3 & O then tighten with allen key D.




Important:

Carefully turn over the chair. Place it on a flat even surface and make adjustments to ensure the legs are even on the floor.

Then fully tighten bolts fixed on step 1 using allen key **D**.

Assembly is complete.

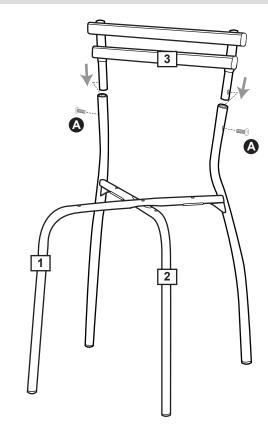

1

B


С


C


4

2

B

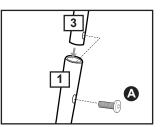

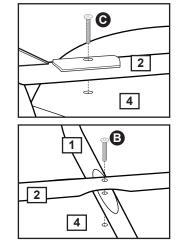

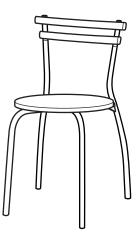

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800