
DINING FURNITURE

Dining Chair

Easy Assembly Instructions

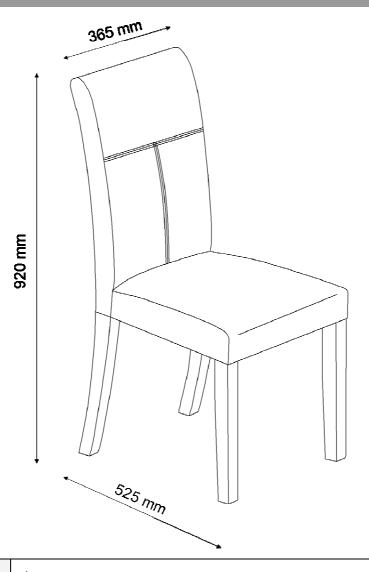

Before you start, here is some helpful advice

- 1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
- 2. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
- 3. Assemble this product on a carpet.
- 4. All you will need to assemble this unit is a screwdriver and light hammer.
- 5. Keep glue and fittings out of children's reach.

Argos Ltd MK9 2NW

In the unlikely event that this product has missing or damaged parts, please call 0845 640 0800 to obtain spares.

Component parts and fittings contained in the box Chair **Fittings** Bolt 90 mm 8 pcs 01 B Bolt 55 mm 10 pcs 04 Washer 18 pcs Spring washer 16 pcs 03 02 Hex Key 1 pc F Total: 08 Parts for 2 chairs

ASSEMBLY - STAGE ONE



Chair Assembly

 Locate the corners of the box seat opposite to the center hole.

Insert the legs 02 and 03 into the corners of the box seat.


Insert two bolts B, spring washers D and washers C through the each corner block of the box seat 04.


Tighten the bolts.

2. Place the box seat on the back frame 01.

Assemble the bolt B and washer C onto the back frame.

Do not tighten the bolt at this point.

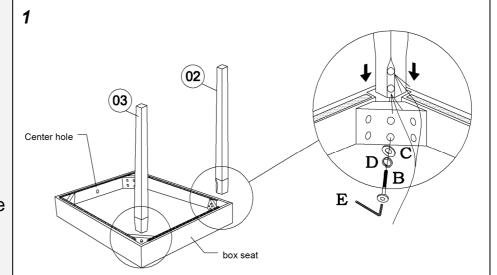

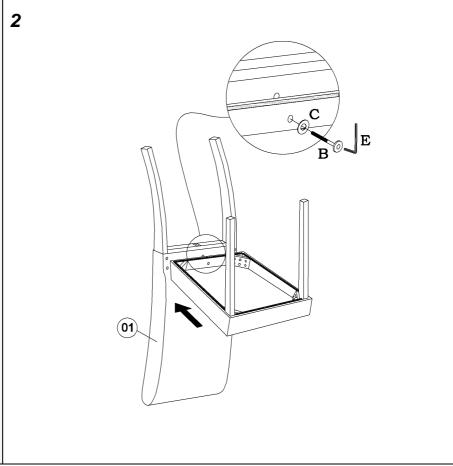

ASSEMBLY - STAGE ONE




Chair Assembly

3. Assemble two bolts A, spring washers D and washers C through each corner block of the box seat to the back frame.

Do not tighten the bolts at this point in time.

- **4.** Carefully turn the chair over, and put the chair on the floor.
- 5. Tighten each loose bolt a little at a time while making sure the chair remains level. Repeat until all loose bolts are tight.

3

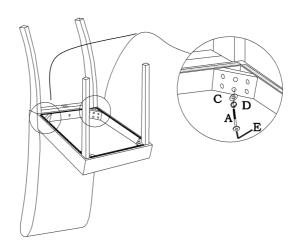

4

