

Chad Valley Double Slide

Assembly & User Instructions - Please keep for future reference

604/8437



Assembly



Important

Age: 5-12 years

The dimension of assembled product: L549 * W138CM

Important – Please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.



Safety Information

Important – Please read these instructions fully before assembly or use

OWNER'S MANUAL

WARNING

- Only for domestic use. Only for outdoor use.
- The product shall not be installed over concrete, asphalt or any other hard surface.
- Place the product on a level surface at least 2m from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines or electrical wires.
- Recommend back towards the sun when playing.
- Keep assembly and installation instructions for further reference.
- Adult assembly required.
- Misuse or abuse of this slide may cause serious, even fatal, injury.
- Use only on level lawns. Do not use on pavement or other hard surfaces.
- Make sure the lawn is free of rocks, sticks, bumps, etc.
- Slide facing forward on your stomach only. Do not stand, kneel, or crouch.
- Use only under competent supervision.
- Wet your body before playing on the slide.
- To avoid accidents, check the slide carefully before playing.
- Not Suitable for children under 36 months. Small parts present choking hazard.

ASSEMBLY

1. Find a solid, level lawn and clear the area of debris.
2. Remove the slide and accessories from the package.
3. Spread out the slide and insert the stakes through the holes into the lawn.
NOTE: When driven into the ground, the head of the stake should be flat with the lawn.
4. Connect the garden hose by screwing it on.
5. Close the drain valve on the drench pool ring .
6. Simply turn on the water and your slide is ready to use.

Cleaning and Maintenance


1. After use, use a damp cloth to gently clean all surfaces.
Note: Never use solvents or other chemicals that may damage the product.
2. Store in a cool, dry place and out of children's reach.
3. Check the product for damage at the beginning of each season and at regular intervals when in use.

Repair

If a chamber is damaged use the provided repair patch.

1. Clean and dry the damaged area.
2. Apply the provided repair patch and smooth out any air bubbles.

If you need help or have damaged or missing parts, call the Customer Helpline: 0345 6400 800.

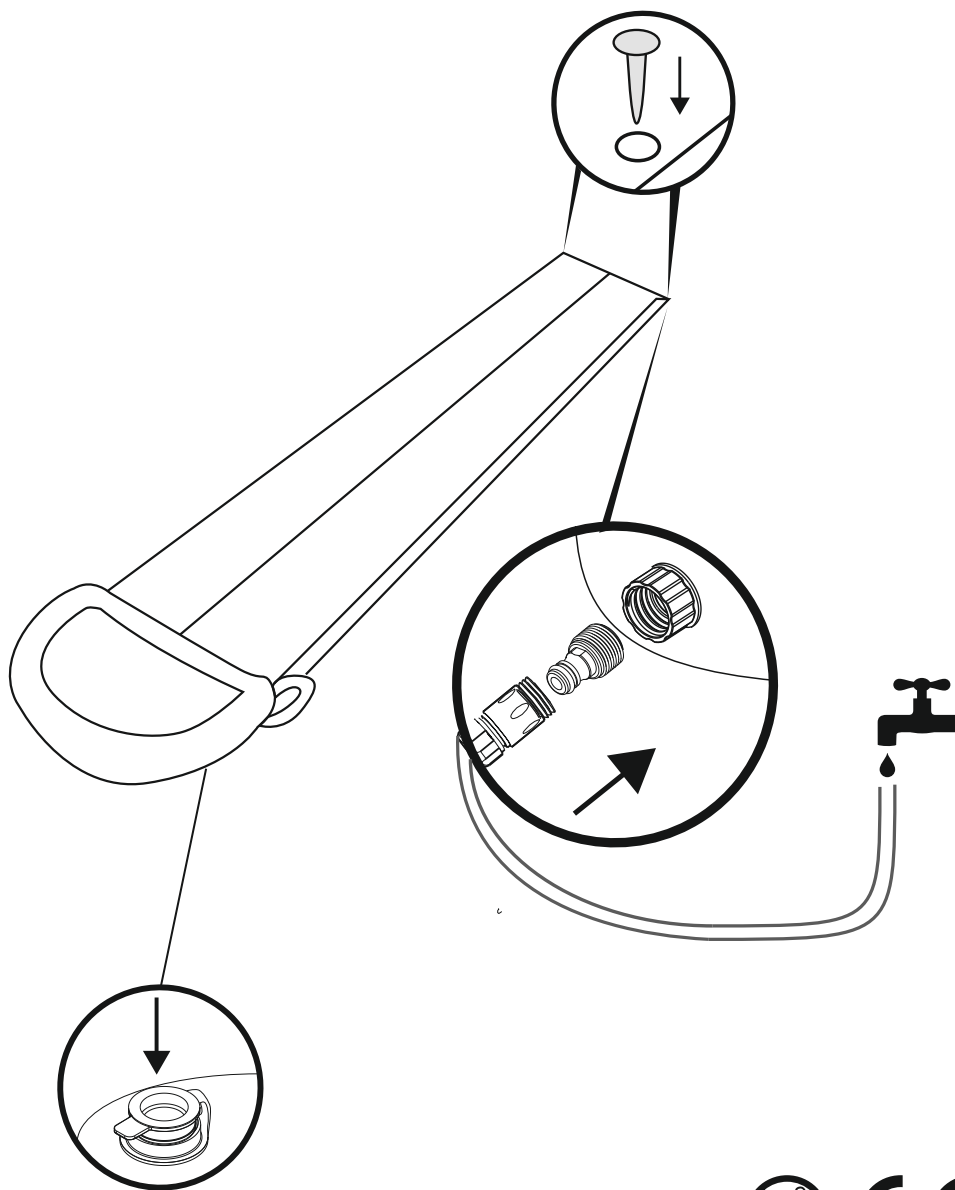

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**.
Produced for Chad Valley Toys Argos Ltd. *Country of origin:* CHINA.
Address: 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW.
www.argos.co.uk

