New Pagnell 3 Dr 4 Drw Wardrobe


Assembly Instructions - Please keep for future reference

605/8788

617/6127

607/9884



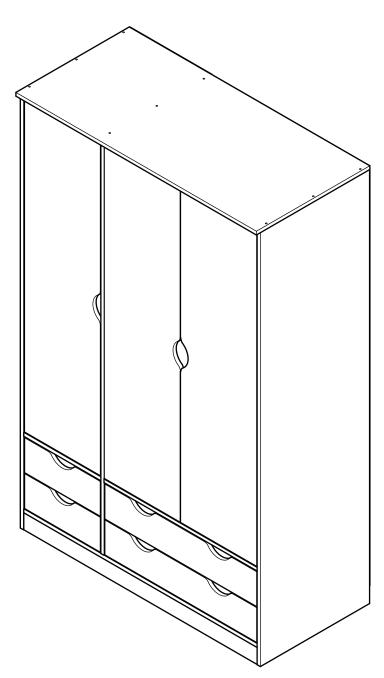

Dimensions

Width - 114.5cm

Depth - 54.5cm

Height - 180.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 6400800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not use this item if any components are missing or damaged.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

- During assembly children should be kept away from the product due to possible risk of injury.
- Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your

power drill is set on a low torque setting.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit
- This product should not be discarded with household waste.
 Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

- Argos Ltd. MK9 2 NW.
- This product is intended for children in the age 6 or above.
- Maximum load:50 kgs (inside of wardrobe).
- Assembly of this product must be carried out by a competent adult.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

 
Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400800**


Please check you have all the panels listed below




Top panel (114.6 x 54cm)




2 Right side panel (179 x 52cm)

 


Left side panel (179 x 52cm)

 

Center panel (170.4 x 51.9cm)

 


Right middle panel (73 x 51.9cm)

 


Left middle panel (51.9 x 36.7cm)



 
Shelf x 2 (49.8 x 36.7cm)



8 Front bottom panel (111.2 x 11cm)

 

9 Back bottom panel (111.2 x 11cm)

 


Front panel (111.2 x 7cm)



Bottom support (111.2 x 7cm)



Back support (73 x 11cm)

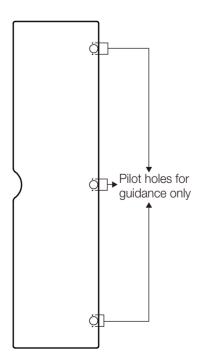


Door x 3 (138.1 x 36.1cm)



Components - Panels

If you have damaged or missing components, call the Customer Helpline: Argos = 0345 6400800

Please check you have all the panels listed below

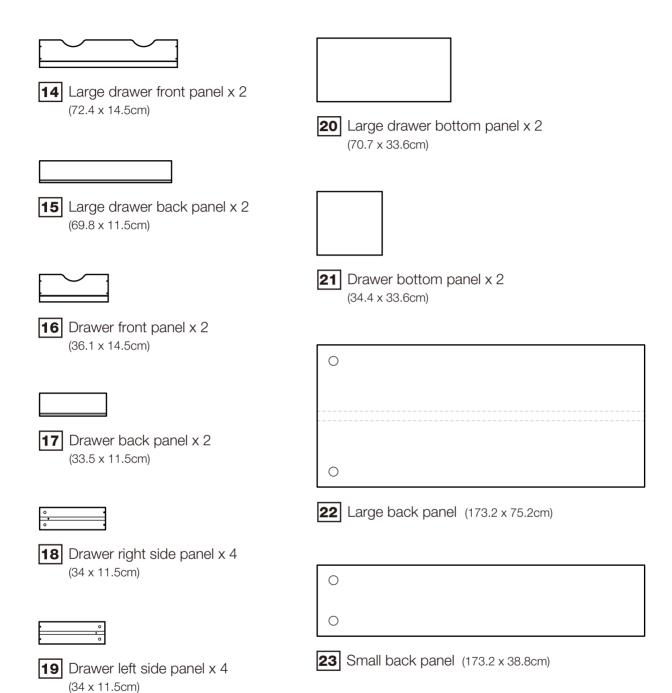




Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

may be supplied than are required.		
A ••••••••••••••••••••••••••••••••••••	(This screw is included in the bag of runner)	O CONTRACTOR OF THE PARTY OF TH
Runner x 8	12mm Screw x 24	Door hinge x 9
(This screw is included in the door hinge bag)		
15mm Screw x 36	Rail Support x 2	39mm Locking pin x 27
G (====================================	a	
30mm Dowel x 12	Door Stop x 2	20mm Screw x 4
	(8 (1)	
Plastic support x 8	14mm Screw x 18	15mm Locking nut x 11
	0 •	
50mm Screw x 17	Nail x 54	12mm Locking nut x 16
	o ======	
30mm Screw x 16	Clothes rail x 1	12mm Screw x 8
8 ()		•
Door pad x 6	50mm Long dowel x 1	Shelf support x 8
v †)>	(This screw is included in the wall strap bag)	S O JAND
15mm Screw x 4	Wall strap x 2	Wall plug x 2
	2	
Glue x 1	Ventilation holes cover x 4	

 Tools required



Phillips screwdriver (medium & large)



Flatblade screwdriver (medium)



7mm Suitable drill bit (for use with wall plug)





Small hammer



Ruler/tape measure



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170



The screws length is measured from the head to the point (30mm screw shown).

Step 1

Attaching runners and hinges

a: Position Runners **A** in front edge of the Right side panel **2**.

Slide top of the Runners **A** back.


Use Screws **B** to fix the Runners **A** on the Right side panel **2**.


Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **①** to fix the Door hinges **②** 'back plates' onto the Right side panel **②** .

Use Screws V to fix the Rail support on the Right side panel 2.

b: Slide top of Runners **A** forward and fix as shown using Screws **B**.

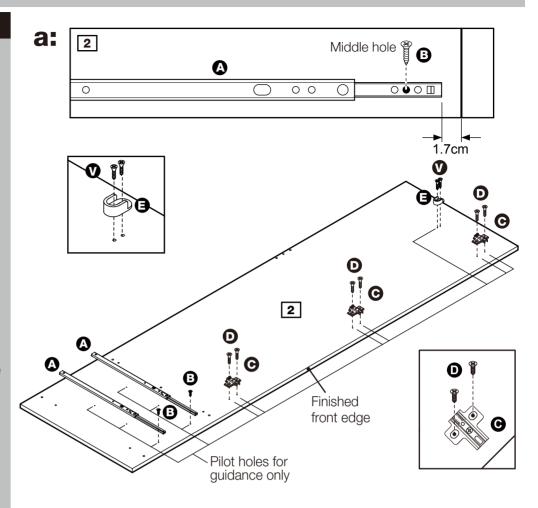

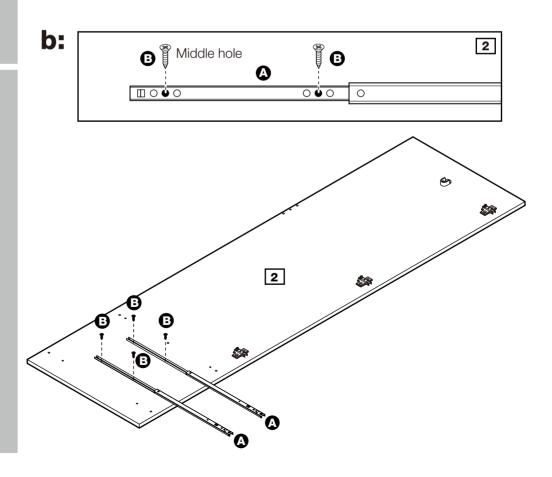

Step 1 - continued


C: Position Runners (A) in front edge of the Left side panel (3).

Slide top of the Runner **A** back.


Use Screws **B** to fix the Runners **A** on the Left side panel **3**.

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **D** to fix the Door hinges **G** 'back plates' onto the Left side panel **3**.

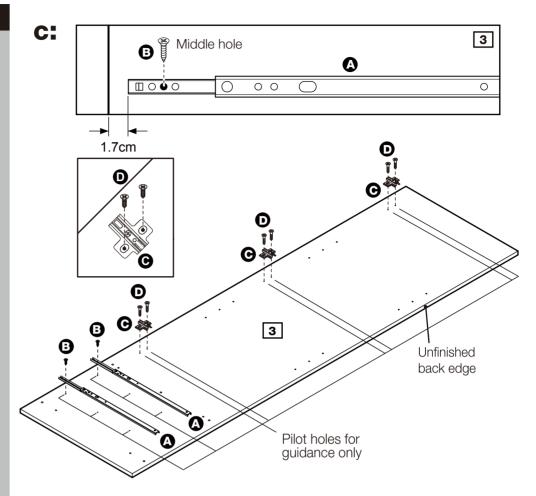

d: Slide top of Runners **A** forward and fix as shown using Screws **B**.

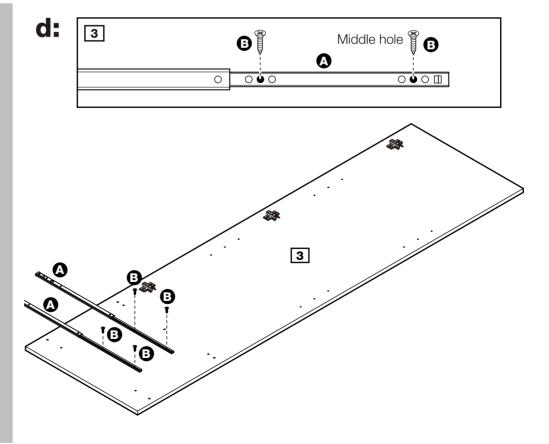

Step 1 - continued

e: Position Runners Ain front edge of the Center panel 4.


Slide top of the Runners **A** back.

Use Screws B to fix the Runners A on the Center panel 4.


Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

Use Screws **D** to fix the Door hinges **C** 'back plates' onto the Center panel **4**.

Use Screws **v** to fix the Rail support **o** on the Center panel **1**.

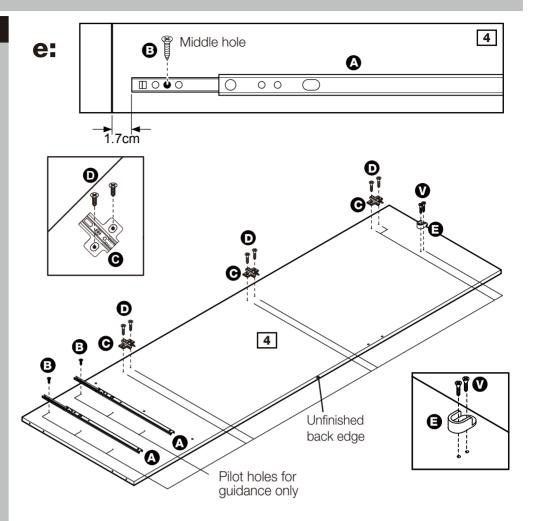

f: Slide top of Runners **A** forward and fix as shown using Screws **B**.

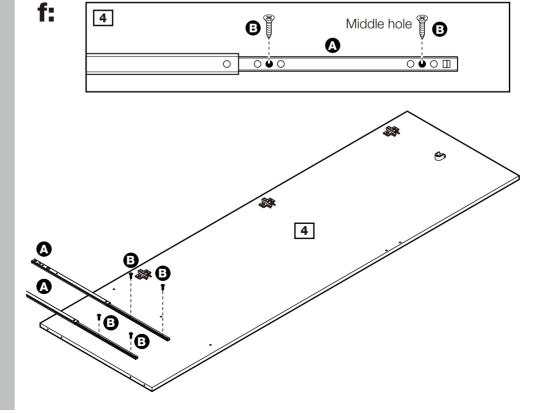


Step 1 - continued

g: Position Runners **A** in front edge of the Center panel **4**.


Slide top of the Runners **A** back.


Use Screws **B** to fix the Runners **A** onto the Center panel **4**.

Note: The front part of the runner should be approximately 1.7cm from the front edge of the panel.

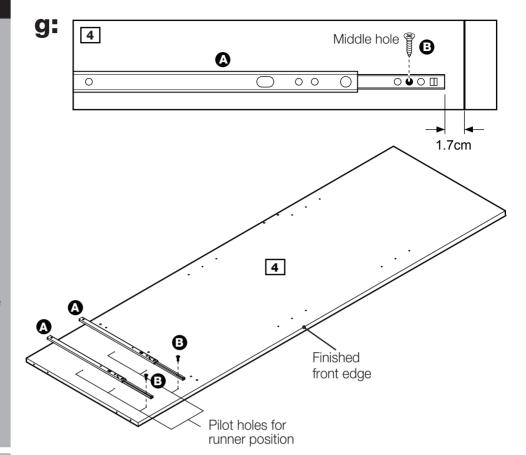

 h: Slide top of Runners **A** forward and fix as shown using Screws **B**.



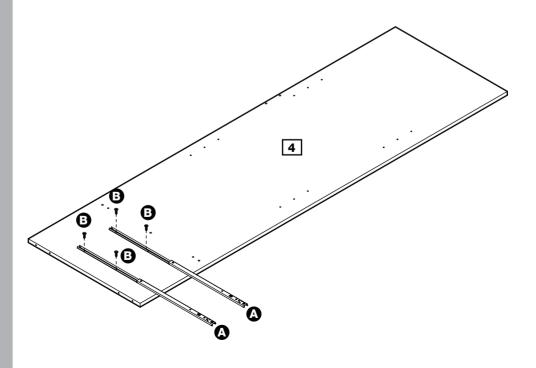


Step 2

Fitting locking pins

Screw Locking pins into the Right side panel , Left side panel and Center panel 4.

Note: Insert locking pins as far as shown. **Do not over tighten.**

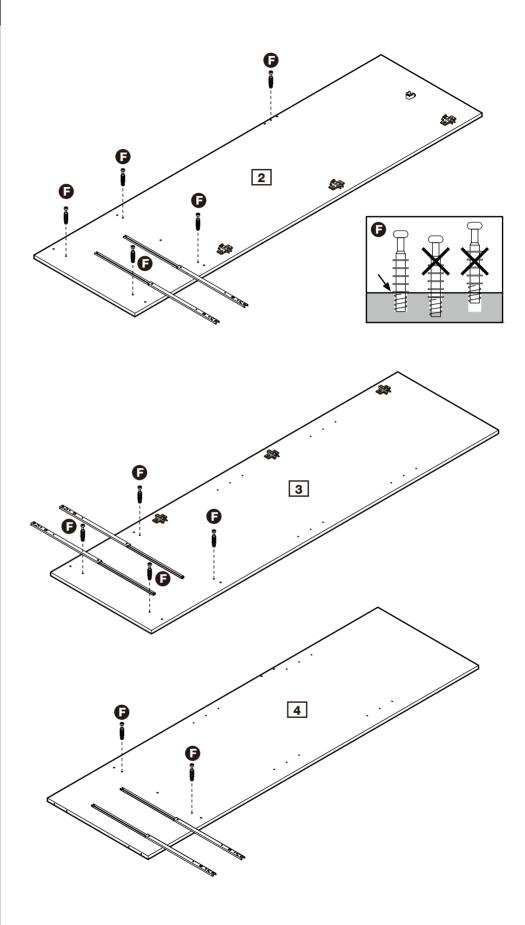


Step 3

Fitting dowels

Insert Dowels @ and Long dowel @ into Right middle panel 5 ,Left middle panel 6 ,Front bottom panel 8 and Back bottom panel 9 .

Use Screws 1 to fix Door Stop 1 onto the Right middle panel 5.

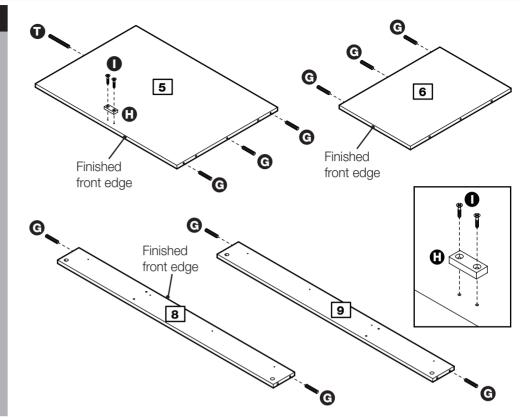


Step 4


Attaching plastic supports

a: Use Screws & to fix Plastic supports ① onto the Front panel 10 and Bottom support 11.

b: Use Screws to fix Front panel onto the Front bottom panel .

Use Screws & to fix
Bottom support 11 onto
the Back bottom panel
9.

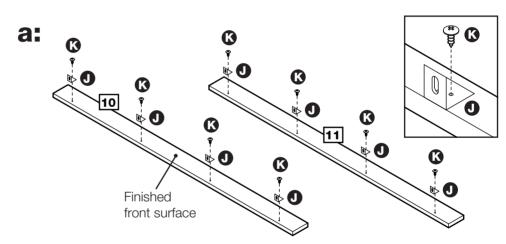

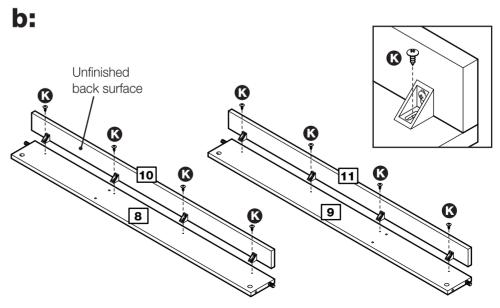


Step 5

Attaching right middle panel

Note: 2 people are need at this stage.


Use Screws to fix Right middle panel 5 onto the Center panel 4.

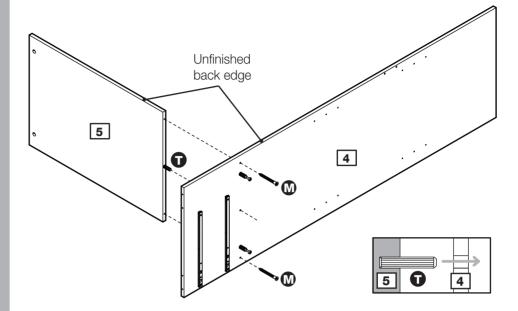

Step 6

Attaching front bottom panel


Use Screws to fix Front bottom panel 8 onto the Center panel 4.

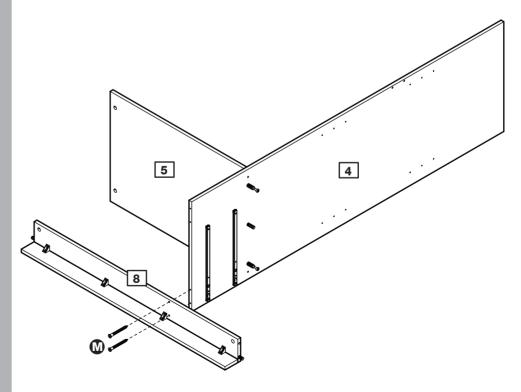

Step 7

Attaching back bottom panel

Use Screws 10 to fix Back bottom panel 9 onto the Center panel 4.

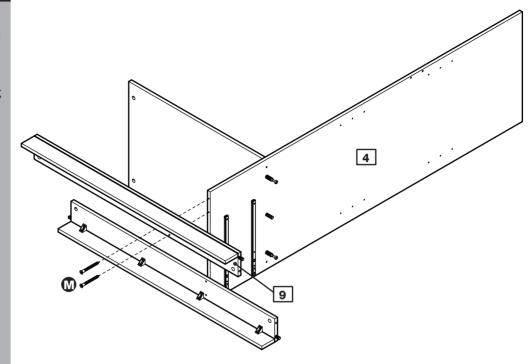


Step 8

Attaching back support

Insert Dowels © into the Back support 12.

Use Screws 12 to fix Back support 12 onto the Center panel 4.

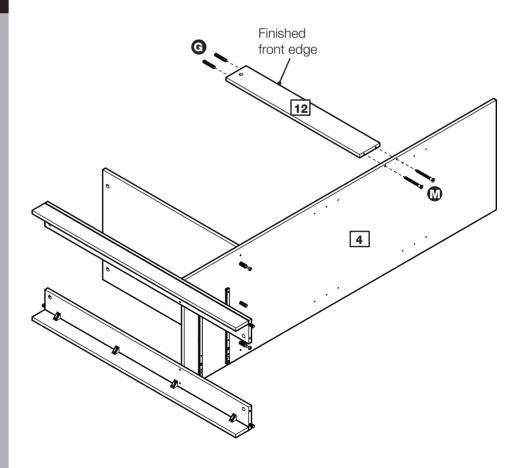

Step 9

Attaching right side panel

Position Right side panel 2 onto the unit.

Insert 5 Locking nuts in the Back support 12, Right middle panel 5, Back bottom panel 9 and Front bottom panel 8.

Use a screwdriver to turn Locking nuts ① clockwise to lock.


Step 10

Attaching left middle panel

Position Left middle panel 6 onto the unit.

Insert 2 Locking nuts into the Left middle panel .

Use a screwdriver to turn Locking nuts • clockwise to lock.

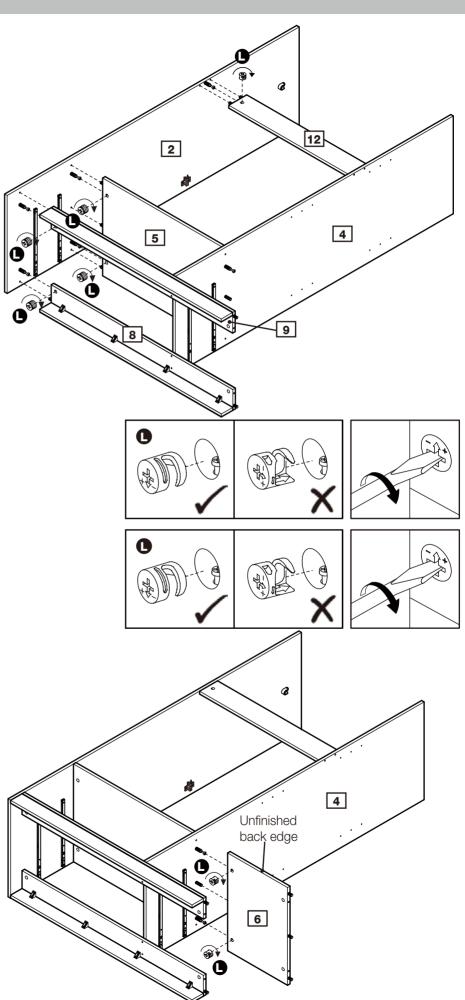


Step 11

Attaching left side panel

Position Left side panel 3 onto the unit.

Insert 4 Locking nuts
into the unit.

Use a screwdriver to turn Locking nuts • clockwise to lock.

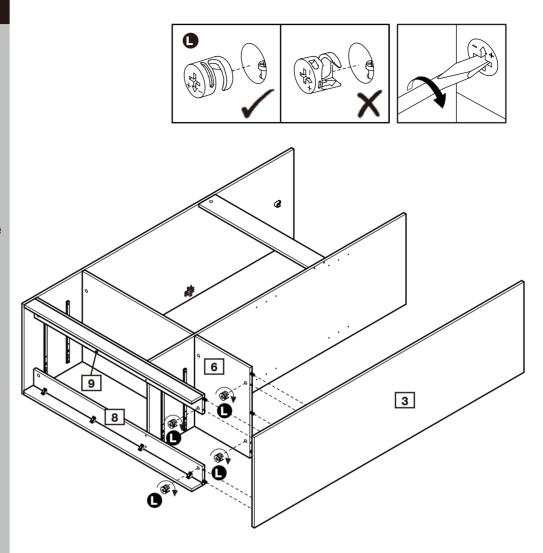


Step 12

Attaching top panel


a: Use Screws 1 to fix Door Stop 1 onto the Top panel 1.

a:

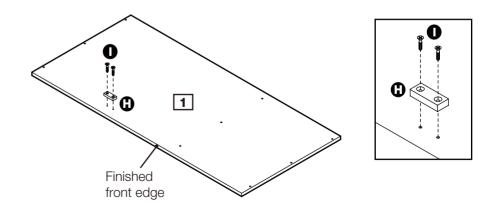

Step 12 - continued

b: Use Screws to fix Top panel onto the unit.

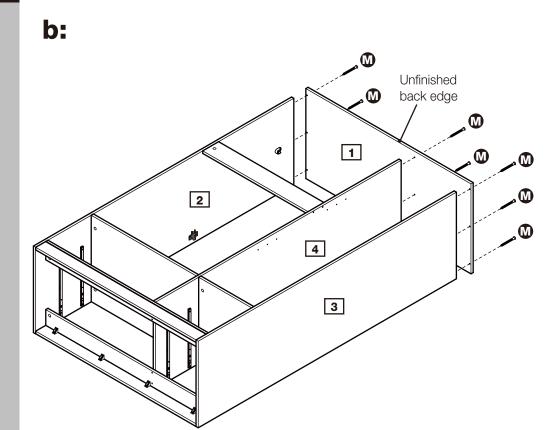


Step 13

Fixing back panels

A: Apart the Ventilation holes covers 2 first.

Attach Ventilation holes covers 2 onto Large back panel 22 and Small back panel 23, comebine the covers.

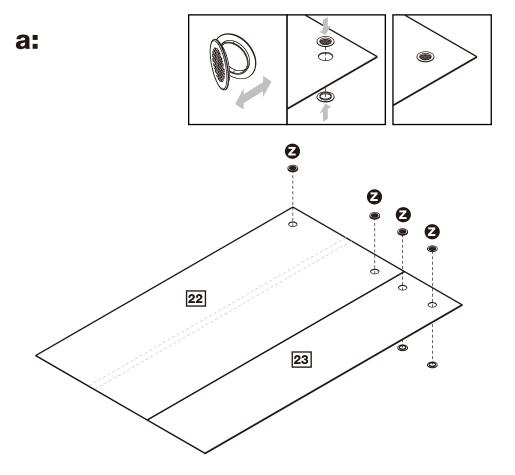


Step 13 - continued

b: Attach Large back panel 22 and Small back panel 23 onto the unit using Nails **N**.



Important:

The unit **MUST** be 'square' when back is attached.

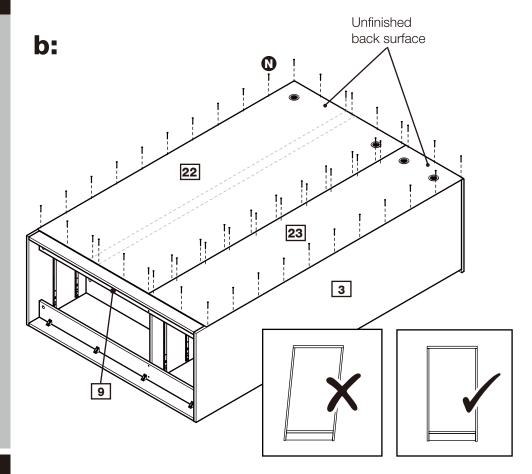

Step 14

Large drawers assembly

a: Screw Locking pins **(a)** into 4 holes shown on back of the Large drawer front panel **(14)**.


Note: Insert Locking pins as far as shown.

 
Do not over tighten.

b: Fix Drawer left side panel 19 onto the Large drawer front panel 14.


Continued on next page.



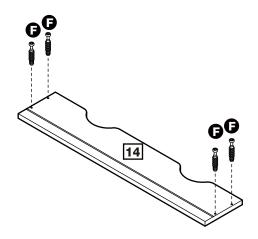



b:

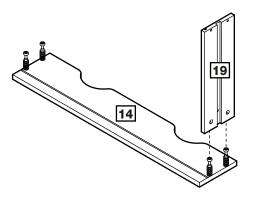


Step 14 - continued

C: Fix Drawer right side panel 18 onto the Large drawer front panel 14.

Insert 2 Locking nuts o into the holes (they will only insert one way).

Use a screwdriver to turn Locking nuts • clockwise to lock.

C:

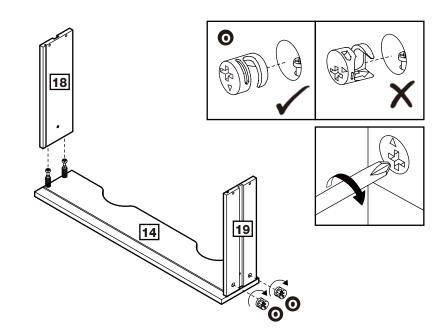


d: Insert 2 Locking nuts **()** into the holes (they will only insert one way).

Use a screwdriver to turn Locking nuts • clockwise to lock.


Place a small amount of Glue into the grooves.

Carefully slide the Large drawer bottom panel 20 into the grooves.

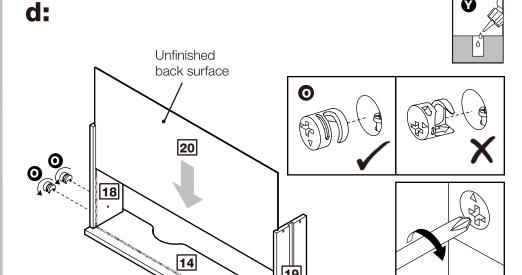

Continued on next page.

e:

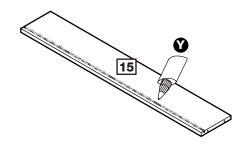




Step 14 - continued

f: Position Large drawer back panel 15 onto the unit using Screws P.

Repeat with remaining 1 large drawer.

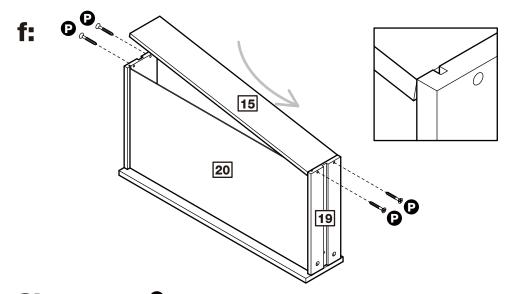


Step 15


Drawer assembly


a: Screw Locking pins • into 4 holes shown on back of the Drawer front panel 16.

Note: Insert Locking pins as far as shown. Do not over tighten.

b: Fix Drawer left side panel 19 onto the Drawer front panel 16.

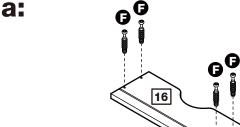


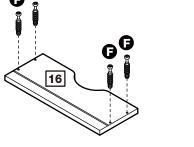

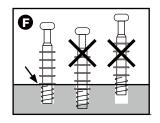

b:


C:

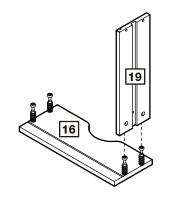

C: Fix Drawer right side panel 18 onto the Drawer front panel 16.

Insert 2 Locking nuts • into the holes (they will only insert one way).

Use a screwdriver to turn Locking nuts o clockwise to lock.

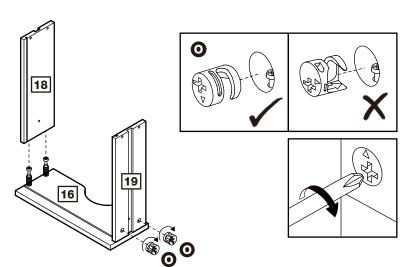


Step 15 - continued

d: Insert 2 Locking nuts **()** into the hole (they will only insert one way).


Use a screwdriver to turn Locking nuts **O** clockwise to lock.

Place a small amount of Glue on into the grooves.

Carefully slide the Drawer bottom panel 21 into the grooves.

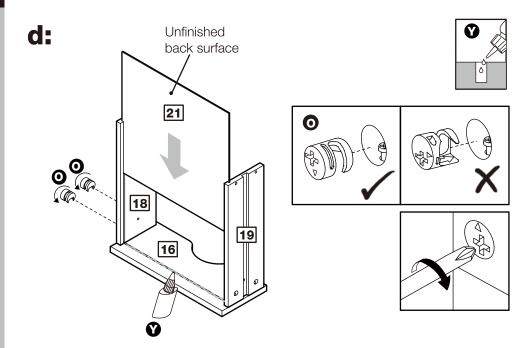

 
e: Place a small amount of Glue on the Drawer back panel 17.





f: Position the Drawer back panel 17 and fix to the unit using Screws **P**.



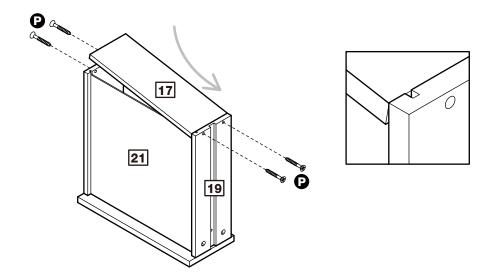

Repeat with remaining 1 drawer.

Step 16

Fixing to wall



Warning:

In order to prevent overturning, this product must be used with the wall attachment device provided.

Use Screws(2 pcs) to fix Wall straps(2 pcs) onto the unit.

With help, move this product into position.



Warning:

This product is heavy.

Lift with care.

Mark fixing holes on wall and remove this product.


Drill 2 holes and insert Wall plugs(2 pcs) .



Warning:

Before drilling, check wall for hidden pipes and and cables.

Reposition this product and fix wall straps using Screws(2 pcs) .

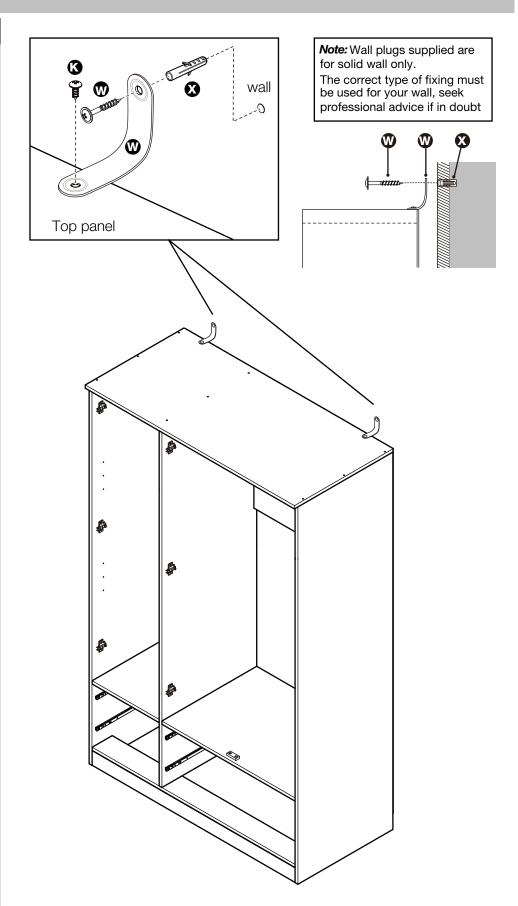


Step 17

Inserting drawers


a: Slide the drawers fully onto the runners so the runners butt up against the back of the drawer front.

 b: Fix through drawer



C: Slide the drawers fully onto the runners so the runners butt up against the back of the drawer front.


d: Fix through drawer sides into the runners using Screws **B**.

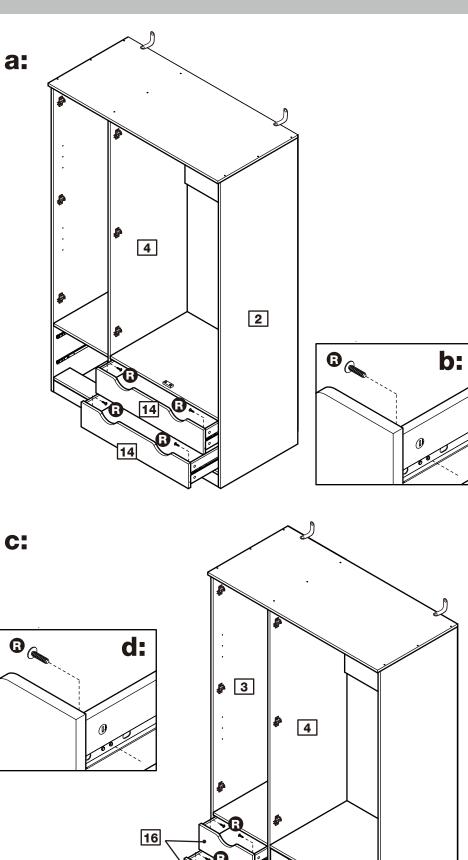

Step 18

Attaching hinges to doors

Fix 3 Door hinges **©** onto the Doors **13** using Screws **D**.

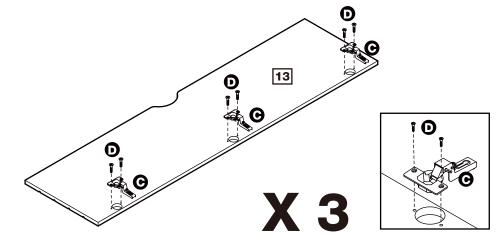

Step 19

Hanging doors

a: With help, slot Door hinges **©** onto 'hinge plates'.


b: Tighten screw shown to lock hinges in position.

Repeat **a** and **b** for opposite door.

See 'Hinge adjustment' in step 20 if the doors need adjusting.

Tear off the protective backing from the Door pads §.

Stick the Door pads **S** onto the Doors **13**.

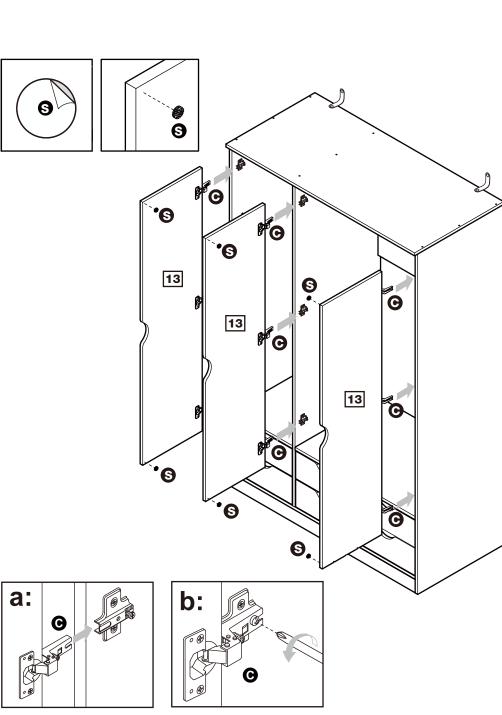



Step 20

Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.


Once doors are aligned, re-tighten Screws **D**.

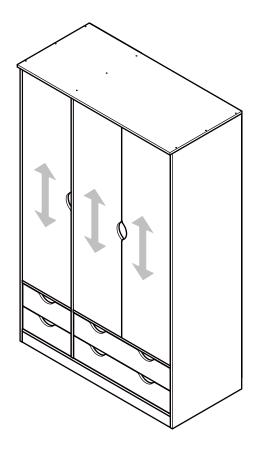


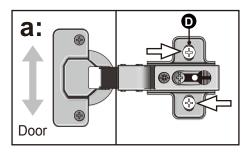

b: To move doors in or out: loosen screw shown and move doors to suit.

Re-tighten screws.

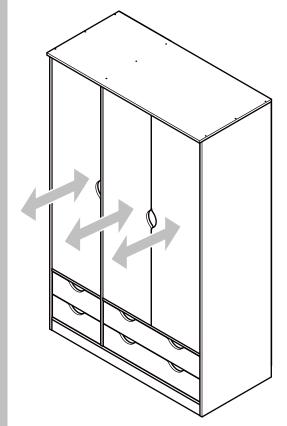


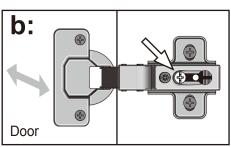


Step 20 - continued

C: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

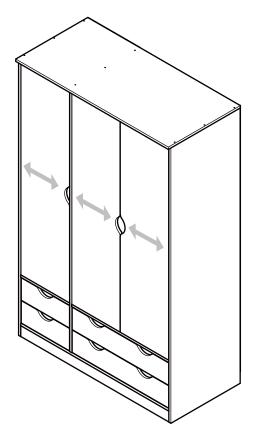

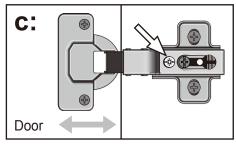

Step 21

Attaching the shelves

a: Place Clothes rail onto Rail supports (a).

b: Insert Shelf supports • into the unit. Ensure they are wall fitted before inserting the Shelves.

Note: Set the shelf supports to the desired height.


Slide the Shelves 7 onto the unit.

Tear off the protective backing from the Door pads S.

Stick the Door pads S onto the front edge of Shelves 7.

Note: Before use allow the glue to dry for 24 hours and make sure the unit is secure.

Assembly is complete.

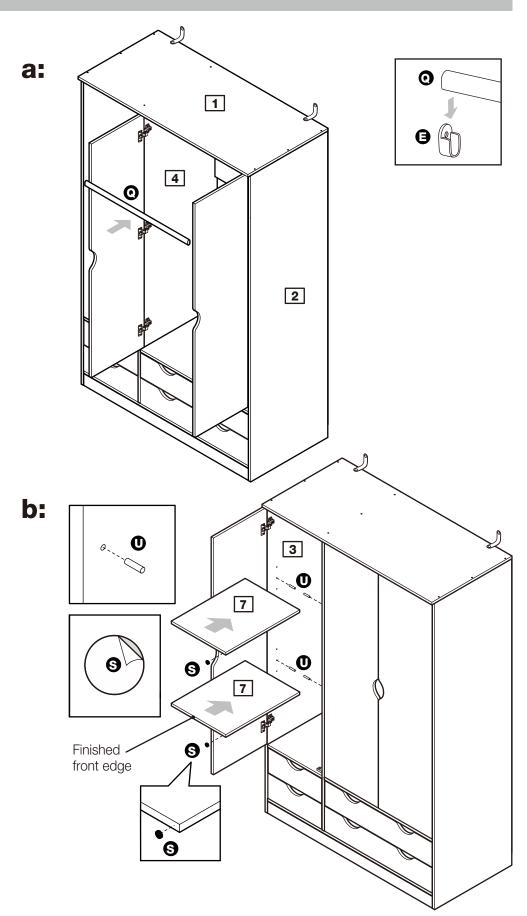

If you need help or have damaged or missing parts, call the Customer Helpline:

Argos = 0345 6400800

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule: Always use a larger screw and wall plug if you are not sure.
- **2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- **3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- **4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- **5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug




Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

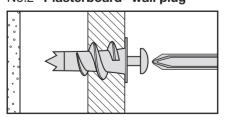


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug



For use with plasterboard partitions or hollow wooden doors.

 
No.4 "Cavity Fixing-Heavy Duty" wall plug



For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.


Safety: Always check the fitting and location to ensure your safety in and around the home.

 No.5 "Hammer Fixing" wall plug



For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads



For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.



Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.