 


Osaka 2 Door 2 Drawer Wardrobe

Assembly Instructions - Please keep for future reference

White 2499949

Black 2584483

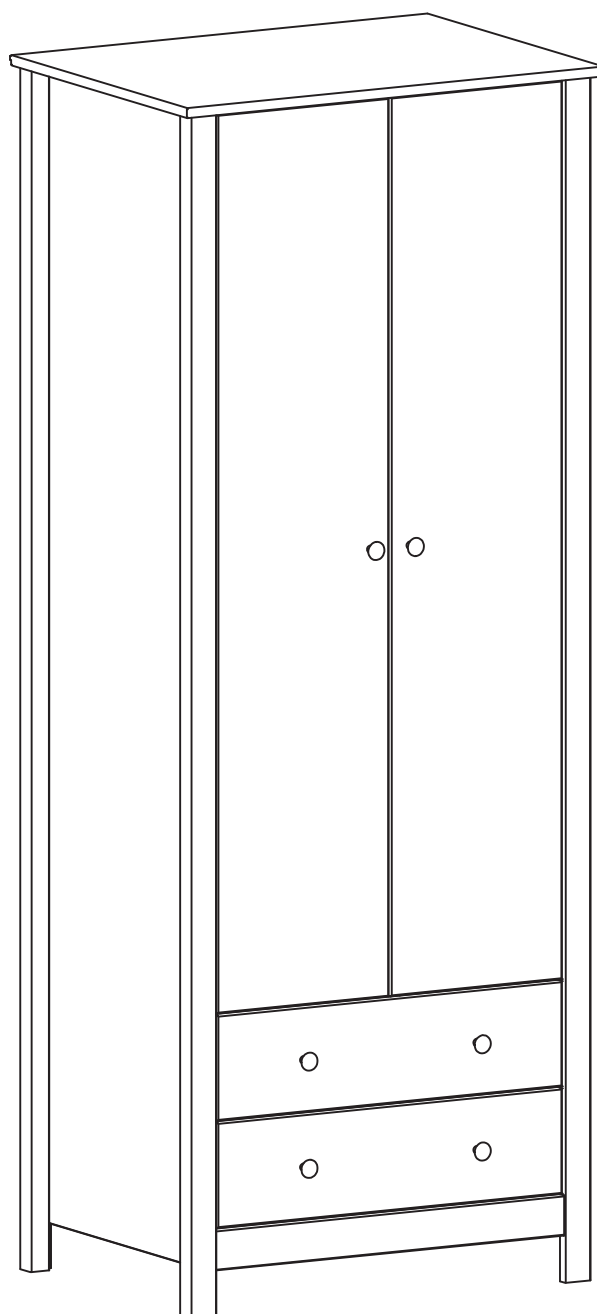

Dimensions

Width : 70.9 cm

Depth : 52.0 cm

Height: 181.2 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

 
- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**


Please check you have all the panels listed below

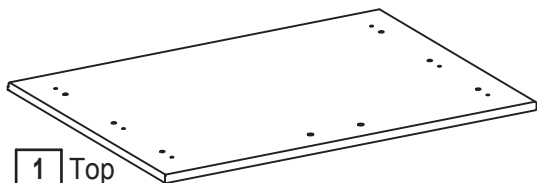


1 Top
(70,9 cm x 52 cm)

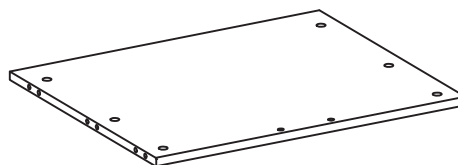 

5 Bottom
(59,1 cm x 48,4 cm)

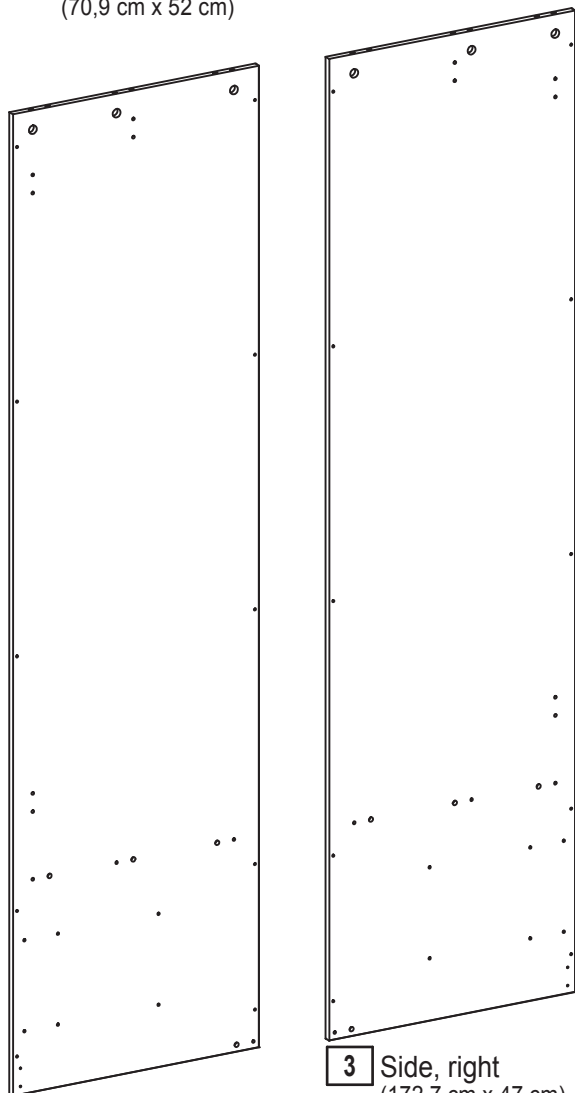 

2 Side, left
(172,7 cm x 47 cm)

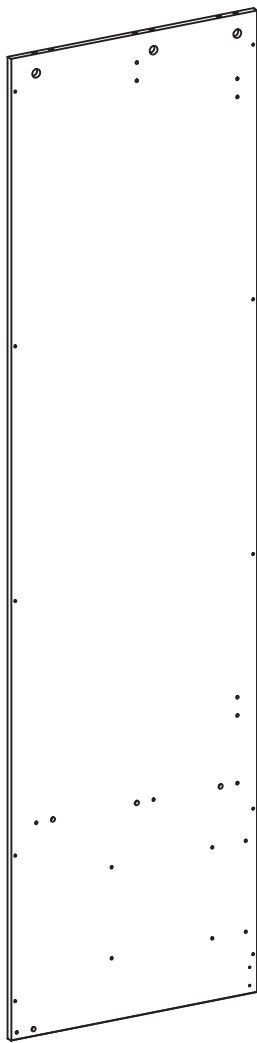 

3 Side, right
(172,7 cm x 47 cm)



4 Post x 4
(179,7 cm x 4,4 cm)



 
8 Back x 2
(172,9 cm x 30,5 cm)




6 Front rail
(59,1 cm x 6 cm)




7 Back rail
(59,1 cm x 7 cm)

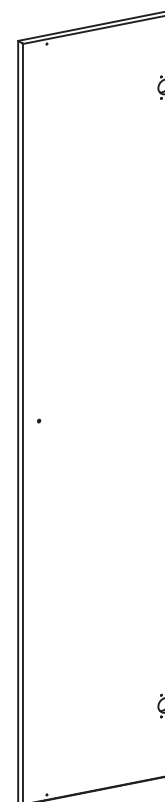

9 Door x 2
(134,1 cm x 29,1 cm)

 


14 H-profile
(134,0 cm x 1,7 cm)

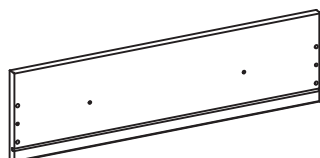 

10 Drawer front x 2
(58,5 cm x 15,7 cm)



 12 Drawer back x 2
(55,8 cm x 9,8 cm)



11 Drawer side, right/left x 4
(45 cm x 9,8 cm)



13 Drawer bottom x 2
(56,8 cm x 44,7 cm)








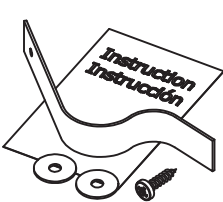

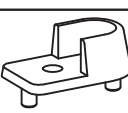
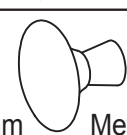
 












15 Hanging rail
(58,2 cm x 2,2 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

Aa  ø7.8 x 40mm Wooden dowel x 14	Ab  ø6 x 30mm Wooden dowel x 8	Bp  ø3 x 35mm Screw x 8
Bo  ø3 x 12mm Screw x 14	Ca  ø15 x 10.5mm Cam x 18	Cb  ø5 x 8, cc34mm Bolt x 18
Di  1.2 x 15mm Nail x 50	Fh  Wall strap and instruction x 1	Fi  Back fitting w. ø3.5 x 15mm Screw x 4
Fi  Support for hanger rail - 15mm x 2		Ge  ø27 x 24mm Metal Knob x 6
Hd  M4 x 20mm Screw x 6	Hk  M4 x 9mm Screw x 4	Jb  ø4 x 25mm Screw x 20
Kb  ø5.8 x 8mm Screw x 12	Ko  ø4,2 x 9,5mm Screw x 8	Mf  ø26mm Cup hinge x 4
Mc  0mm Crossplate x 4	Pc  Magnet, adjustable x 4	Pd  35 x 12 x 1mm Magnet catch x 4
Sa  310 x 17 x 10mm Drawer runner x 4	VI  44 x 23 x 23mm Angle x 2	

Tools required



 Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


 
Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

  Assembly of the wardrobe.

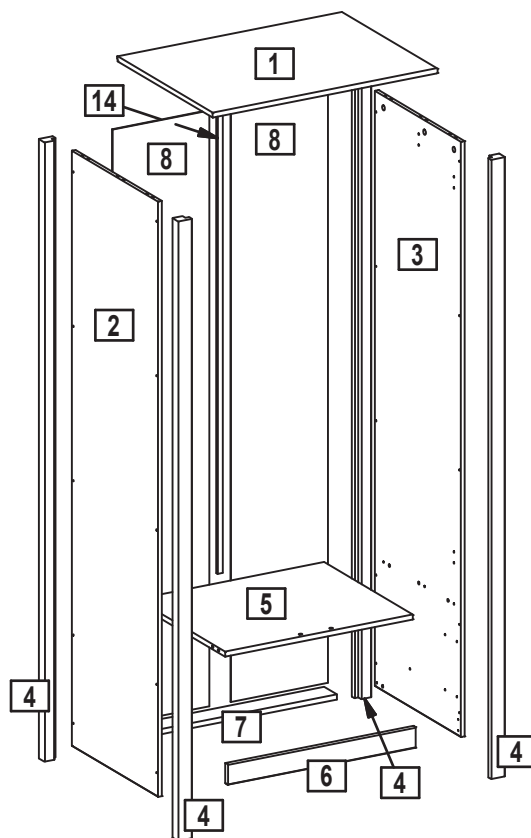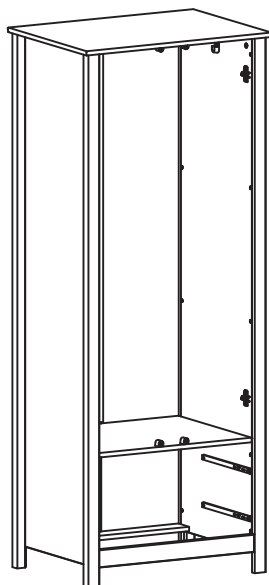

Step 1.1

 
Fix the posts **4** onto the sides **2** and **3** using screws **Jb** into the holes indicated.

The top of the posts **4** and the sides **2** and **3** must be flush.

Jb



ø4 x 25mm Screw x 20

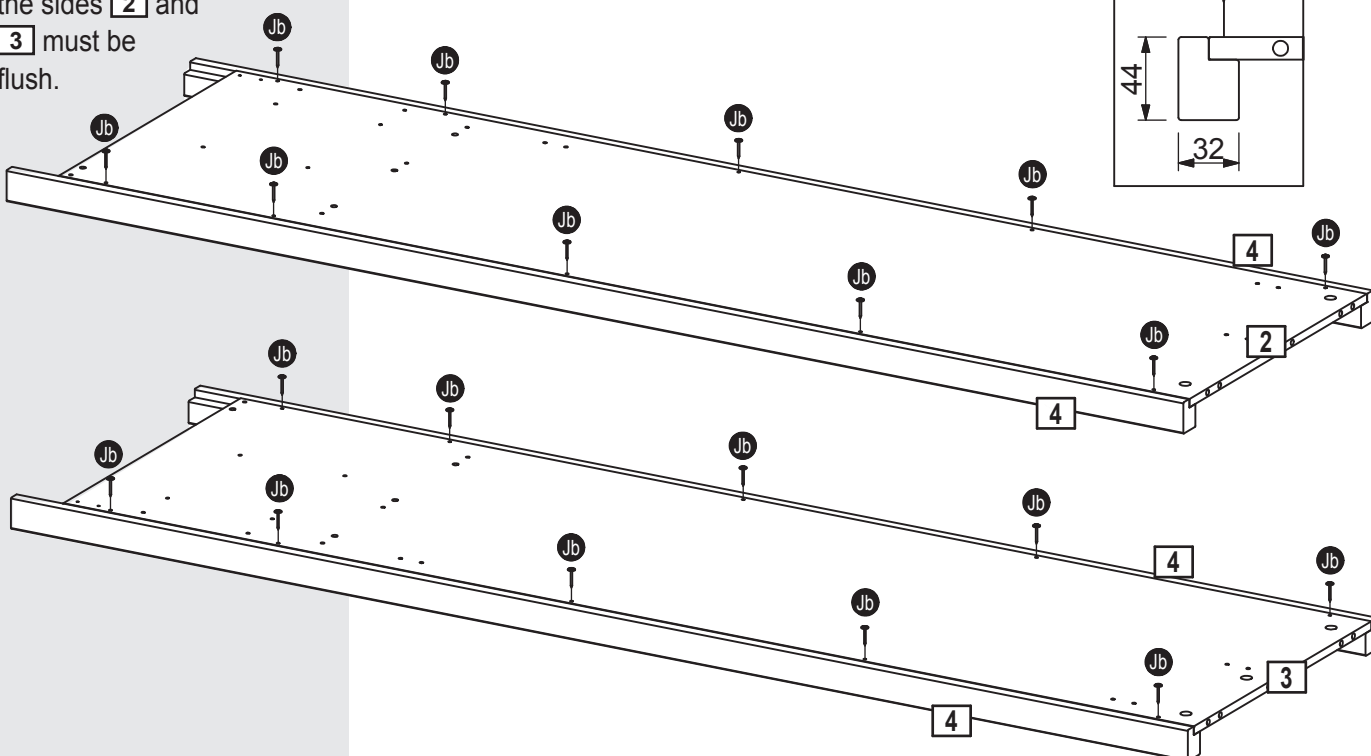

Assembly Instructions

Step 1.2

Knock the dowels **Aa** into the holes indicated on the sides **2** and **3** using a small hammer.

Screw the bolts **Cb** into the holes indicated on the sides **2** and **3**.

Aa

 


ø7.8 x 40mm Wooden dowel x 6

Cb



ø5 x 8, cc34mm Bolt x 8

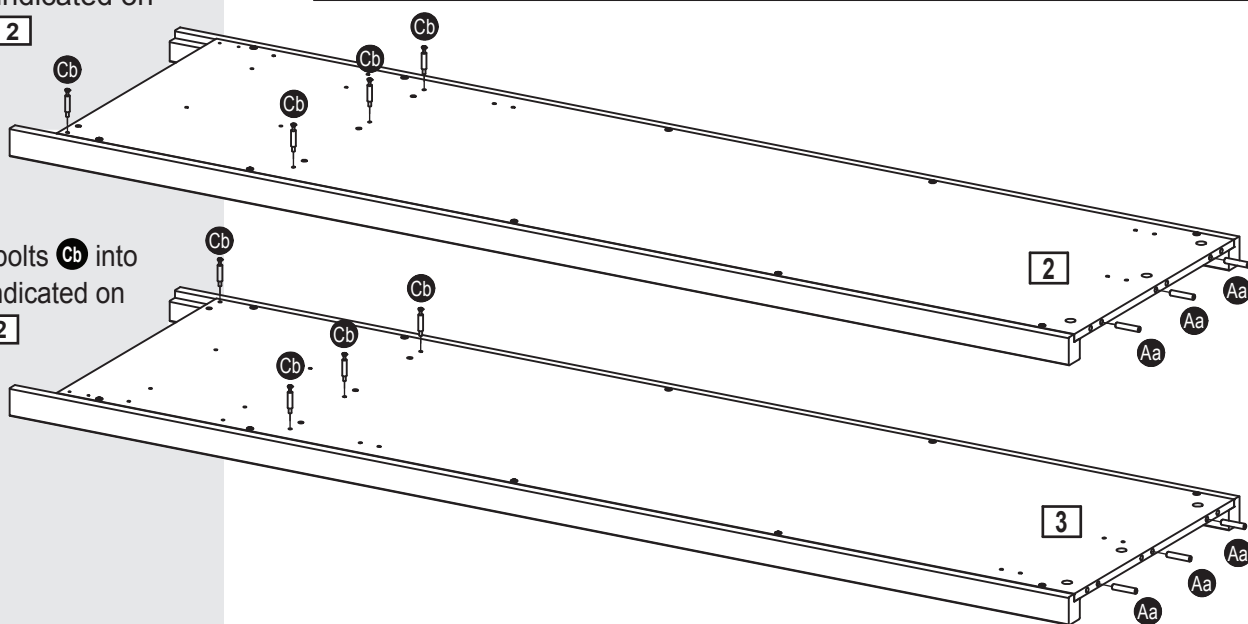

Step 1.3

Fix the Crossplates **Mc** to the sides **2** and **3** using the pre-mounted screws.

Note the details.

Position the Crossplates **Mc** exactly as shown.

Fix the supports for hangerrails **Fl** onto the sides **2** and **3** using screws **Bo**.

Bo



ø3 x 12mm Screw x 2

Fl

 


Support for hanger rail - 15mm x 2

Mc



0mm Crossplate x 4

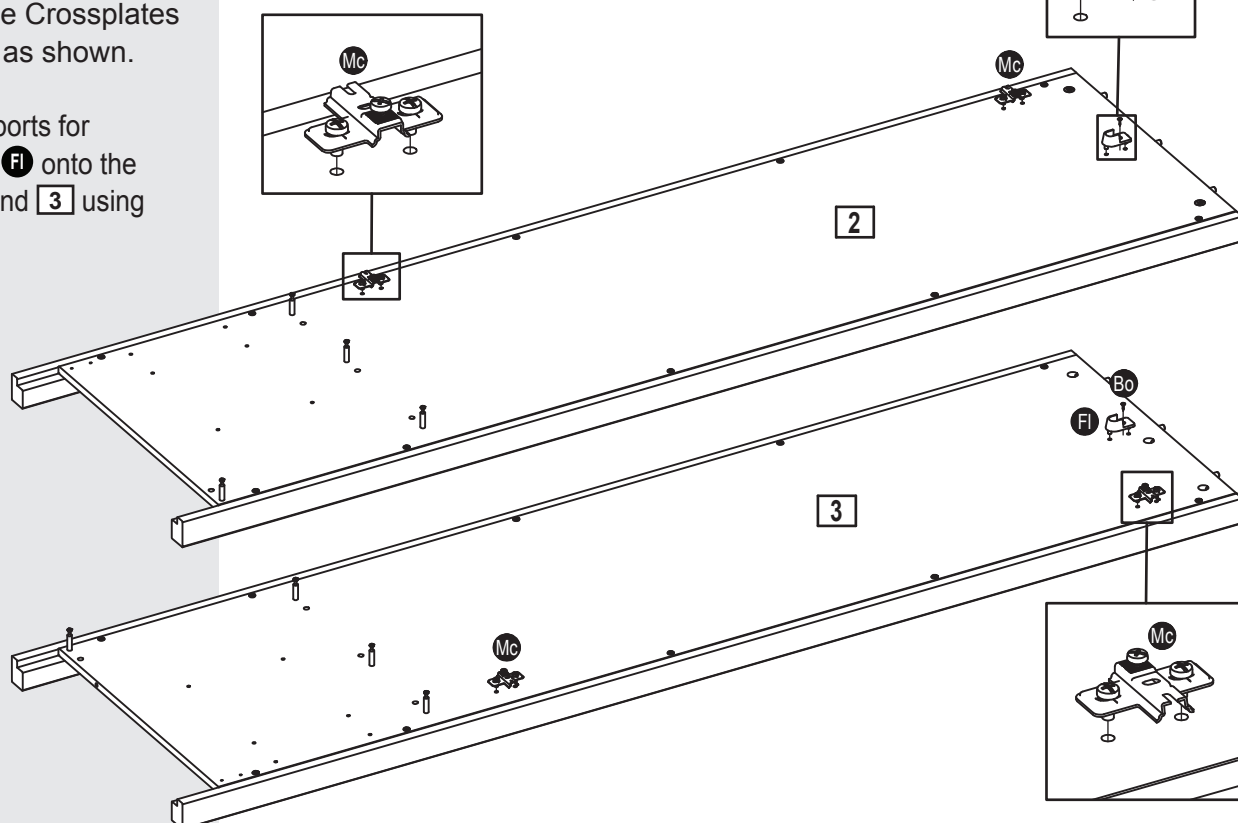


Assembly Instructions

Step 1.4

Slide the top of the drawer runners **Sa** backwards. You can identify the front end of the drawer runner **Sa** by the two M4 holes. See details.

Fix the front end of the drawer runners **Sa** to the sides **2** and **3** using screws **Kb** through the holes number 1 and 7 as indicated.

 See details.

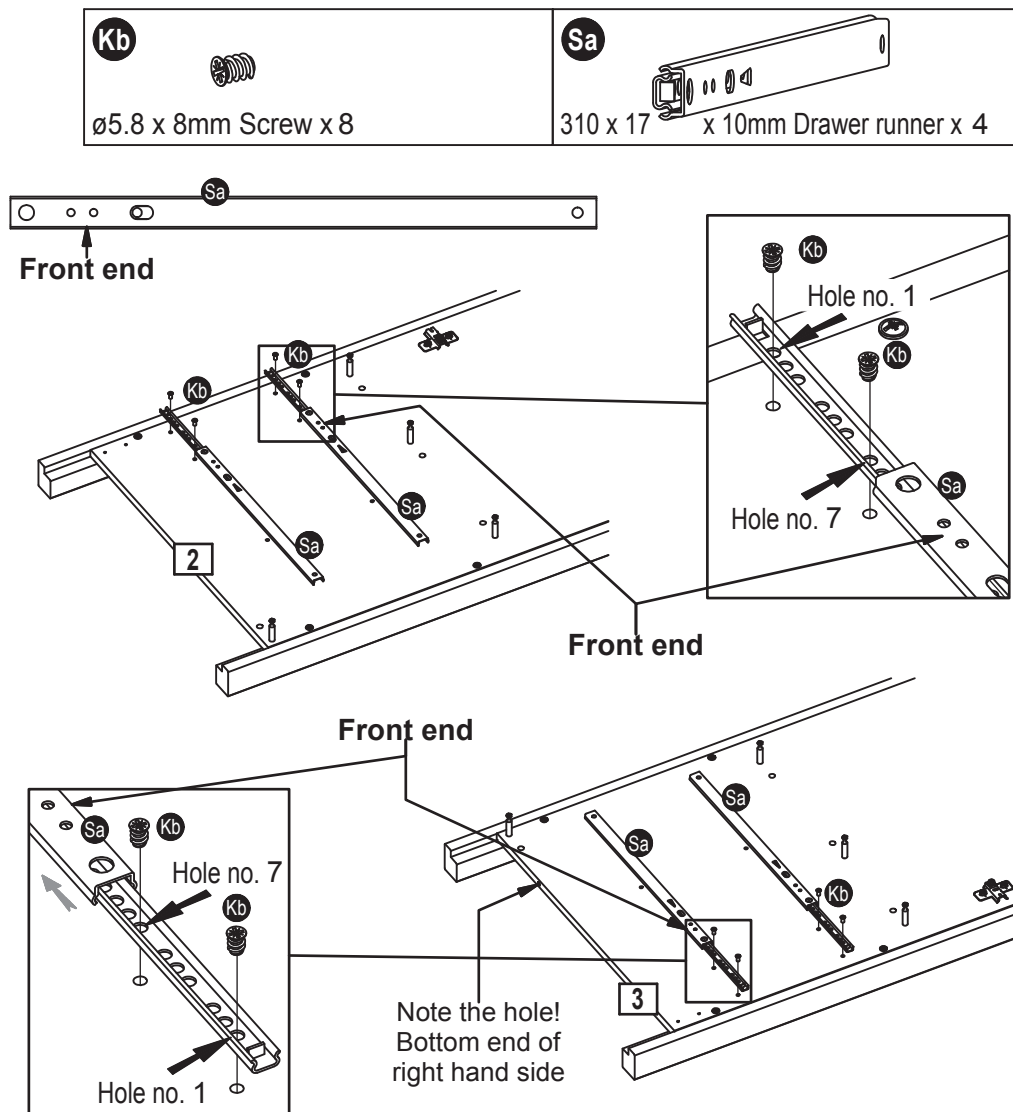


Step 1.5

Slide the top of the drawer runners **Sa** forwards.

Fix the drawer runners **Sa** to the sides **2** and **3** using screws **Kb** through the holes indicated.



 
See details.

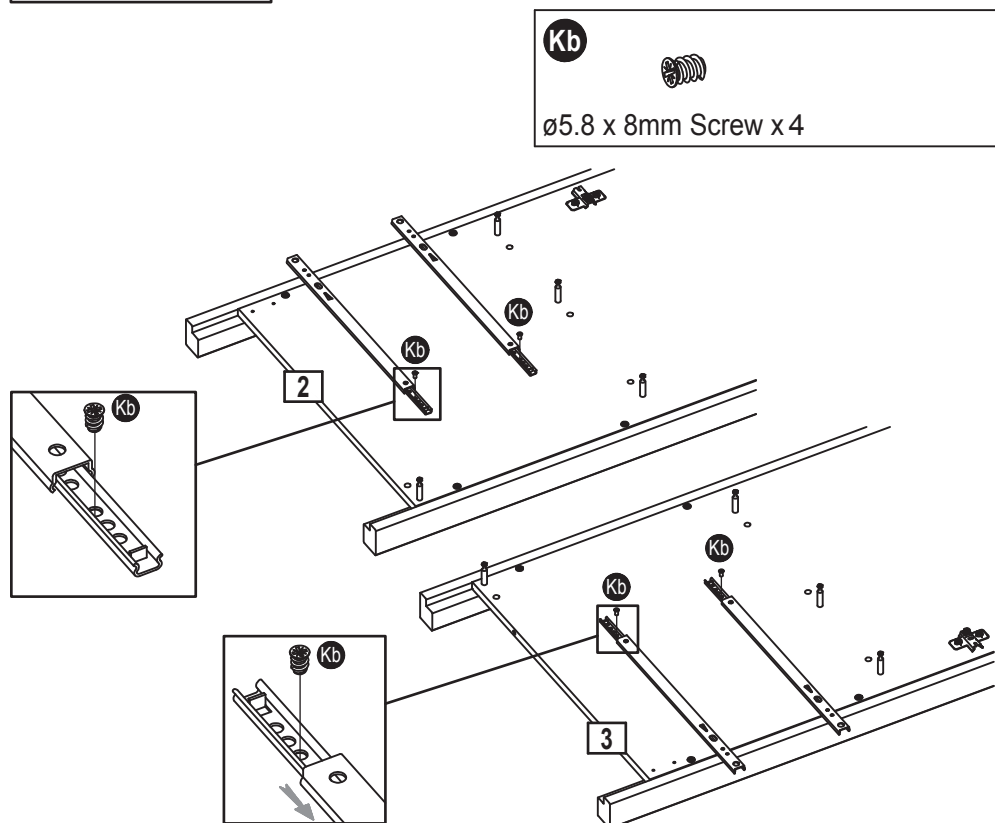

Assembly Instructions

Step 1.6

   
Fix the angles **VI** using screws **Ko** into the holes indicated on the front rail **6**.

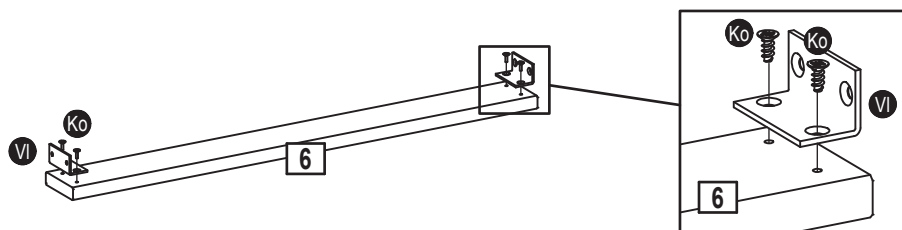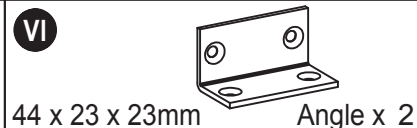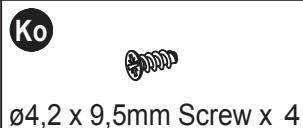

Step 1.7

Knock the dowels **Aa** into the holes indicated on the bottom **5** and the back rail **7** using a small hammer.


 
Press the magnets **Pc** into the holes indicated on the bottom **5**.

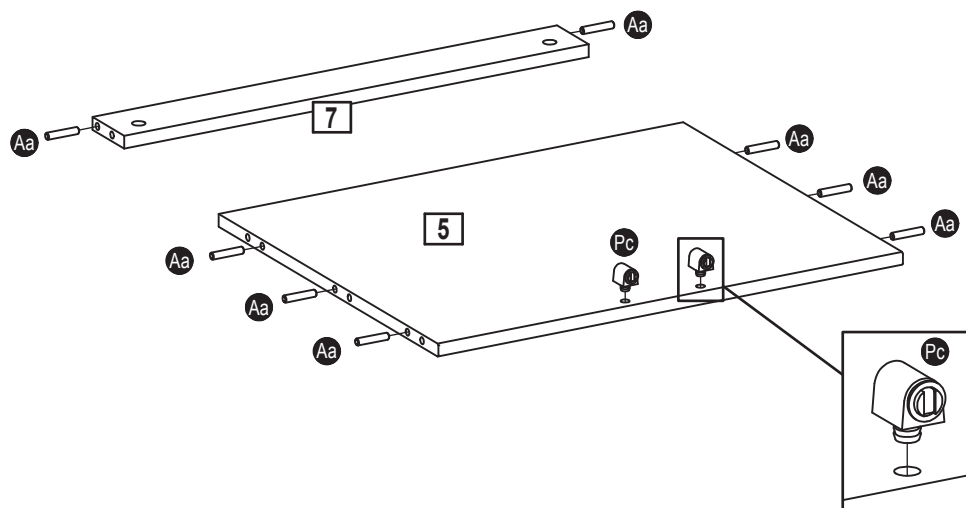

Step 1.8

Screw the bolts **Cb** into the holes indicated on the top **1**.

  Press the magnets **Pc** into the holes indicated on the top **1**.

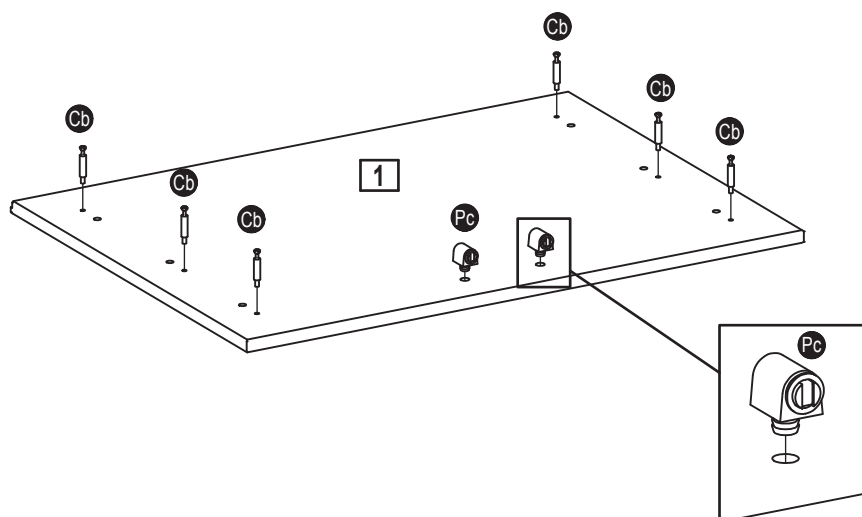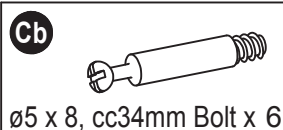


Assembly Instructions

Step 1.9

Place the sides **2** and **3** onto the bottom **5** and the back rail **7**.

Push cams **Ca** into the holes indicated on the bottom **5** and the back rail **7**. Arrows pointing towards the sides **2/3**.

 Turn the cams **Ca** to the right to fix the sides **2** and **3**.

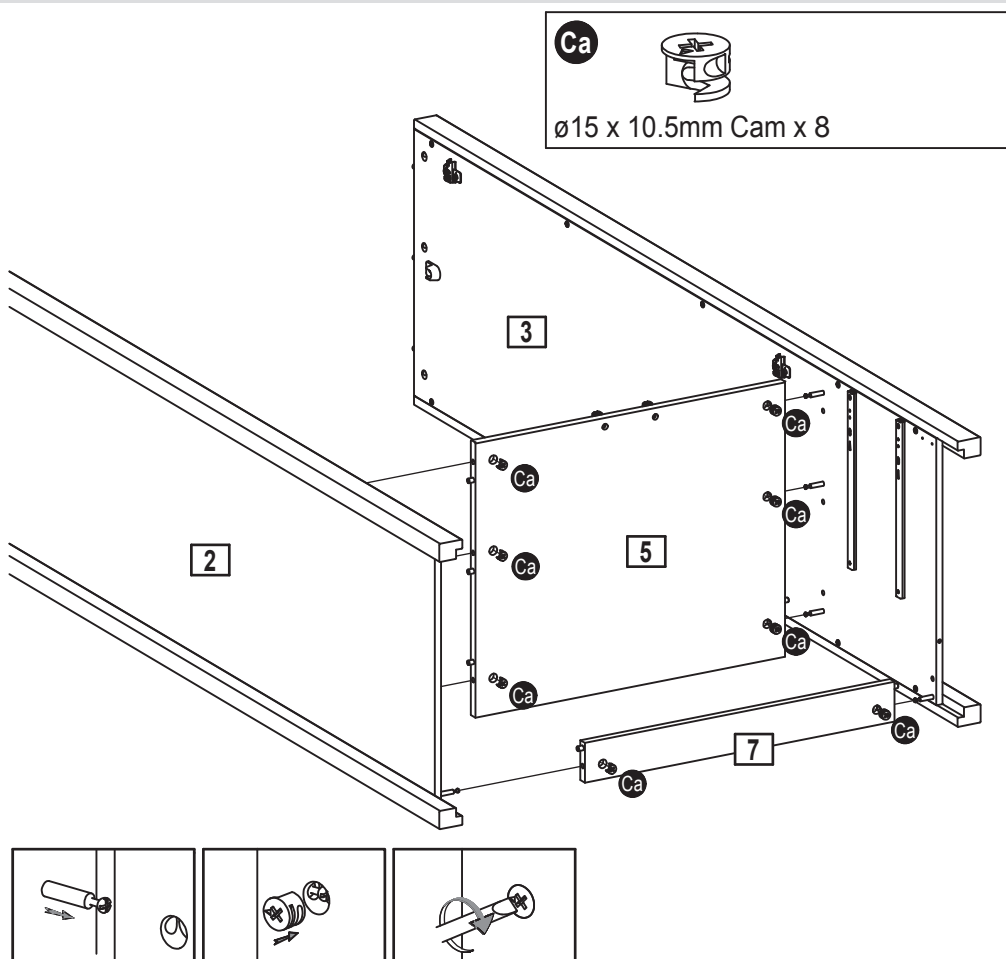


Step 1.10

Place the top **1** onto the sides **2** and **3**.

Push cams **Ca** into the holes indicated on the sides **2** and **3**. Arrows pointing towards the top **1**.

 Turn the cams **Ca** to the right to fix the top **1**.

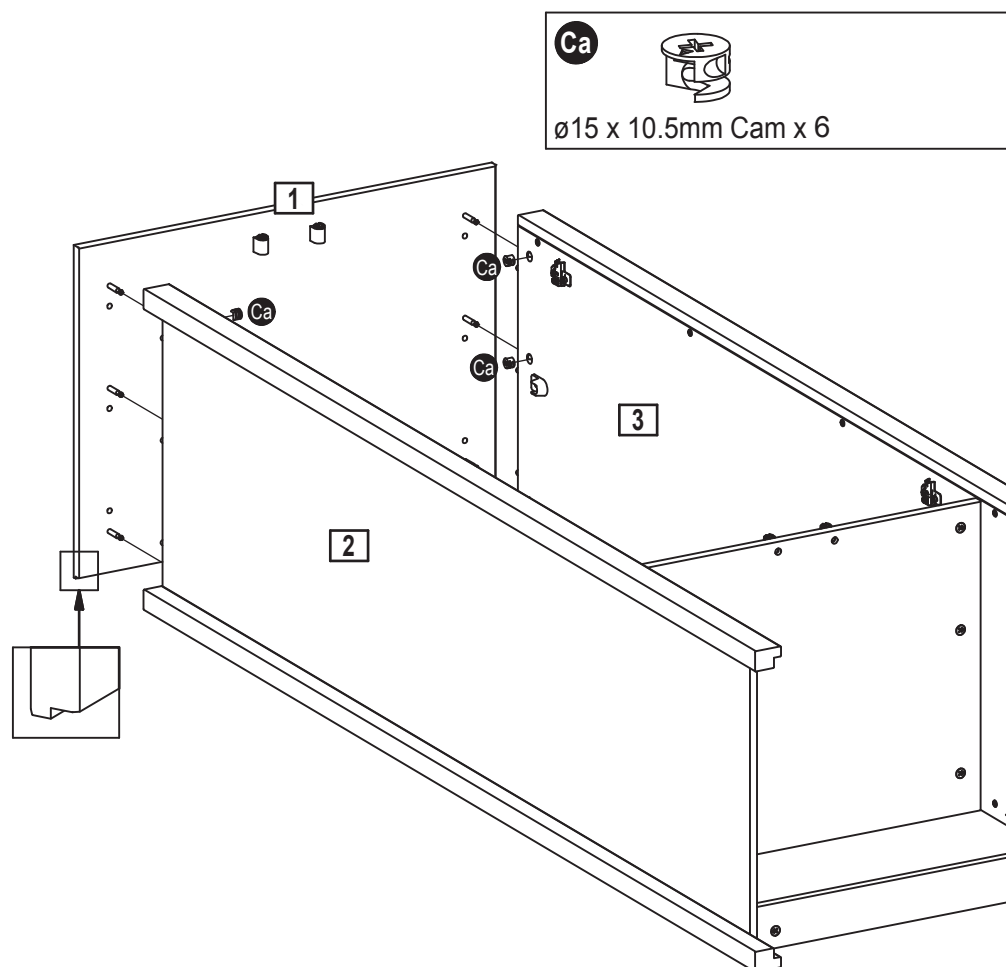


Assembly Instructions

Step 1.11

Place the front rail **6** as shown.

Fix the angles **VI** to the sides using screws **Ko**.

 See detail.

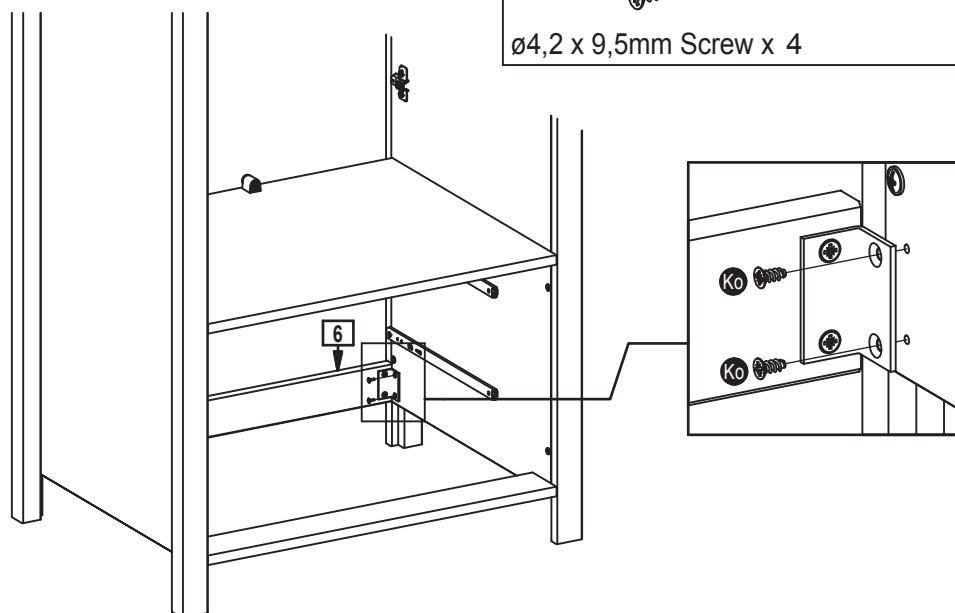

Step 1.12

Place the backs **8** into the rabbet on the top **1** into the H-profile **14** and onto the posts **4**.

 


Important!

Make sure the angle between the top **1** and the posts **4** is 90° when the backs **8** is attached.

Fix the backs **8** to the top **1**, the posts **4** and the back rail **7** using nails **Di**.

Use a small hammer.

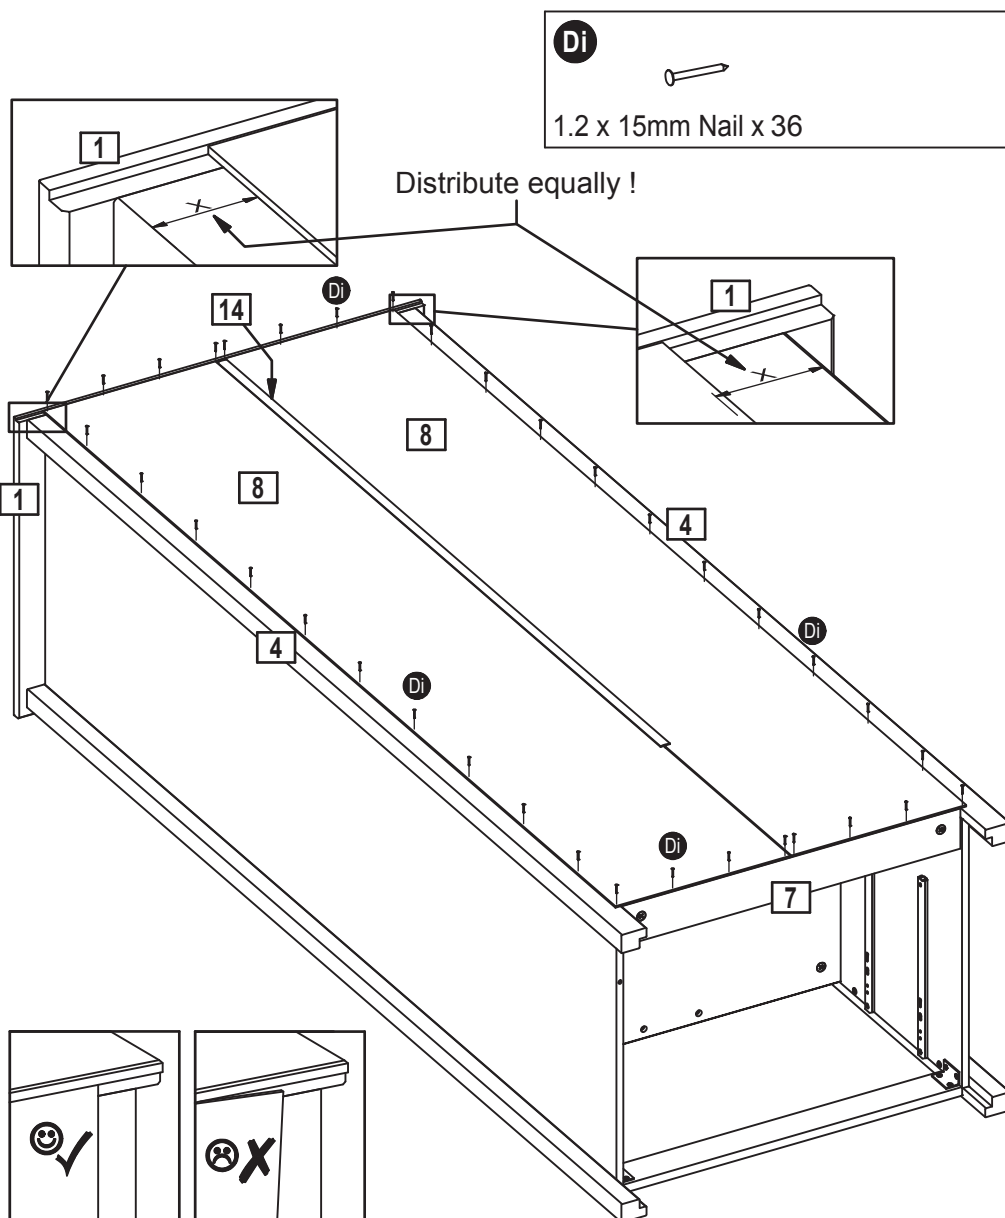

Assembly Instructions

Step 1.13

 


Important!

The wardrobe is heavy. Lift with care.

It's recommended that the wardrobe is fixed to the wall.

Use the fittings **Fh**. Follow the instructions included with the fittings.

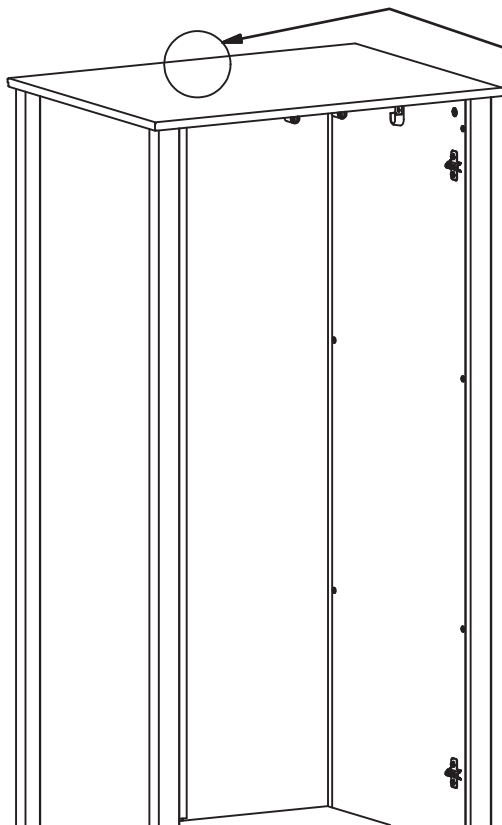



Fh



Wall strap and instruction x 1

Step 2

  Assembly of the drawers.

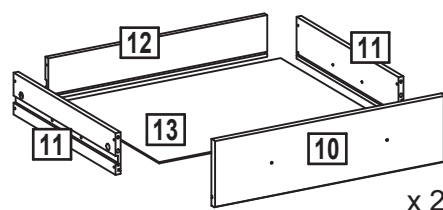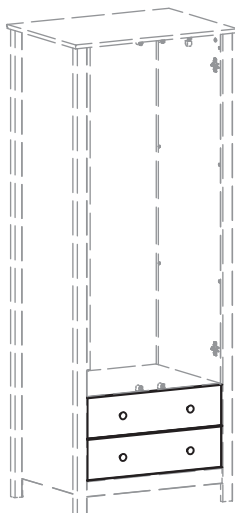


Step 2.1

Fix the drawer sides **11** to the drawer back **12** as shown, using screws **Bp**.

Bp



 Ø3 x 35mm Screw x 8

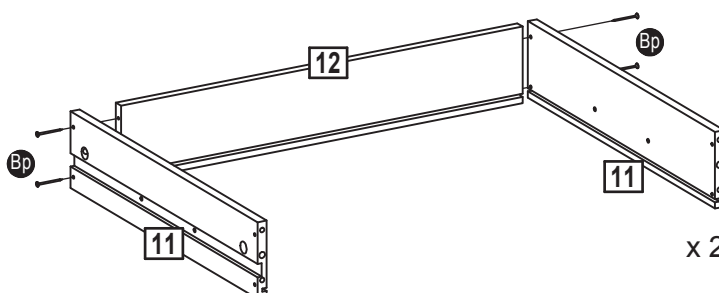

Assembly Instructions

 
Step 2.2

Knock the dowels **Ab** into the holes indicated on the drawer sides **11** using a small hammer.

Ab




ø6 x 30mm Wooden dowel x 8

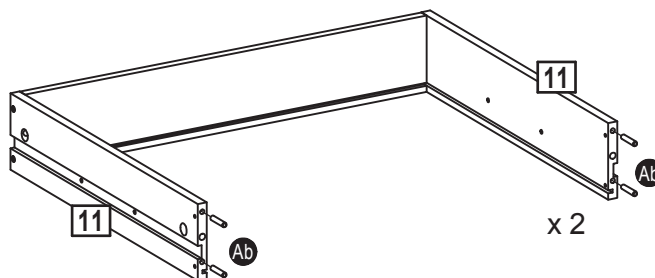

Step 2.3

 Slide the drawer bottom **13** into the drawer sides **11**.

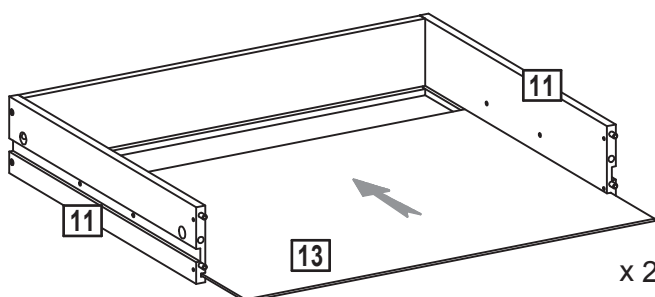


Step 2.4

Screw the bolts **Cb** into the holes indicated on the drawer front **10**.

Cb



 ø5 x 8, cc34mm Bolt x 4

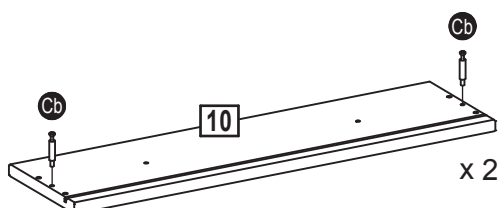

Step 2.5

 
Push the drawer front **10** onto the drawer sides **11**.

Place cams **Ca** into the holes indicated. Arrow pointing towards the front. Turn the cams **Ca** to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 4

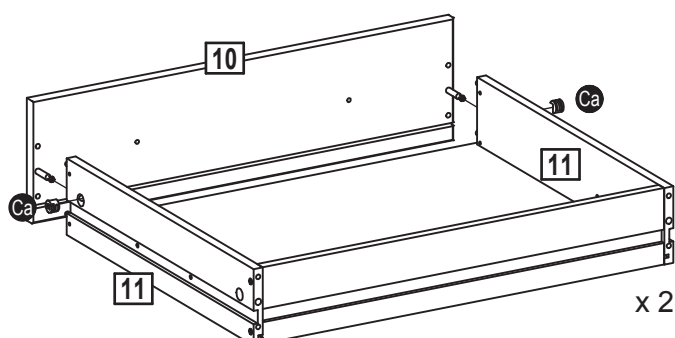

Assembly Instructions

 
Step 2.6



Important!

Make sure the angle between the drawer front **10** and the drawer sides **11** is 90° before the drawer bottom **13** is fixed using **Fi** as shown.


To adjust the angle between the drawer sides and the fronts push the fitting **Fi** sideways. See details.

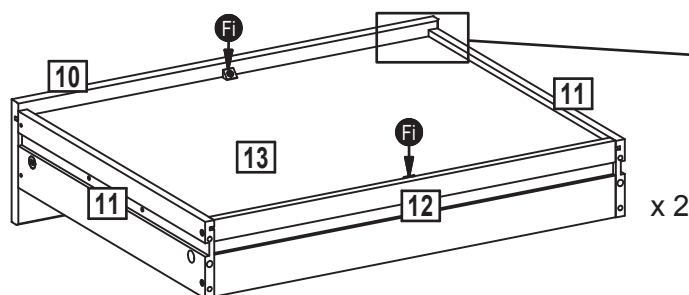

Fi



 Back fitting w. $\varnothing 3.5 \times 15\text{mm}$ Screw x 4

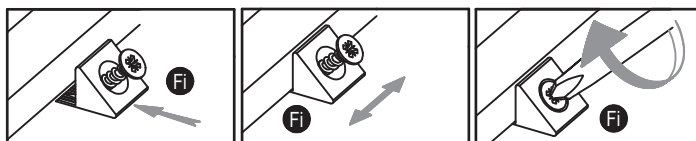

Ge



 
$\varnothing 27 \times 24\text{mm}$

Metal Knob x 4

Hd



M4 x 20mm Screw x 4

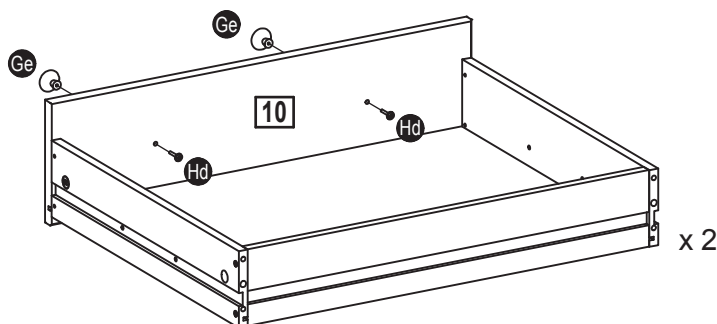

Step 2.7

Fix the metal knobs **Ge** to the drawer front **10** using screws **Hd**.

Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

 
Fit and fix the lower drawer first and work your way up.

Fix drawers to the drawer runners using screws **Hk**.

Hk





M4 x 9mm Screw x 4

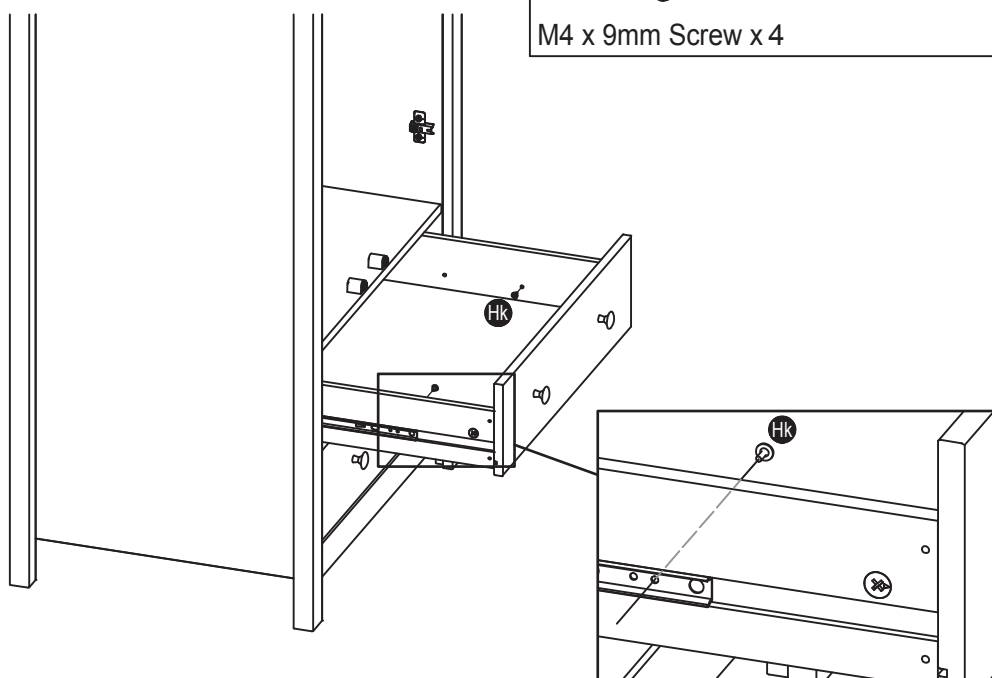

Assembly Instructions

Step 3

  Assembly of the doors.

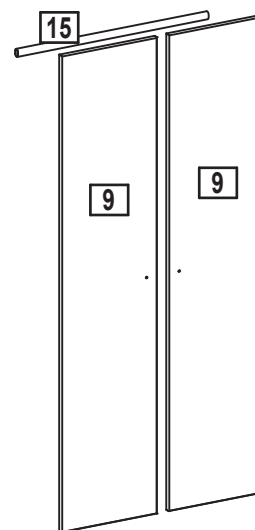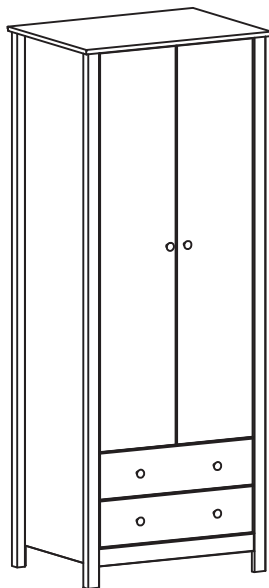

Step 3.1

Place the cup hinges **Mf** into the holes indicated on the doors **9**.
Fix the hinges using screws **Bo**.

Fix the magnet catches **Pd** using screws **Bo** into the holes indicated.

Bo



ø3 x 12mm Screw x 12

Mf



 
ø26mm

Cup hinge x 4

Pd



35 x 12 x 1mm Magnet catch x 4

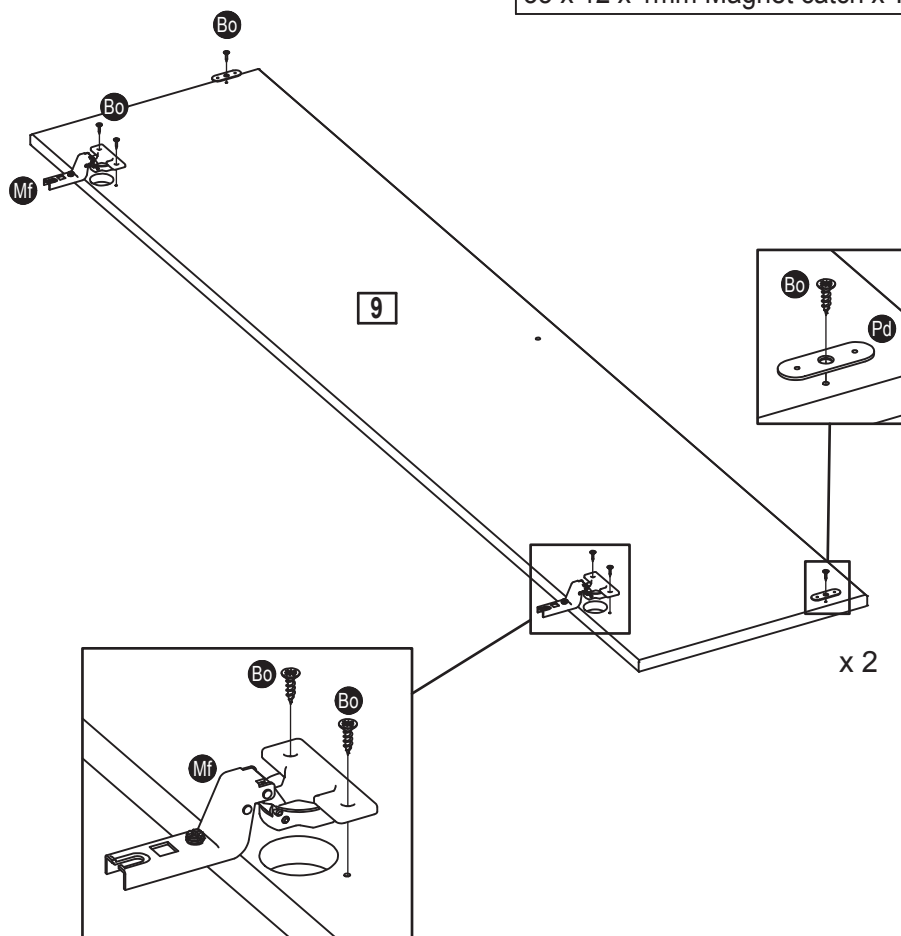

Assembly Instructions

 
 
Step 3.2

Place the hanger rail **15** into the supports **Fi**.

Slide the cup hinges **Mf** onto the crossplates **Mc**.

Fix the hinges using the premounted screw in the crossplates.

See details below on how to fit the cup hinge **Mf** onto the cross plate **Mc**.

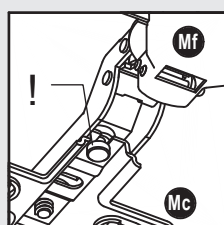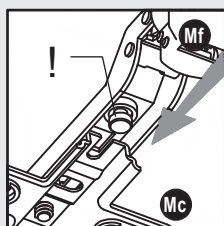


Fix the metal knobs **Ge** to the doors **9** using screws **Hd**.

Adjust the magnets **Pc**.

Ge

 ø27 x 24mm






Metal Knob x 2

Hd



   M4 x 20mm Screw x 2

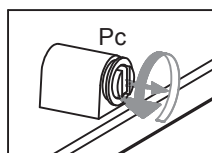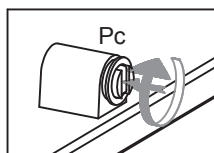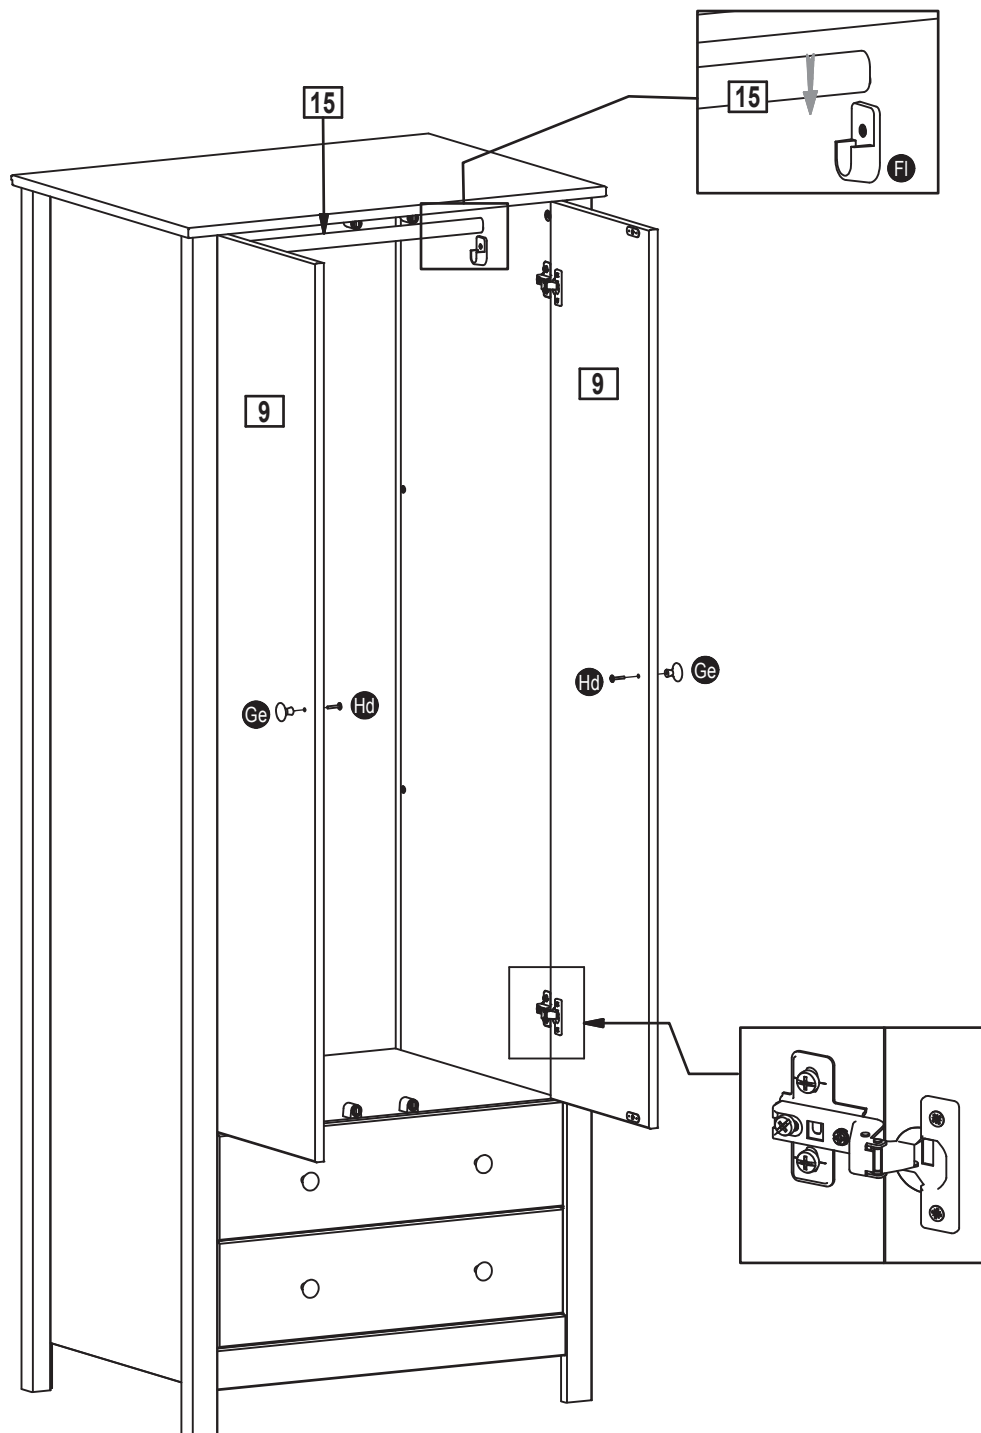



Assembly Instructions

Step 3.3


Adjusting the doors left/right.

a:
To adjust the door towards the left hand side - turn the adjusting screw to the right.

  b:
To adjust the door towards the right hand side - turn the adjusting screw to the left.

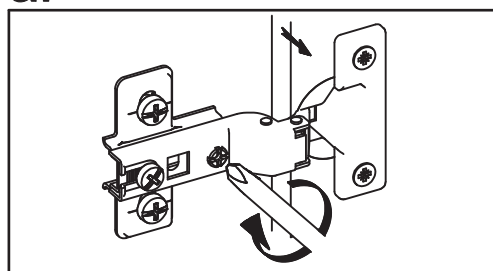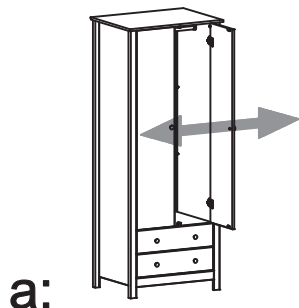

b:


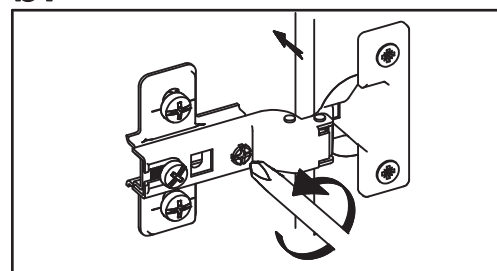 


Adjusting the doors forwards/backwards.


a:
Loosen the fixing screw.

b:
Push the cup hinges / the door forwards OR backwards to adjust.

  
c:
Tighten the fixing screws of ALL the crossplates.

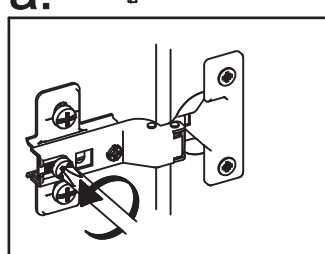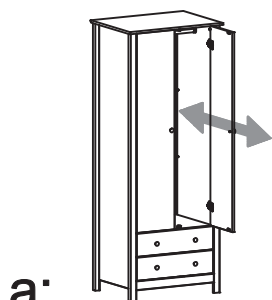

b:

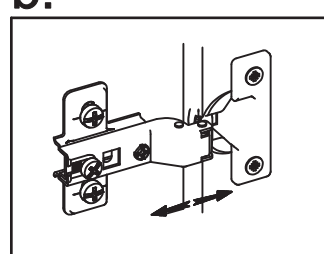 

c:


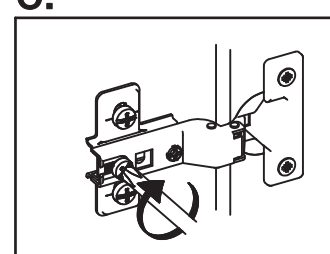 


Adjusting the doors up/down.


a:
Loosen the two pre-mounted screws of each crossplate, BUT ONLY as much as it will allow the cross plate to move up and down.

b:
Push the the door up OR down to adjust.

  
c:
Tighten the pre-mounted screws of ALL the crossplates.

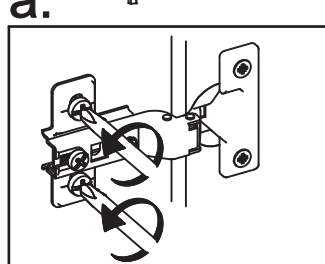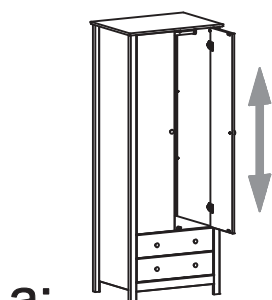

b:

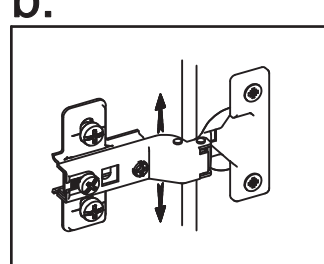 

c:

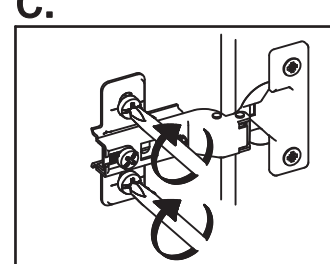 

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**
Home Retail Group - 489-499 Avebury Boulevard - Saxon Gate West - Central Milton Keynes MK9 2NW