
# Large Corner TV Unit

Assembly Instructions - Please keep for future reference

609/5394

609/5404

609/5411

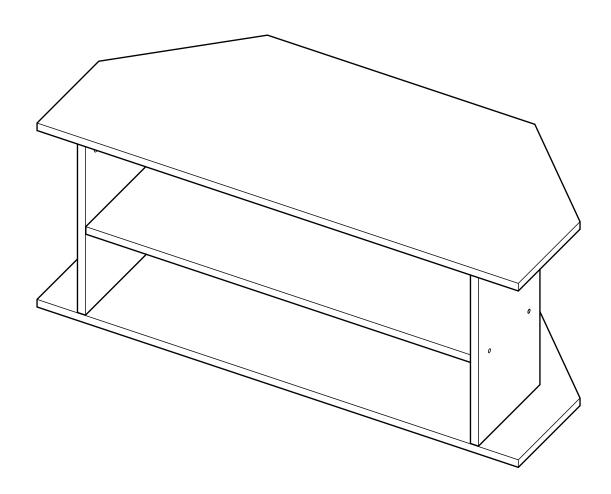

#### **Dimensions**

Width - 90cm

Depth - 40cm

Height - 38cm

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



# Safety and Care Advice

#### Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, if small parts are swallowed, it can cause choking.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the unit, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Do not use this unit if any components are missing or damaged.



 We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

 Dispose of all packaging carefully and responsibly.


#### Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This unit should not be discarded with household waste.
   Take to your local authority waste disposal centre.


**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

# Components - Panels


### Please check you have all the panels listed below

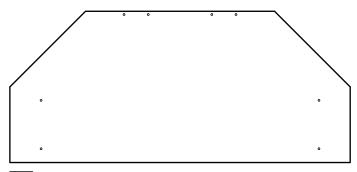


1 Top panel (90 x 40cm)

 


**2** Left side panel (33.5 x 19.9cm)

 

**3** Right side panel (33.5 x 19.9cm)

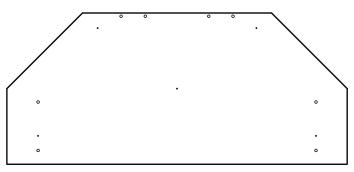

4 Bottom panel (90 x 40cm)

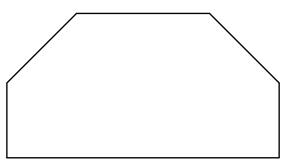

**5** Middle panel (72 x 38.2cm)



**6** Back panel x 2 (33.5 x 12cm)



# Components - Fittings

 
If you have damaged or missing components, call the **Customer Helpline: 08456 400800** 

### Please check you have all the fittings listed below


**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<b>₽</b>	<b>B</b> (3)	
57mm Screw x 16	Plastic plug x 4	Locking pin x 8
0		<b>6</b>
Locking nut x 8	17mm Screw x 5	Feet x 5

### Tools required



## Ruler - Use this ruler to help correctly identify the screws

 


# **Assembly Instructions**

## Step 1


#### Fitting the side panels

a: Use screws A to fix left side panel 2 and right side panel 3 onto middle panel 5.

**b:** Use screws **A** to fix back panels 6 onto the unit.

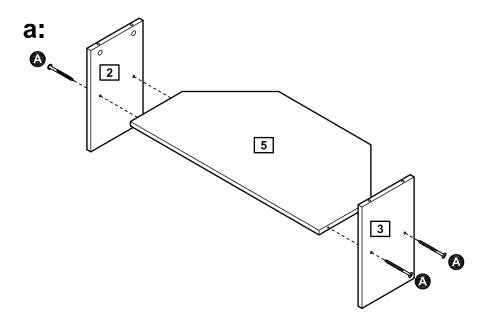

b:

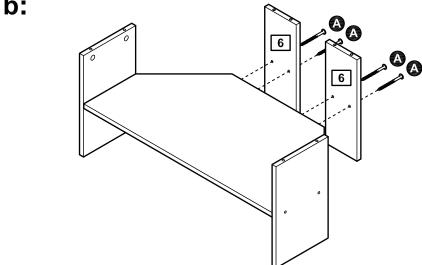


### Step 2

#### Fitting the bottom panel

a: Use screws 1 to fix feet ponto bottom panel 4.

Continued on next page.

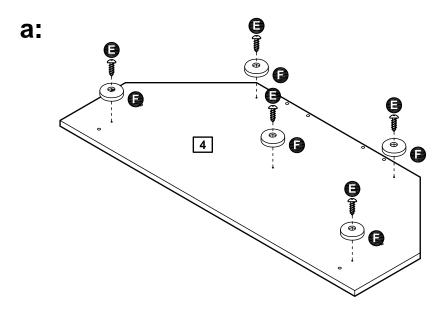

## Assembly Instructions

## Step 2 - continued

**b:** Use screws **A** to fix bottom panel **4** onto the unit.

## Step 3


#### Fitting the top panel

a: Screw locking pins (c) into top panel (1).

Note: Fit the locking pins (c) to the depth shown in the detailed view.

**b:** Carefully place the top panel 1 onto the unit.


Continued on next page.

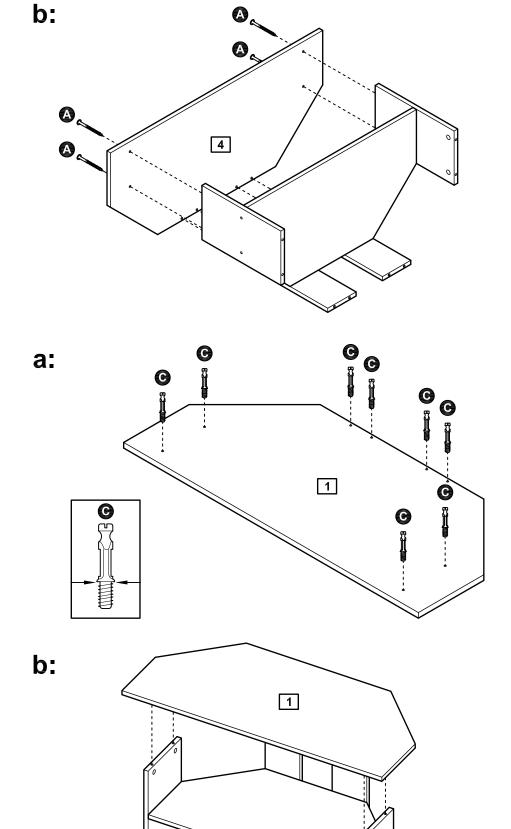

## Assembly Instructions

## Step 3 - continued

**C:** Insert locking nuts **D** into the unit, then use a screwdriver to turn locking nuts **D** clockwise to lock as shown in the two detailed views.

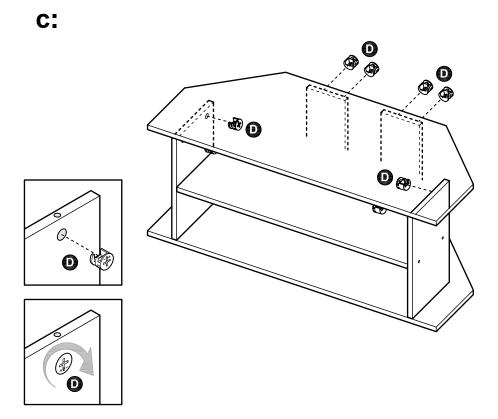


## Step 4

#### Finish the unit

**a:** Use plastic plugs **1** to cover the screw heads.

a:

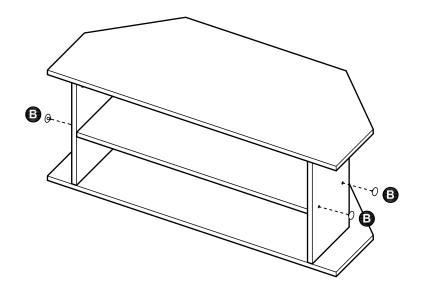

Assembly is complete.

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800