 


BALI TV UNIT OMO

Assembly Instructions - Please keep for future reference

xxx/xxxx

xxx/xxxx

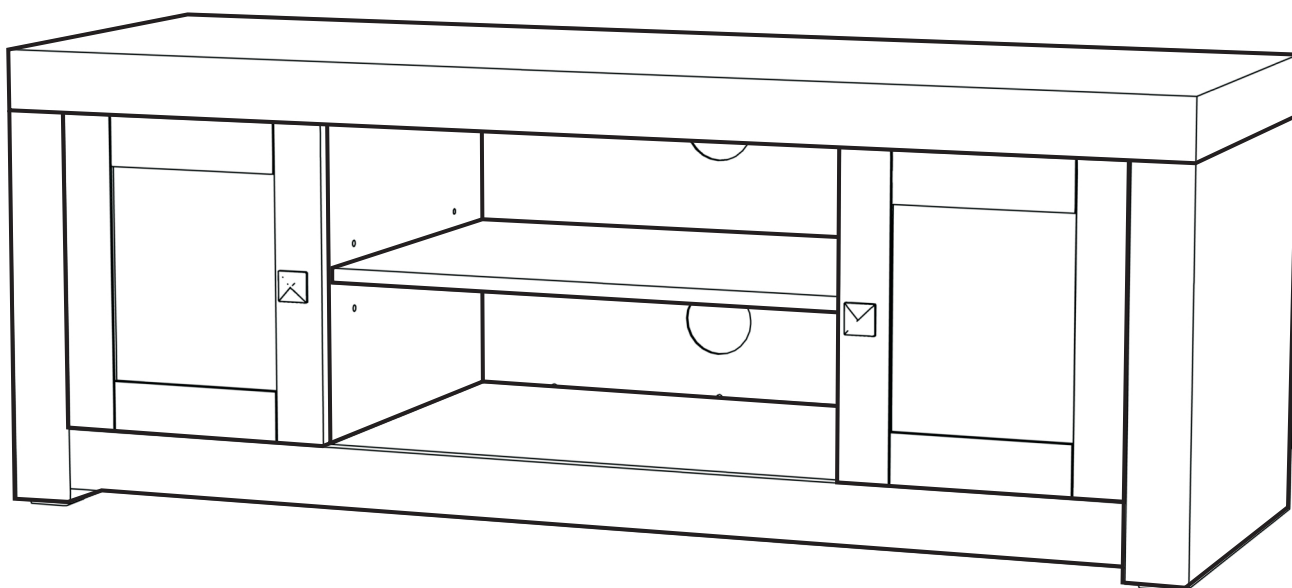

Dimensions

Width - 120cm

Depth - 40cm

Height - 45cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand on the panels, this could cause damage.
- Assemble the unit as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/ drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- **Warning:** The unit weighs approximately 28.3kgs. **Please lift with care.**


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

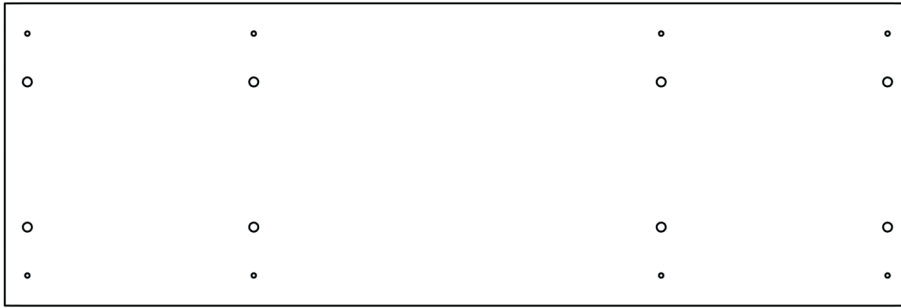

1 Top (120 x 39.7cm)

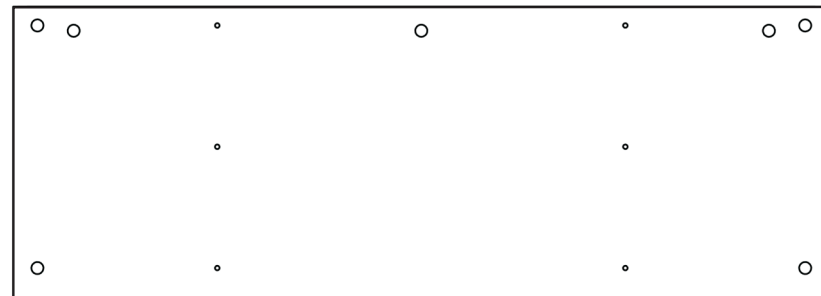 


2 Bottom (108.2 x 38cm)

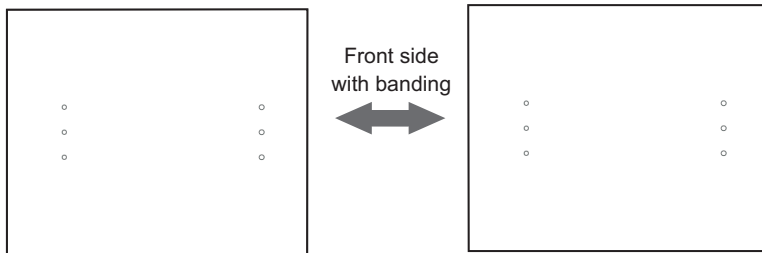 


5 Center right (38 x 30cm)

 
6 Center left (38 x 30cm)




7 Front apron (108.2 x 6cm)

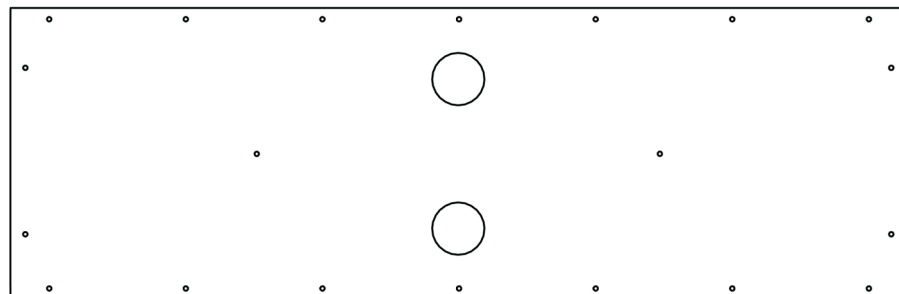 


8 Back (119.2 x 37.3cm)

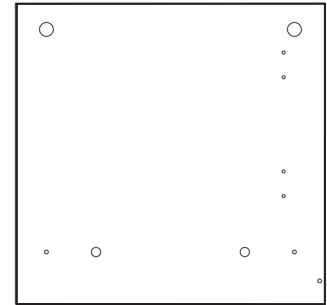 


3 Right side (39.6 x 39cm)

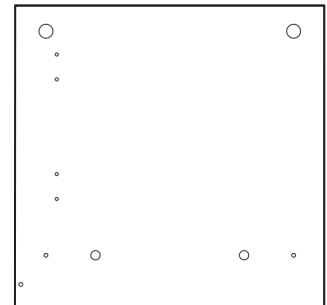 


4 Left side (39.6 x 39cm)

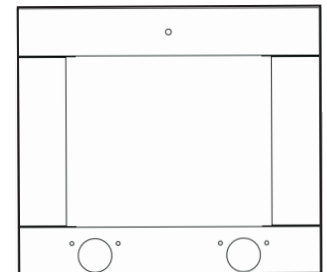 

9 Door x 2 (30 x 29.4cm)

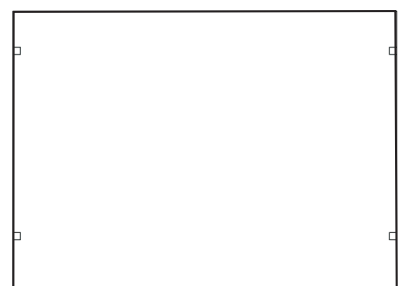 

10 Adjustable shelf (47.6 x 37.9cm)

  


 

 
 
 





11 Bottom post x 2 (6 x 6cm)


Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Locking pin x 17	B  Locking nut x 17	C  Short wood dowel x 14
D  Long wood dowel x 4	E  Long wood screw x 6	F  Foot pad x 6
G  Short wood screw x 34	H  Door Bracket x 4	I  Door knob x 2
J  Phillips head bolt x 2	K  Self support x 4	

 Tools required

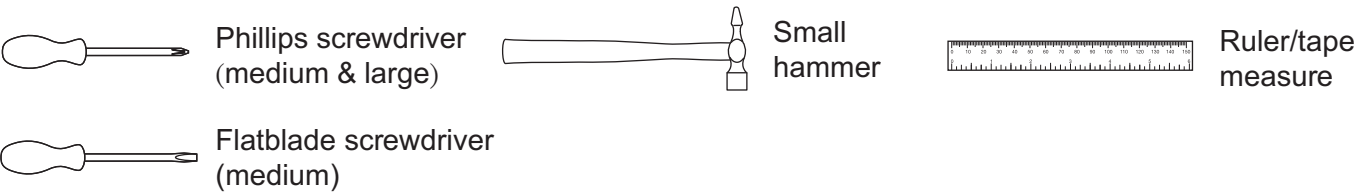

 Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

 
Step 1 and 2

Fitting lock pin

Note: Assemble on a soft level surface or on the original packing material to avoid damaging the unit or your floor.


Note: It would be useful to ask someone to help you at this stage.

a: Screw the Lock pin **A** onto Top **1** and Right side **3** and Left side **4** and Front apron **7**.

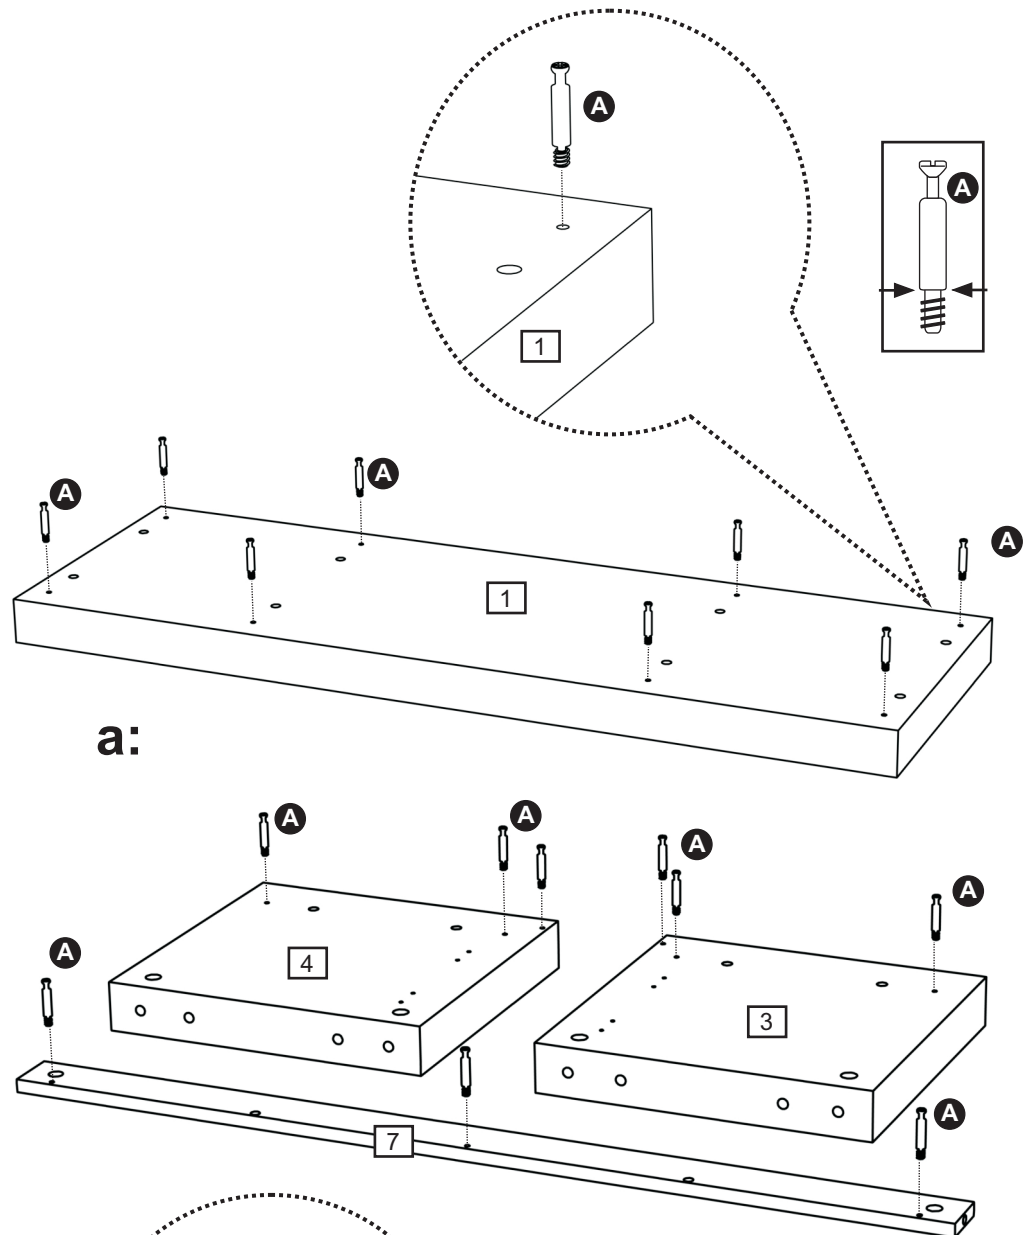

Fitting front and bottom

 b: First Insert Short Dowels **C** into Bottom **2**. Attach the Front apron **7** onto the Bottom **2** with Locking nut **B** to tighten.

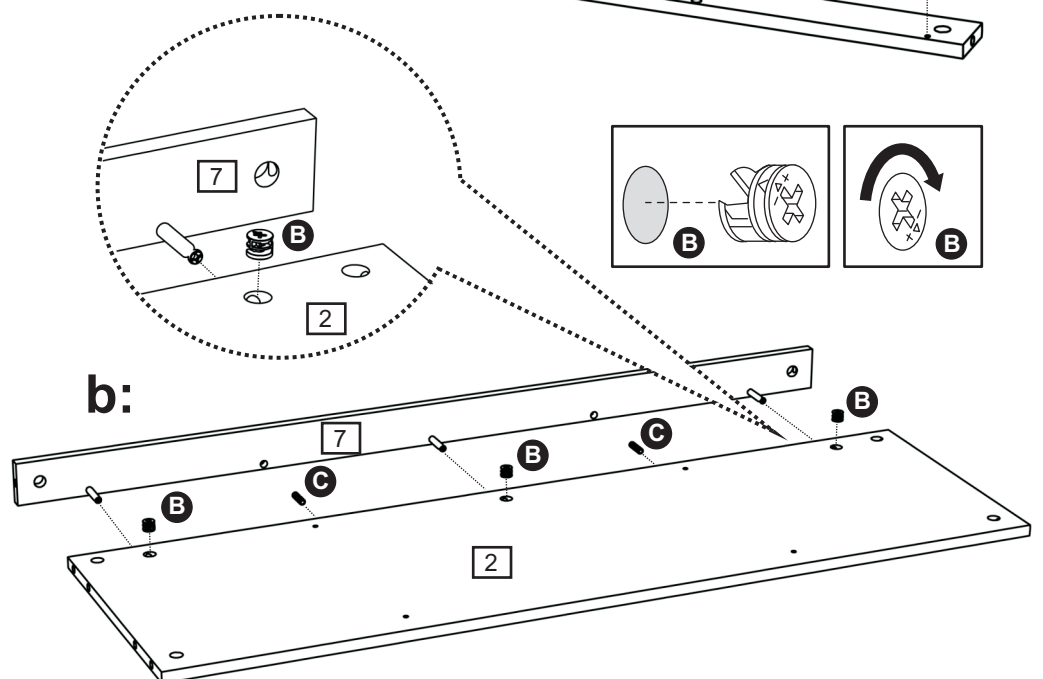

Assembly Instructions

Step 3 and 4

 
Fitting center and bottom and bottom support

a:First Insert Short Dowels

Ⓒ into Center right [5] and Center left [6].

Attach the Center right [5] and Center left [6] onto the Bottom [2] with Long wood screw Ⓔ to tighten.

Use Long wood screw Ⓔ to fix Bottom post [11]

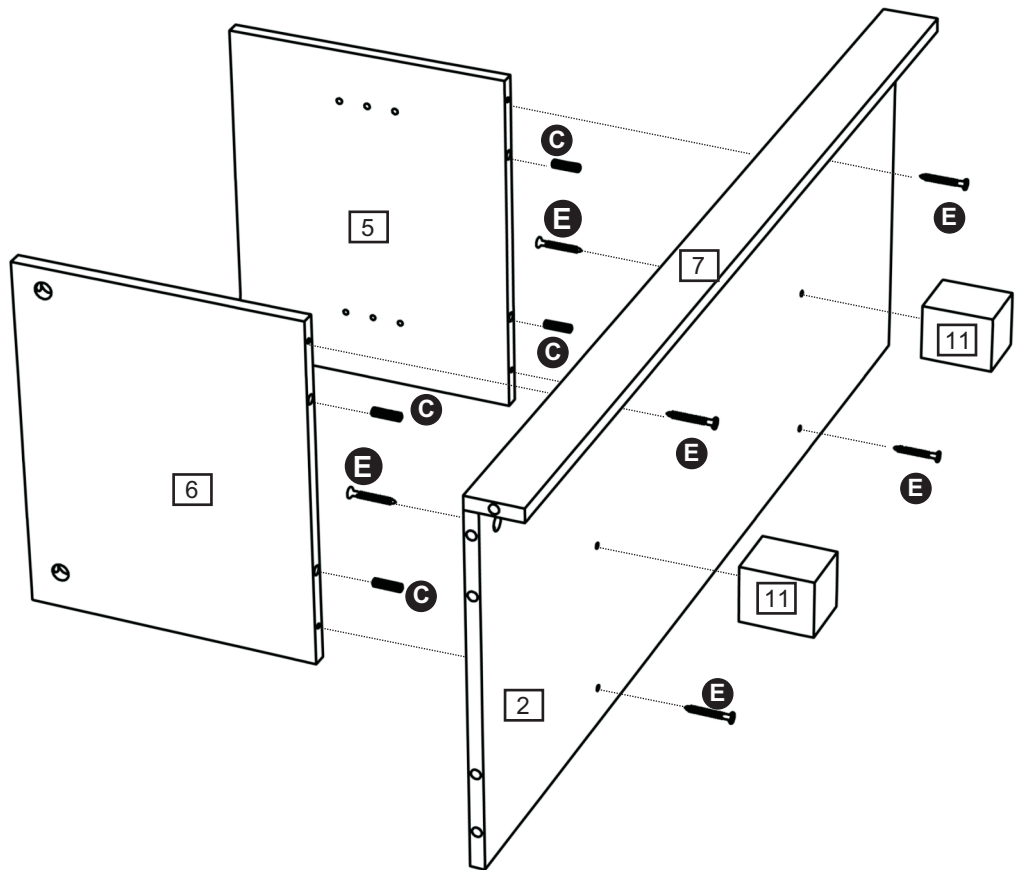


Fitting right side and left side .

b:First Insert Short Dowels

Ⓒ into Bottom [2].

 Attach the Right side [3] and Left side [4] onto the unit with Locking nut Ⓑ to tighten.

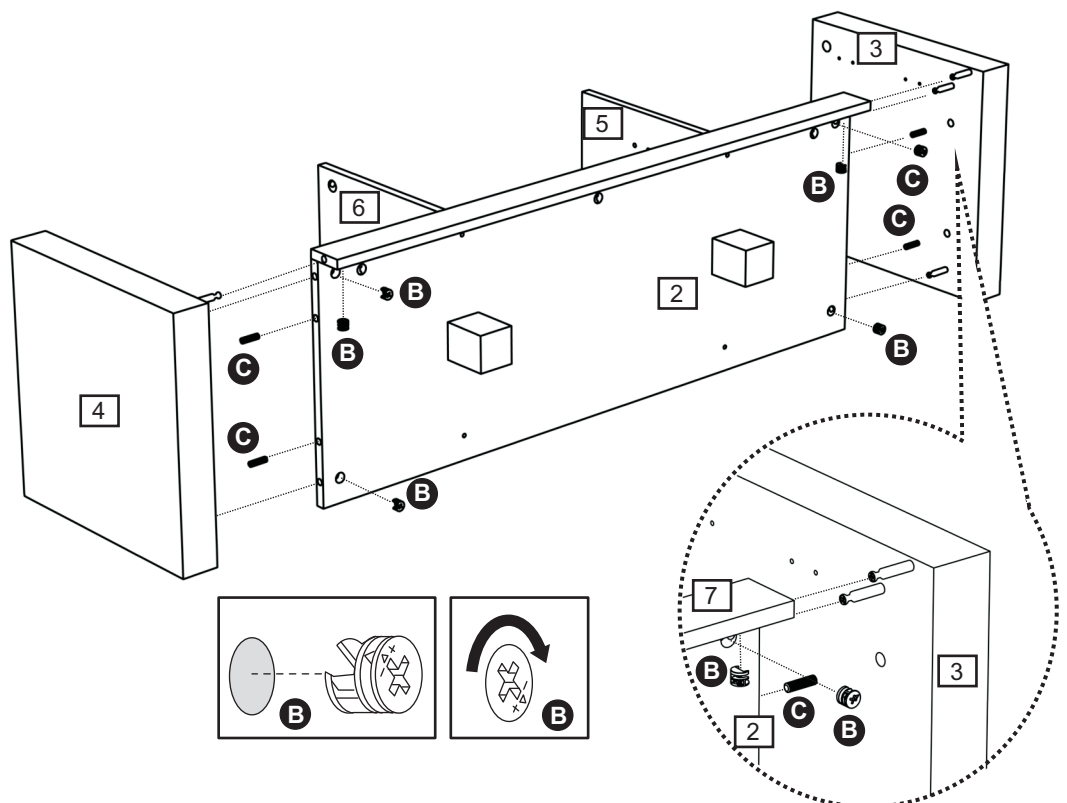


Assembly Instructions

Step 5 and 6

Fitting foot pad

 a: Sides, Stick Foot pad **F** onto the unit.

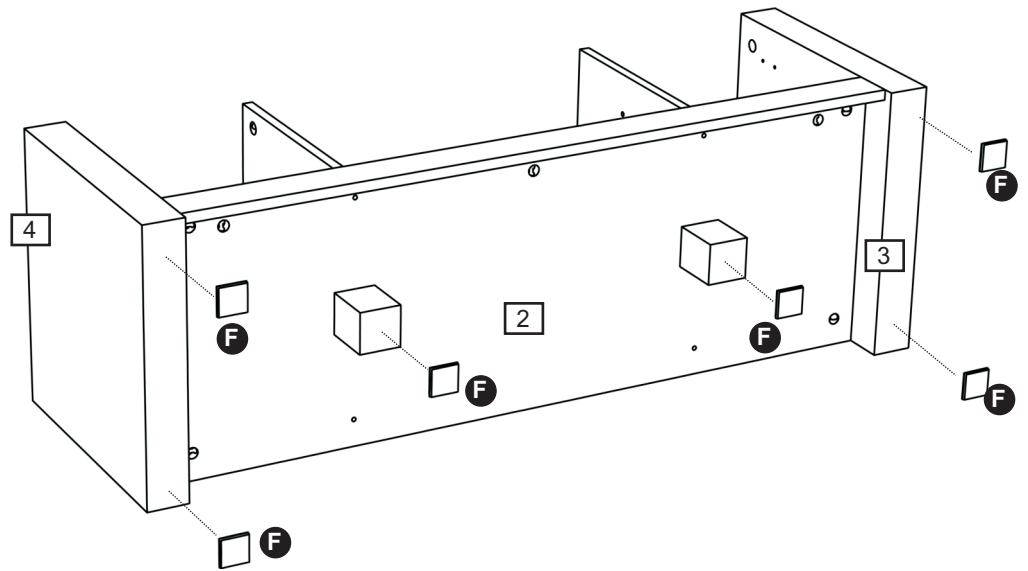


Fitting the top panel

Note: It would be useful to ask someone to help you at this stage.

b: Insert Long wood dowel **D** into Right side **3** and Left side **4**.

c: Insert Short wood dowel **C** into Center right **5** and Center left **6**.

 d: Use Locking nuts **B** to fix the Table top **1** onto the unit.

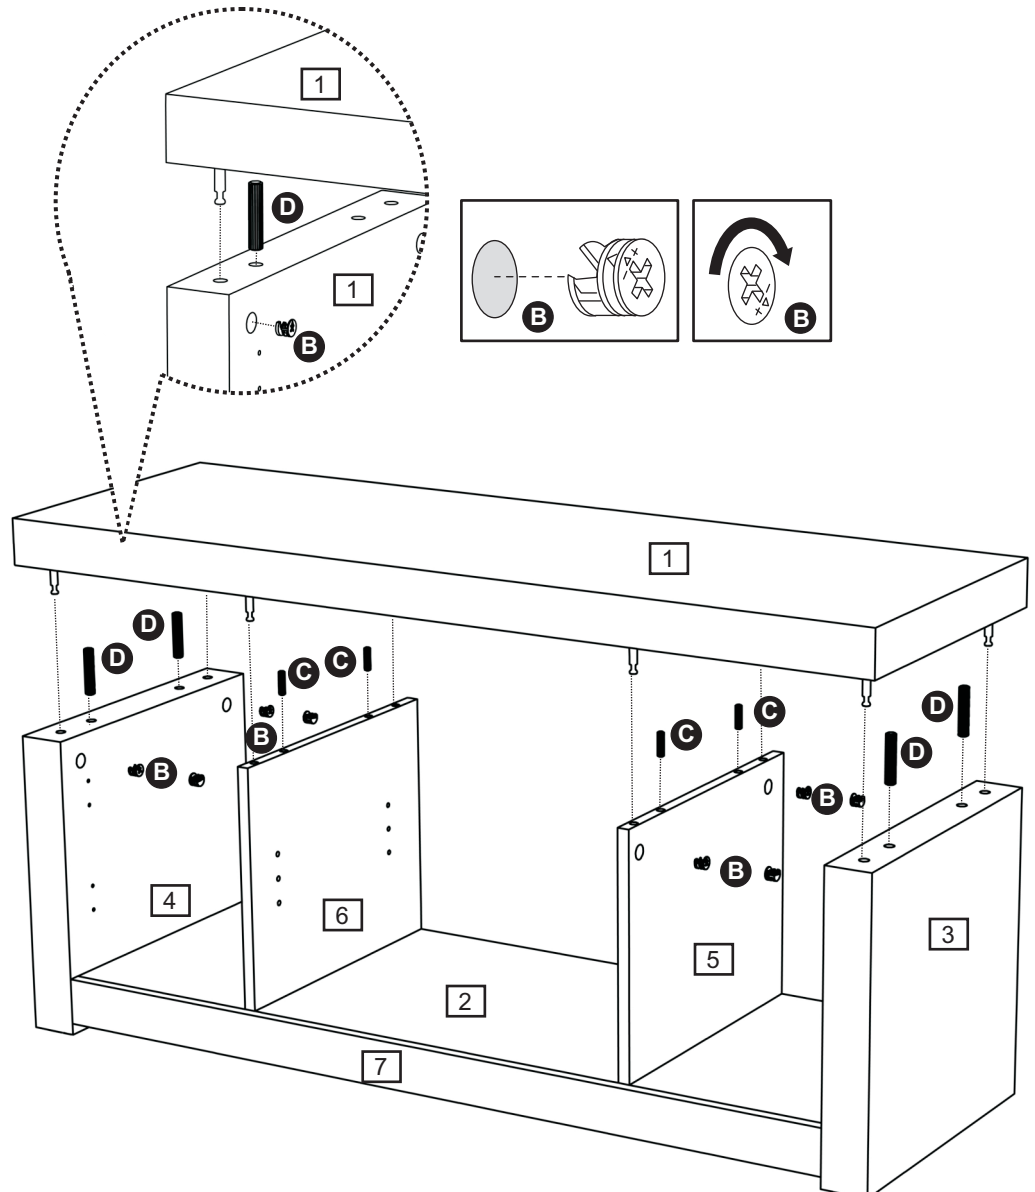


Assembly Instructions

Step 7 and 8

Fitting back.

 
c: Use Screws **G** to fix Back panel **8** onto the unit.

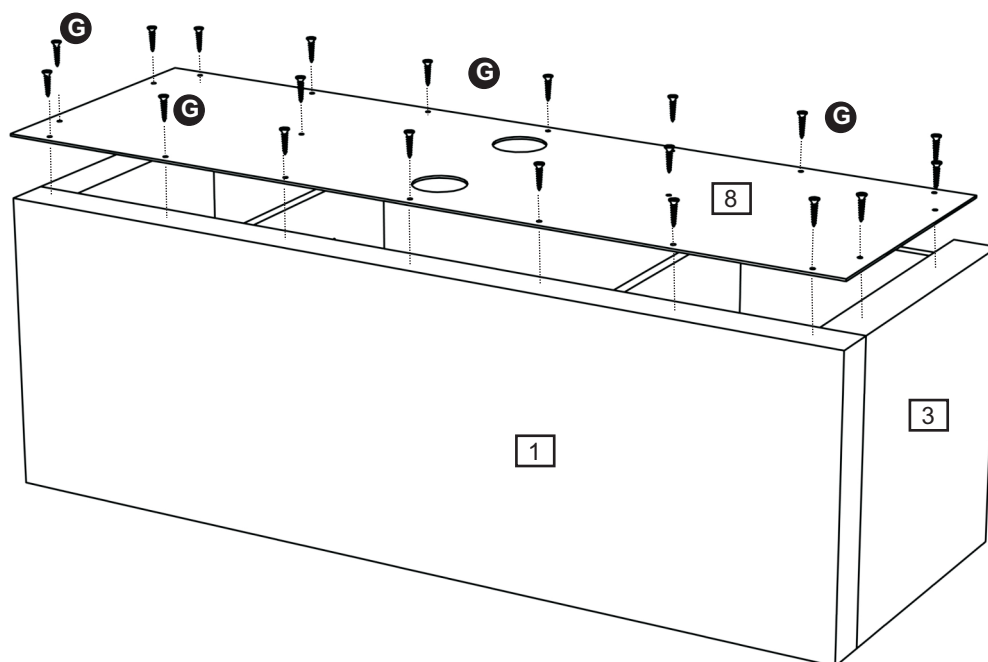

Fitting doors brackets and doors knobs.

b: Use Screws **G** to fix Door brackets **H** onto Doors **9**.

 Use Screws **J** to fix Handles **I** onto Doors **9**.

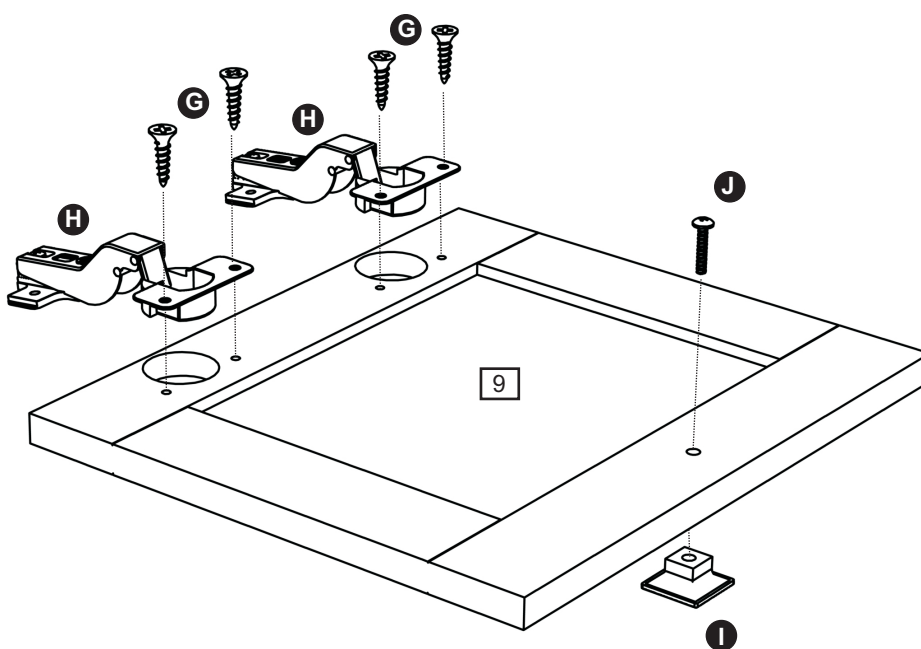


Assembly Instructions

Step 9 and finish

Finishing the door

Note: It would be useful to ask someone to help you at this stage.

 a: Use Screws **G** to fix Doors **9** onto the unit.

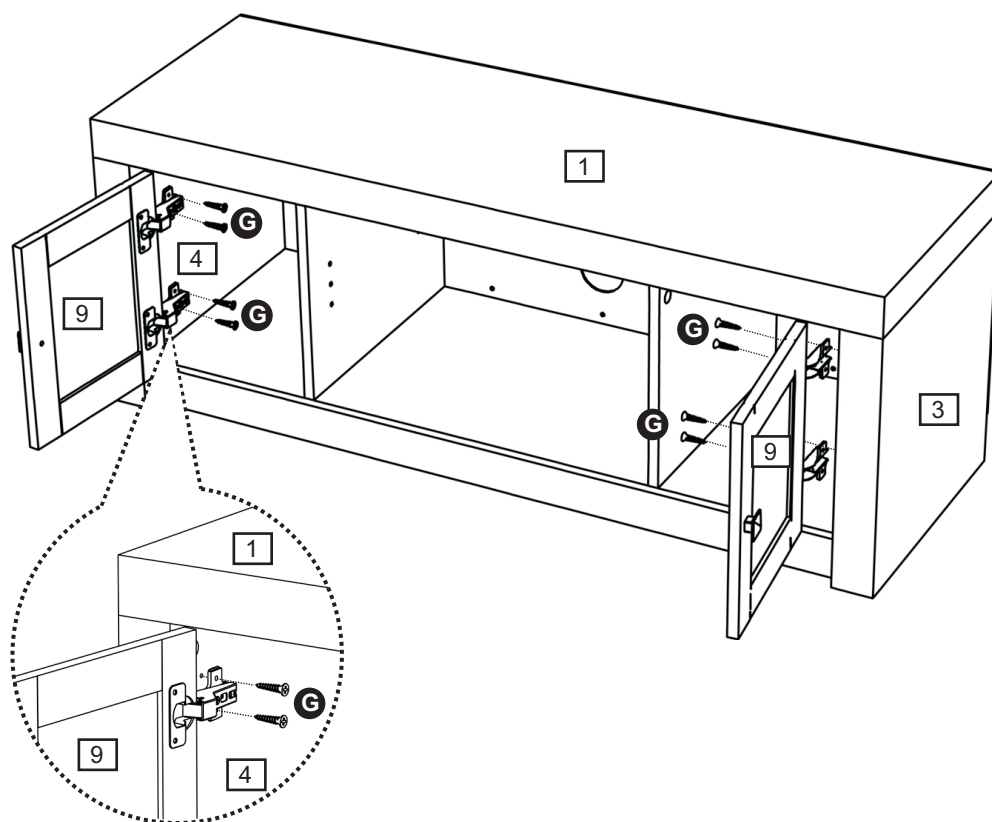


Fitting adjustable shelf.

b: Insert Shelf support into the holes in the unit.

Note: Adjust the shelf supports to the desired height.

 Carefully insert the shelf in to the unit.

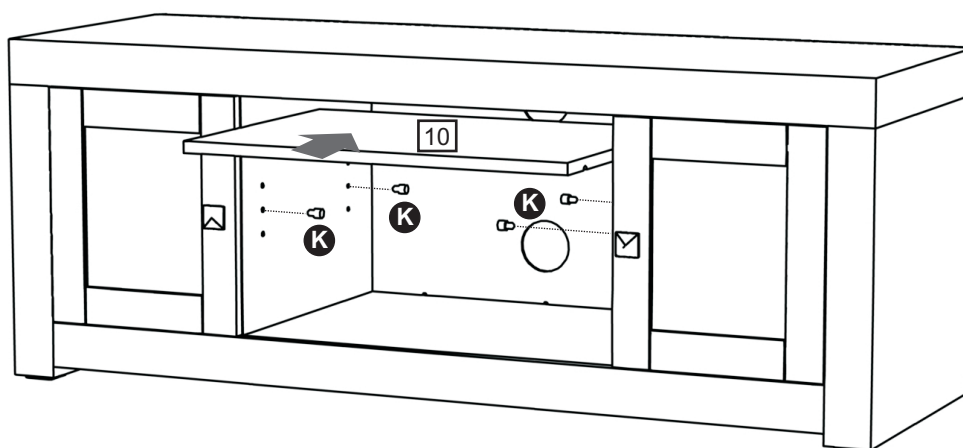

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline : 08456 400800**