



Lee Stafford

**ARGANOIL®**

from  
Morocco



# ARGANOIL® ULTRA LONG CHOPSTICK STYLER™



Lee Stafford  
1 YEAR GUARANTEE

6176309 Instruction Manual

Longer barrel, faster styling and kinder to hair. With an extra SKINNY, ultra long argan oil infused ceramic barrel, my NOURISHING CHOPSTICK is 30% longer to make styling easier.

Simply wrap all your hair on the ultra long chopstick barrel to create CONDITIONED, SOFT AND SHINIER CURLS. A heat protection glove and a heatproof mat are also included so even your fingers and your dressing table are well looked after!

Get #CHOPSTICKED

and share your look.

#### IMPORTANT SAFETY POINTS

To reduce the risk of fire, burns, electric shock or other injuries, careful study of the following important safety precautions is strongly recommended: For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable. Please consult your local electrician for advice.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack experience or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

#### ALWAYS

- ✓ **ALWAYS** use the unit only for its intended use as described in this manual.
- ✓ **ALWAYS** take care to avoid contact between

the hot surface of the barrel and bare skin, particularly at the face and neck.

- ✓ **ALWAYS** ensure the appliance is switched off, unplugged from the mains and it has cooled down before storing.
- ✓ **ALWAYS** keep the unit out of the reach of young children. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning use of the appliance is a safe way and understand the hazards involved. Children shall not play with appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ✓ **ALWAYS** regularly check the mains cord for damage. If damaged, discontinue use immediately and do not use until the appliance has been inspected and approved by a qualified electrician.
- ✓ **ALWAYS** clean before storing away.
- ✓ **ALWAYS** keep mains cord away from hot or heated surfaces.
- ✓ **ALWAYS** store in original box in a cool, dry place.

## NEVER

- X **NEVER** use this product if it is not working correctly, if it has been dropped or damaged or dropped into water or any other liquid or if it has a damaged plug or mains cord. If it has the unit must not be used.
- X **NEVER** use with wet hands.
- X  **NEVER** use this product near bathrooms, showers, basins or other vessels containing water and do not immerse in water or any other liquids.
- X **NEVER** place the unit near heat sensitive materials e.g. carpets, bedding. Use the heat proof mat provided.
- X **NEVER** leave unattended when plugged in and operating.
- X **NEVER** wind the mains cord around the handle or barrels when hot or while storing.
- X **NEVER** store while still connected to the mains.
- X **NEVER** attempt repairs yourself. Repairs to electrical appliances should only be performed by a qualified electrician. Improper repairs may place the user at serious risk and will invalidate the guarantee.
- X **NEVER** carry or suspend the appliance by the mains cord.

**IMPORTANT SAFETY POINTS**

Read these instructions thoroughly before using this appliance or connecting to the mains supply.

A 13 amp BS1362 ASTA approved fuse must be fitted. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate. Connecting it to any other power source may cause damage. This product may be fitted with a non-rewirable plug. If it is necessary to change the fuse in the plug, the fuse cover must be refitted. If the fuse cover becomes lost or damaged, the plug must not be used until a suitable replacement is obtained. If the plug has to be changed because it is not suitable for your socket, or due to damage, it should be cut off and a replacement fitted, following the wiring instructions shown. The old plug must be disposed of safely because inserting it into a socket could cause an electrical hazard.

The wires in the mains cable of this product are coloured in accordance with the following code:

Blue = Neutral      Brown = Live


If the markings on the terminals of your plug do not correspond to the colours shown of the wires in the mains cable, proceed as follows:

The wire which is coloured **Blue** must be connected to the terminal which is marked **N** or coloured **Black**.

The wire which is coloured **Brown** must be connected to the terminal which is marked **L** or coloured **Red**.

**DO NOT** connect any wires to the earth terminal.

 This symbol indicates that this is a 2-core appliance is Class II and does not require an earth connection.

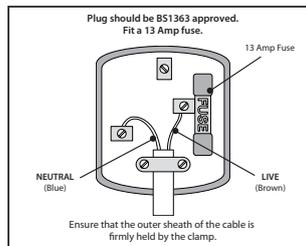

Due to our policy of continuous improvement, the actual product may differ slightly from the one illustrated in this booklet.

## ARGANOIL® ULTRA LONG CHOPSTICK STYLER™

### – CREATE FANTASTIC SHINY, KINKY CURLS

#### PRODUCT FEATURES

- Argan oil infused ceramic coated barrel for healthy and silky hair.
- Fast heat up time up to 200°C.
- Safety stand.
- On and off switch with LED indicator.
- Protecting cool tip.
- 3 metre professional swivel cord.
- Includes a heat proof mat and a heat protection glove to protect your fingers and surfaces during use.
- 1 year guarantee.

Thank you for choosing Lee Stafford. Please read and retain these instructions before operating for future reference.

#### USING YOUR ARGANOIL® ULTRA LONG CHOPSTICK STYLER™

##### PREPARING FOR USE

- Please read and retain these instructions before operating for future reference.
- Remove all packaging and keep safe.
- **For domestic use only.**
- **Do not allow young children to play with this product. Adult supervision is required at all times if the product is used near young children.**

##### OPERATION

This unit operates on a main AC 220-240VAC 50-60Hz 27W.

**THE HEAT PROTECTION GLOVE MUST ALWAYS BE WORN DURING USE.**  
**Use the heat proof mat to prevent damage to heat sensitive surfaces.**

## INSTRUCTIONS FOR USE

- Hair should be clean, dry and tangle free before using the product.
- Plug the appliance into a suitable mains socket.
- Ensure the voltage being used is the correct voltage for this product.
- The indicator light will glow red when the unit is switched on.
- Leave the unit on its safety stand and rest on a smooth, flat heat resistant surface.
- Wait for a few minutes until the appliance reaches the required temperature.
- Allow unit to cool before storing away.
- Take extra care when using the curling tong as it can get very hot.

#### LEE'S HOT TIPS

- Before using my ARGANOIL® ULTRA LONG CHOPSTICK STYLER™, I recommend using my ARGANOIL® FROM MOROCCO MIRACLE HEAT DEFENCE SPRAY.
- Make sure the hair is dry and there are no knots or tangles within the hair to avoid any snagging.
- Section the hair into manageable sections.
- Taking one of these sections, wrap the hair around the curling tong.
- Be careful not to let the appliance touch the scalp.
- To hold your style use my HoLD TiGHT HAiRSPrAy.

#### FOR TIGHT CORKSCREW CURLS

- Take a small section roughly 1cm wide.
- Wrap it around the barrel extremely tight with no gaps between each twist.
- Hold in place for 8 – 10 seconds and release.
- Repeat these steps around the whole of your head.
- Allow the hair to cool.
- Shake your hair out with your fingers to break up the curls and run your fingers through each curl for more volume.

#### FOR LOOSE, SOFT WAVES

- Take a section roughly 3cm wide and wrap it around the barrel.
- Hold in place for 5 seconds and release.
- Repeat around the whole of your head.
- Allow the hair to cool.
- Brush out each curl with my DE-STRESS THE MESS DETANGLING COMB.

#### CLEANING AND MAINTENANCE

- The appliance must be unplugged before cleaning.
- Let the appliance cool down before cleaning.
- Clean the unit with a soft cloth or sponge moistened with a mild soap and water.
- Dry thoroughly before use.
- Do not use any harsh detergents, abrasives, solvents or cleaners.
- Never immerse in water to clean.

#### STORAGE

- Ensure the product is completely dry, switched off and unplugged from the mains before storage.
- Store in original box in a cool, dry place.
- Store in a safe place, away from children.

#### SERVICING

There are no user serviceable parts inside this appliance. Always refer servicing to qualified service personnel. If you drop or damage your product, do not use until it has been inspected and approved by a qualified electrician.

If you require help with using your product contact the Customer Services Helpline on **03456 403 030**.

#### YOUR ONE YEAR GUARANTEE

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during the period set by the dealer from whom you purchased the unit.

The following conditions apply:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used only for domestic purposes.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory rights.
- Valid in the UK only.

#### IMPORTANT INFORMATION FOR CORRECT DISPOSAL OF THE PRODUCT IN ACCORDANCE WITH EC DIRECTIVE 2002/96/EC.

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.

Disposing of a household appliance separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources. As a reminder of the need to dispose of household appliances separately, the product is marked with a crossed-out wheeled dustbin.





Lee Stafford

ARGANOIL®

from  
Morocco



"Have Fun, Look wicked,  
Turn iT ON"

Lee  
xXx

Lee Stafford, Soho, London  
[www.leestaffordelectricals.com](http://www.leestaffordelectricals.com)