

Front

Instruction Manual

Please retain these instructions as they contain important information.

Flashing light function:

1. Press B3 once: lights will start flashing for approximately 7 seconds

Display:

1. Normal time display: hour & minutes.
2. Press B1 once: month & date (Automatically return to normal time display.)
3. Press B1 twice: Seconds (Press B1 again return to normal time display.)



Time Setting :

1. Month: press B2 twice to display month and set the month with B1.
2. Date: press B2 to display the date and set the date with B1.
3. Hour: press B2 to display the hour and press B1 to set the hour ("A" for AM and "P" for PM time.)
4. Minutes: press B2 to display the minutes and set the minutes with B1.
5. Press B2 once more to return to normal time display, and then press B1 once.


Important Information :

Battery type : 2 x 1.5V, LR626 size or equivalent batteries

- Battery replacement should be undertaken by a watch specialist.
- Batteries must be inserted with the correct polarity;
- Exhausted batteries are to be removed from the product to avoid possible leakage;
- Only battery of the same or equivalent type as recommended are to be used.
- Never dispose the batteries in fire, batteries may explode or leak.

Back

- Battery should be kept away from young children. If swallowed, seek medical advice immediately.
- This watch is not water proof. Do not expose to water or high humidity.

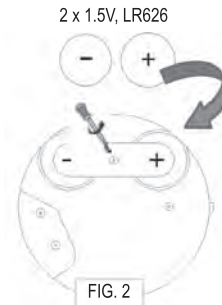

To replace batteries:

Unscrew two screws to remove caseback. (FIG. 1) Take out the time module and remove black insulation sheet.

Unscrew the battery retainer plate (FIG. 2) of the time module, replace with the new 2 x 1.5V, LR626 batteries. Ensuring the polarity as indicated. Screw back and Reassembly the watch accordingly.



ZEON LTD.
Units 1 & 2 Phoenix Park, Apsley Way, London
NW2 7LN, UK. Tel : 0208 208 1833.

Size: 80x95mm