nickelodeon







## LED Watch Instruction Manual

## FUNCTION

Push "Button" once under the state of dormancy, and then digits will appear Month / Day

Push "Button" once again (twice). Second

Push "Button" once again (three times). Push once again will return to Hour/Minute display.

It will enter state of donnancy if no keys are operated

within three seconds

## TIME SETTING

Push "Button" once to enter Hour Minute display.

Pash "Batano" once to cuter Hour Minnet Guplay.

Pash "Batano" once quain and hold life und fashing Hashing. Then hold "Button" to set "Hour".

Pash "Batano" once quain and hold life und fashing Hashing. Then hold "Button" to set "Hour".

Pash "Batano" once quain and hold till Minnet display Hashing. Then hold "Button" to set "Minnet".

Pash "Garano" once quain and hold till Month display Hashing. Then hold "Button" to set "Minnet".

Push "Button" once again and hold till Day display flashing. Then hold "Button" to set "Day" Push "Button" once again and hold will return to Hour/Minute display.

BATTERY INFORMATION:
Battery supplied - Battery Type: 1 x CR2016 (3.0V) (supplied) or equivalent.
We recommend the battery replacement is done by a professional.
Non-rechargeable batteries are not to be recharged.
Batteries must be inserted with the correct polarity.
Eshausted batteries are to be removed.
The supply terminals are not to be short discussed.
Only batteries are to be removed.
Only batteries are to be the short discussed.
Only batteries are to the same or equivalent type as recommended are to be used.
Officent types of batteries are wad used batteries are not to be mixed.

Please keep this information for future reference.



Button

© 2017 Spin Master PAW Productions in all related titles, logos and characters are trademarks of Spin Master Ltd. Nickelodeon and all related titles and logos are trademarks of Viacom International Inc.









