 


Magnetic Rower

Assembly & User Instructions - Please keep for future reference

6214151

opti

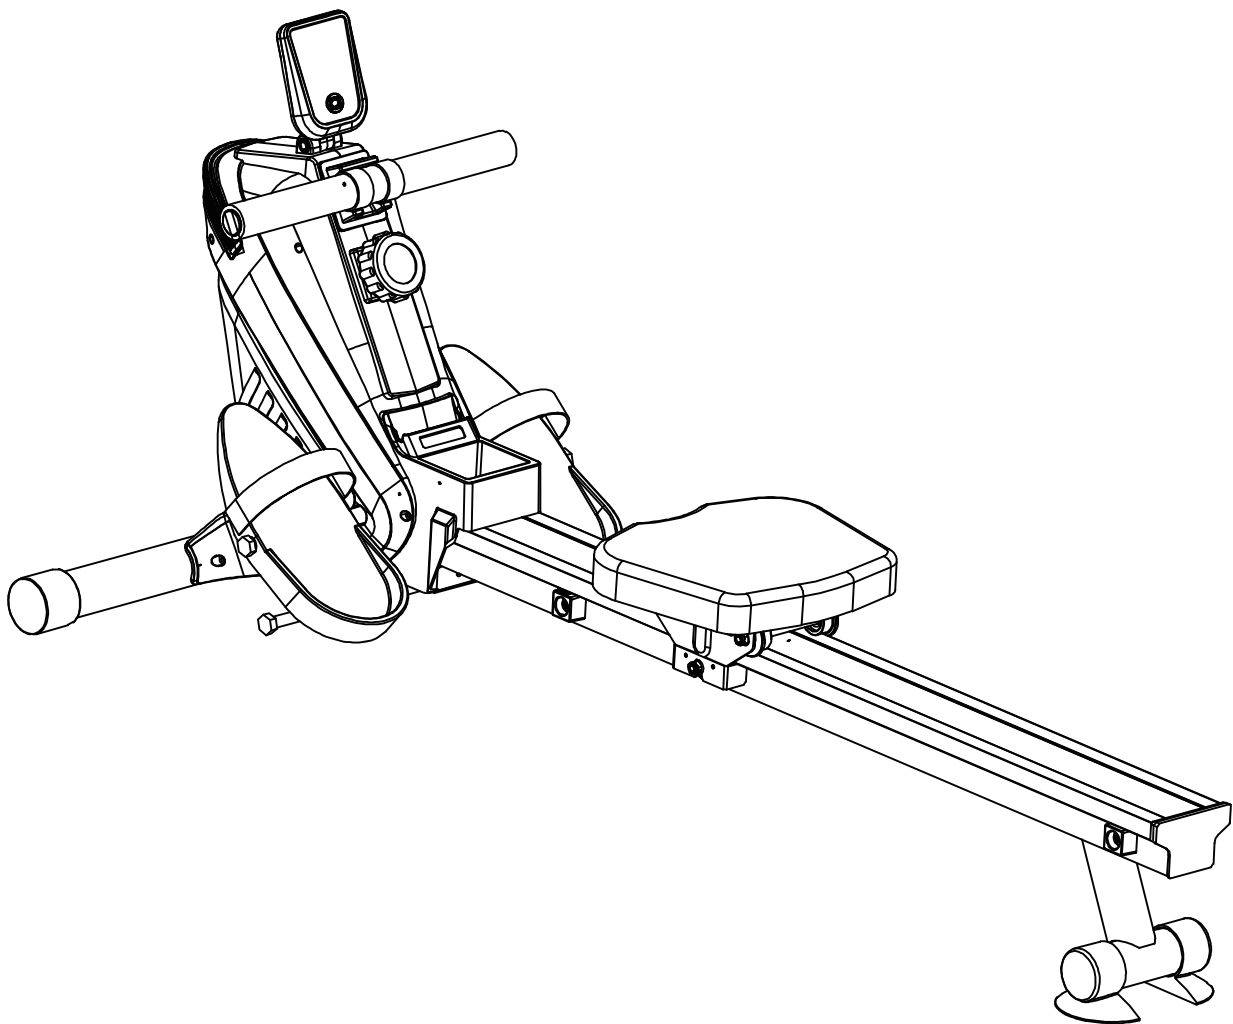

Important – Please read these instructions fully before assembly or use


These instructions contain important information which will help you get the best from your equipment and ensure safe and correct assembly, use and maintenance.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 600 1714** or visit **www.argos-support.co.uk**

Contents



Safety Information	2-3
Components - Parts	4
Components - Fixings	5
Assembly Instructions	6-10
Workout area	11
Exercise Information	12-20
Before starting	12
Muscle chart	13
Warming up and cooling down	14-15
Console Operation	16
Adjustment of the resistance	17
Storage	18
Moving instructions	18
Exercise Guide	19-20
Care and Maintenance	21
Exploded Parts Diagram	22
Parts List	23

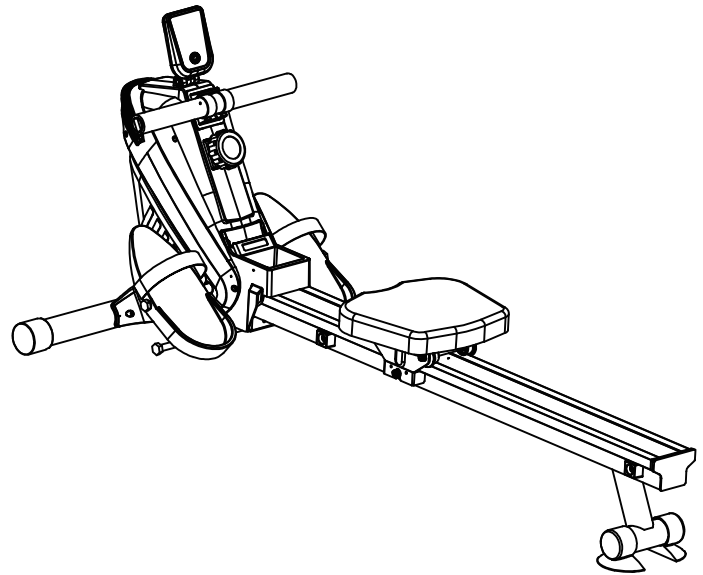 



Safety Information



Important – Please read fully before assembly or use

This exercise equipment is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble, operate or use this equipment.

Assembly

- The product must be installed on a stable and level surface. To protect the floor or carpet from damage, place a mat under the rower.
- Assemble the item as close to its final position (in the same room) as possible.
- Make sure you have enough space to layout the parts before starting.
- Keep children and animals away from the work area, small parts could pose a choking hazard if swallowed.
- Dispose of all packaging carefully and responsibly.
- Check you have all the components and tools listed in the parts list, bearing in mind that, for ease of assembly, some components are pre-assembled.
- The assembly of this equipment is best carried out by 2 people.
- Your product is intended for use in clean dry conditions. You should avoid storage in excessively cold or damp places as this may lead to corrosion and other related problems that are outside our control.
- Keep unsupervised children away from the equipment.
- Disabled persons should not use the equipment without a qualified person or doctor in attendance.
- Always wear appropriate workout clothing when exercising. Do not wear loose or baggy clothing, as it may get caught in the equipment. Wear trainers to protect your feet while exercising.
- Do not place any sharp objects around the equipment.
- Keep hands away from all moving parts.
- If any of the adjustment devices are left projecting, they could interfere with the user's movement.
- Before using the equipment to exercise, always perform stretching exercises to properly warm up.
- Only one person at a time should use the equipment.
- If the user experiences dizziness, nausea, chest pain, or other abnormal symptoms stop the workout and seek immediate medical attention.
- Injuries to health may result from incorrect or excessive training.
- This product is suitable for a maximum user weight of: 100kg.
- This product conforms to: BS EN ISO 20957-1 and BS EN 957-7 Class (H) - Home Use - Class (C).
- The braking system is speed-dependent.

Using

- It is the responsibility of the owner to ensure that all users of this product are properly informed as to how to use this product safely.
- This product is intended for domestic use only. Do not use in any commercial, rental, or institutional setting.
- Use the equipment only for intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep this equipment indoors, away from moisture and dust. Do not put the equipment in a garage, outbuilding, covered patio, or near water.



Safety Information



Important – Please read fully before assembly or use

Battery safety

- Warning: Batteries are to be inserted with the correct polarity. Incorrect installation of batteries may cause battery leakage and corrosion, resulting in damage to the computer.
- Do not mix old and new batteries, or batteries of different types.
- Do not dispose of batteries in a fire.
- Do not dispose of batteries with normal household waste, take to a local recycling centre.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before being charged.
- Exhausted batteries are to be removed from the product.
- Supply terminals are not to be short-circuited.
- The product is intended to be assembled by adult.



 
Warning: Before beginning any exercise program, consult your Doctor. This is especially important for persons over the age of 35 or persons with pre-existing health problems. You **MUST** read all instructions before using any fitness equipment. Argos and its associates assumes no responsibility for personal injury or property damage sustained by or through the use of this product. Over exercising may result in serious injury or death. If you feel faint stop exercising immediately.

Components - Parts


If you have damaged or missing components, call the Customer contact number: 0345 600 1714

Please check you have all the parts listed below


Note: Some of the smaller components may be pre-fitted to larger components. Please check carefully before contacting Argos regarding any missing components.

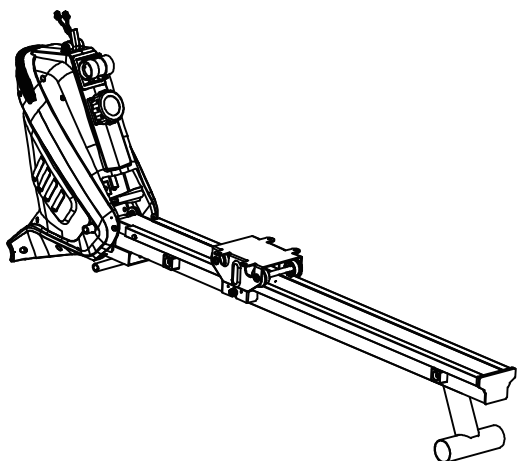

 1. Main Frame x1



 2. Front Stabilizer x1

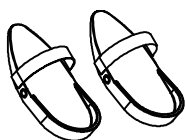

10. Pedal x2



26. Seat x1



33. Holder x1



8. Rear End Cap x2



42. Console x1





 
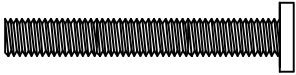

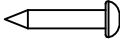
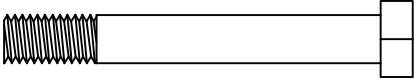
 
 
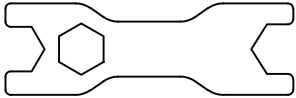

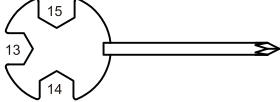
44. Handle x1

Components - Fixings



Please check you have all the fixings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more hardware may be supplied than are required. Some of the fixings are pre-fitted to the larger components. Please check carefully before contacting Argos regarding any missing fixings.

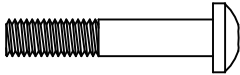
 <p>34. Bolt M8*45 x 2</p>	 <p>5. Washer D8 x 2</p>	 <p>14. Washer Φ16*Φ8.5*1.5 x 2</p>
 <p>4. Bolt M8*60 x 2</p>	 <p>6. Curved Washer D8 x 2</p>	 <p>32. Screw ST4.2*20 x 2</p>
 <p>9. Bolt M12*160 x 4</p>	 <p>27. Screw M6*15 x 4</p>	 <p>83. Washer Φ6.2*Φ16*1.5 x 4</p>
 <p>(S=17/19) x 1</p>	 <p>(S=5) x 1</p>	 <p>(S=13/14/15) x 1</p>

Assembly Instructions



Total mass of the product is 19 kg.

 Total size of the equipment is (width) 54 cm x (depth) 155 cm x (height) 69 cm.

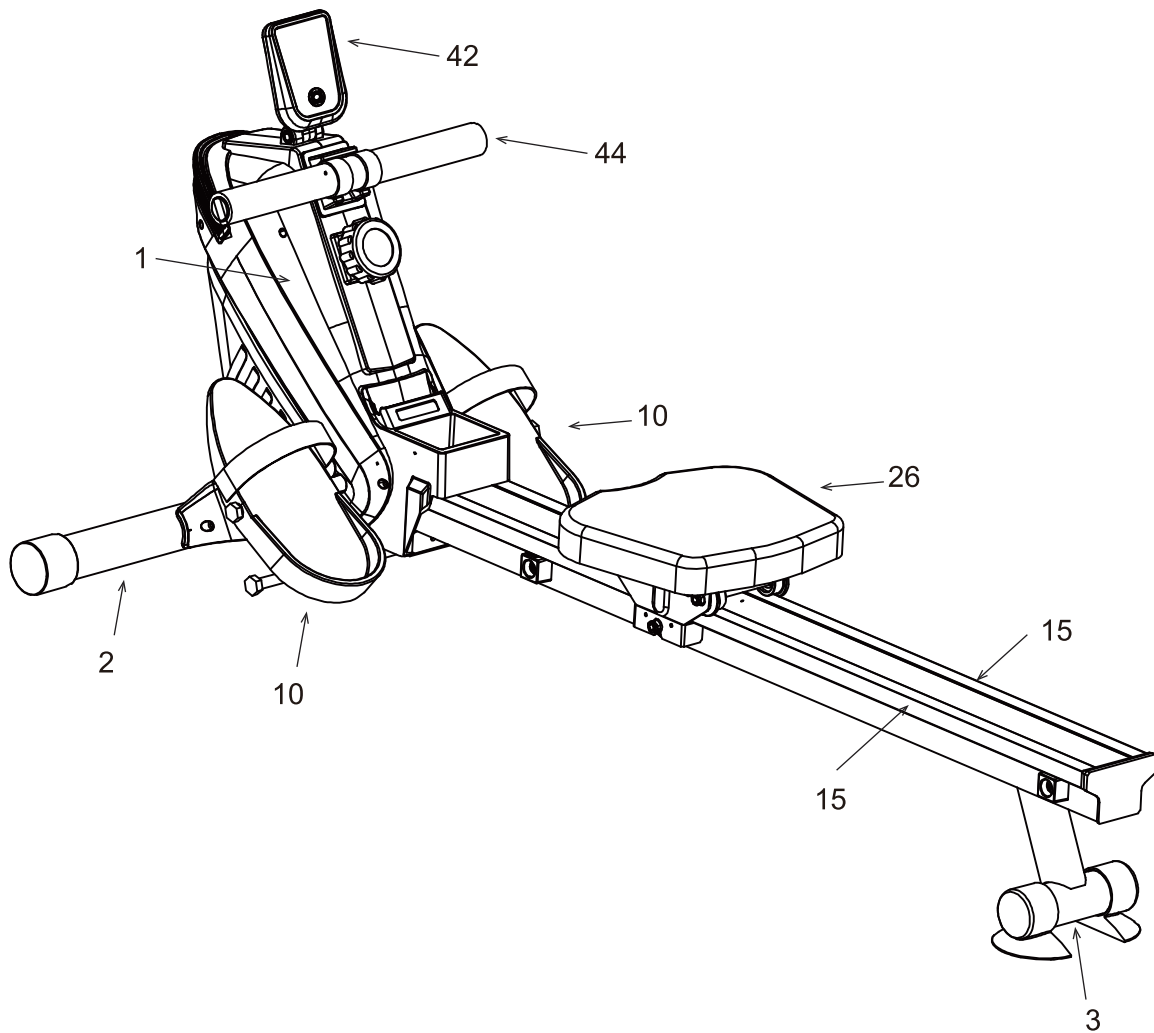

1. Main Frame x1

2. Front Stabilizer x1

3. Rear Stabilizer x1

 
10. Right/Left Pedal x2

15. L/R Rail

26. Seat x1


42. Console x1

44. Handle x1

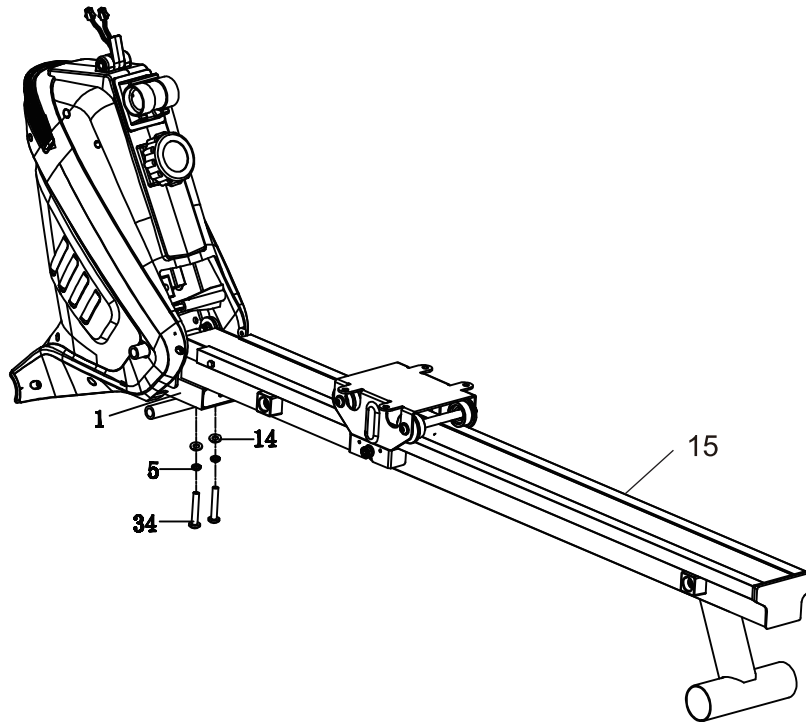


Step 1

 Attach Rail(15) to the Main Frame(1) with Bolt M8*45mm(34),Washer D8(5) and Washer(14).

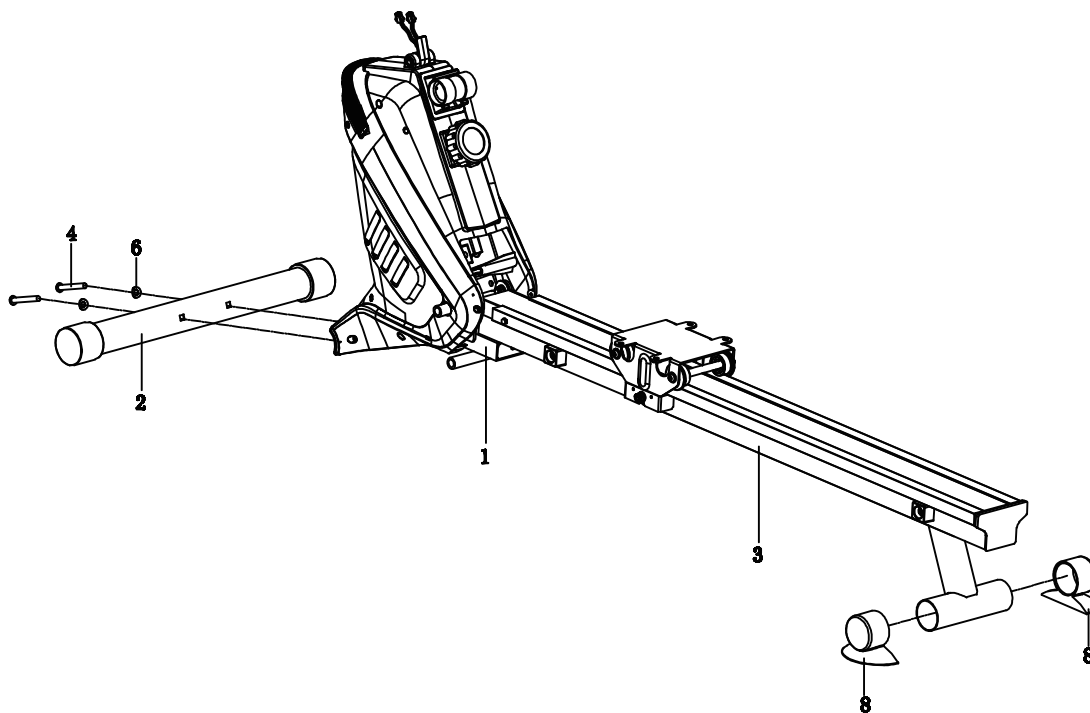


Step 2

 Attach Front Stabilizer(2) to Main Frame(1) with Bolt M8*60mm(4),Curved Washer D8(6); Push the Rear End Cap(8) onto the Rear Stabilizer(3).

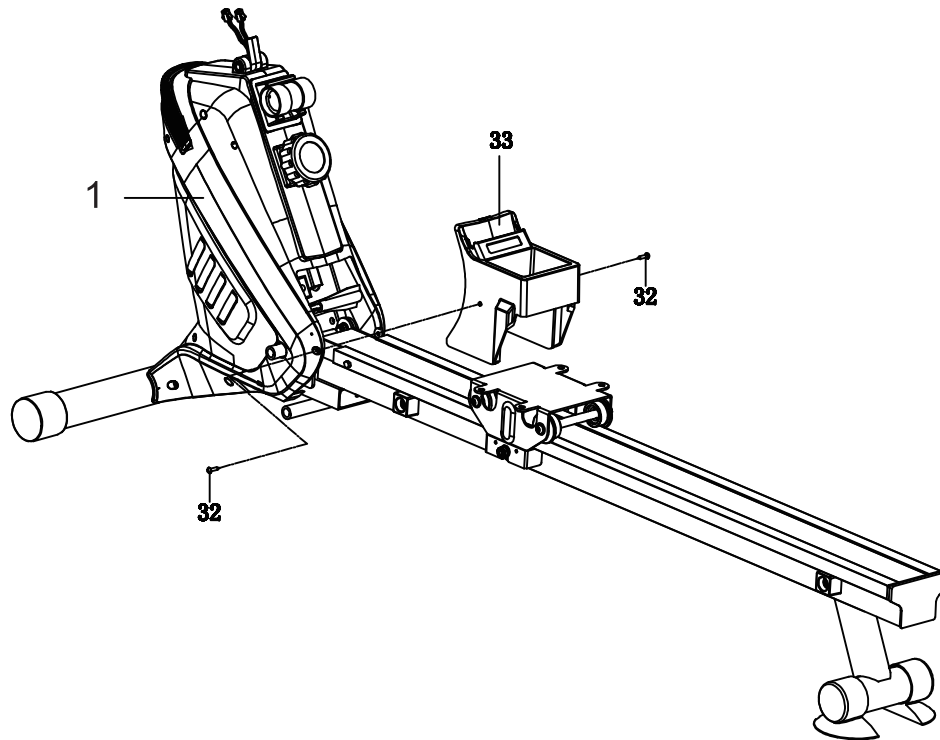


Step 3

 Attach the Holder(33) to the Main Frame with Screw ST4.2(32)

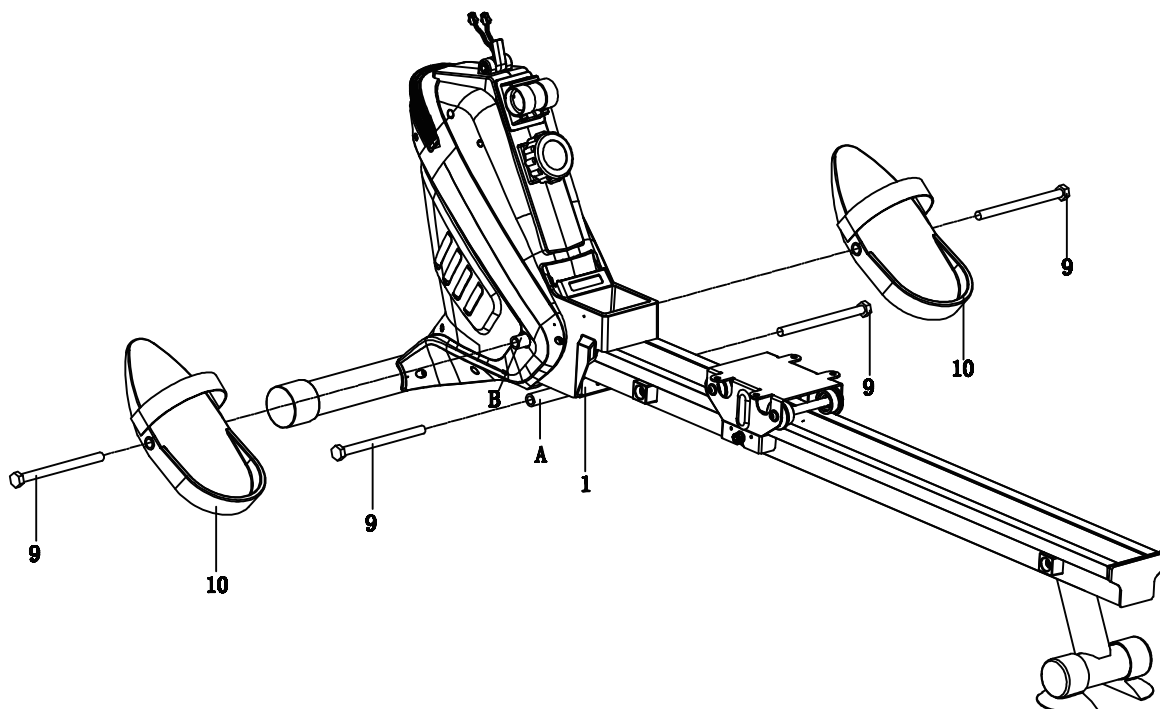


Step 4

 Attach the Pedals (10) to the Main Frame (1) with 2 Bolts M12*160mm (9). Attach the other 2 Bolts M12*160mm to the Main Frame(1) under the pedals.

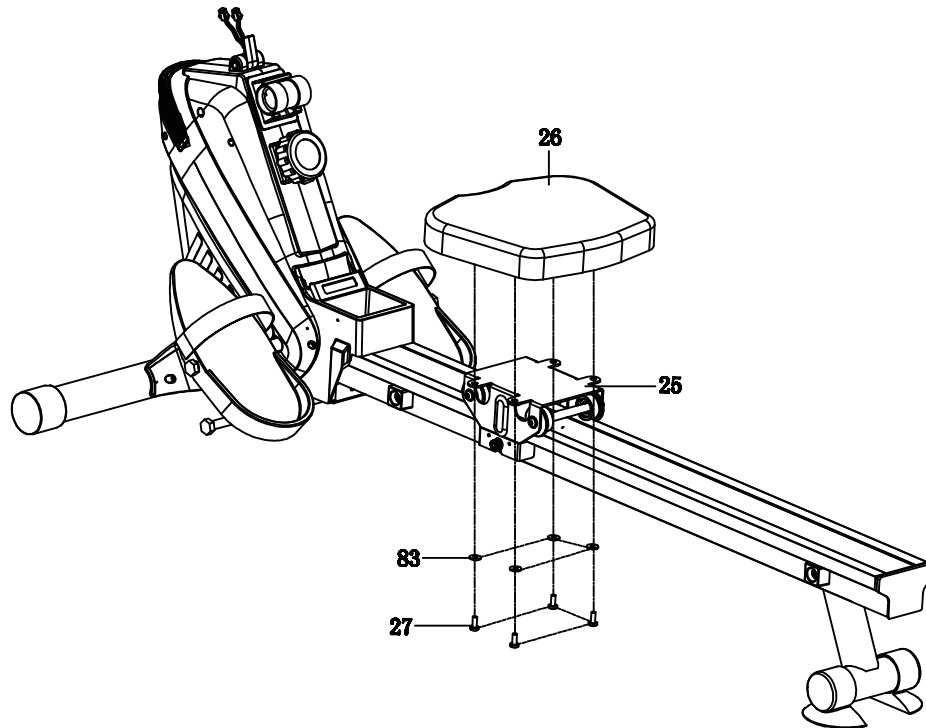

Step 5

 Attach Seat (26) to Seat Bracket(25) with Screw M6*15mm (27) and Washer(83)

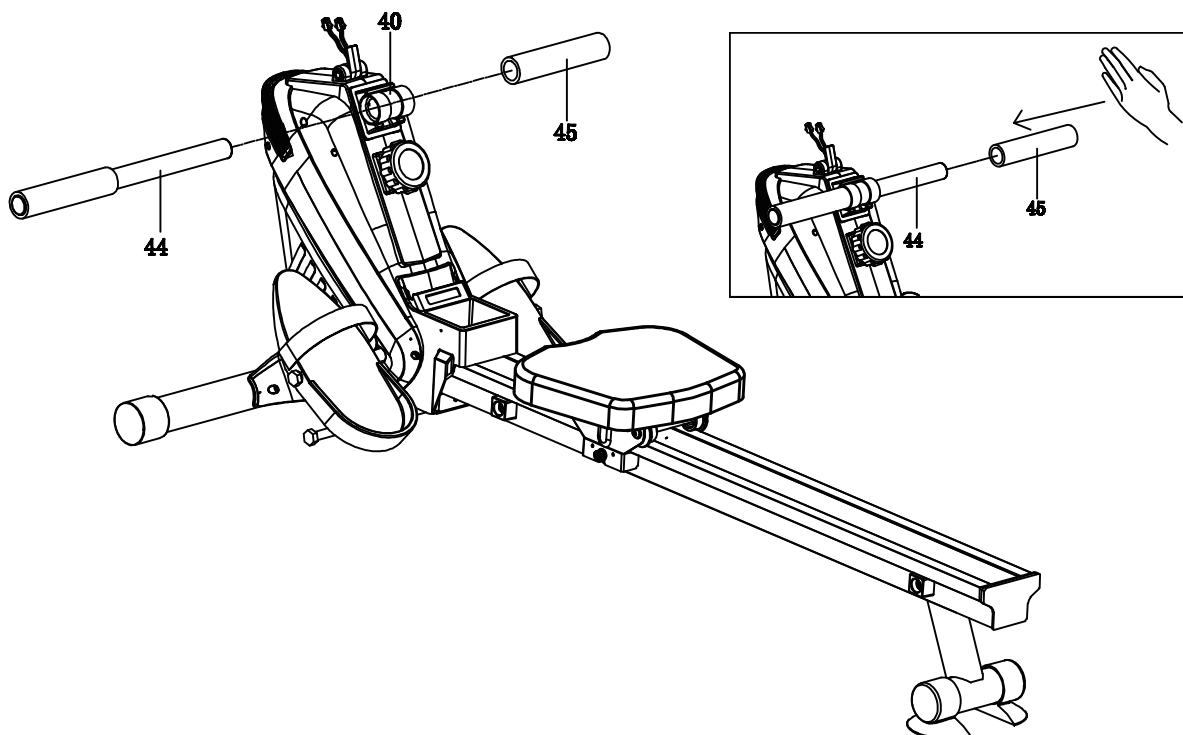


Step 6

Insert the Handle(44) in the Handle Sleeve(40) and slide the Foam Grip(45) on Handle(44).

Step 7

 
Connect Console wire to the Sensor Wire(82), then insert Console(42) onto the Console Bracket(43).

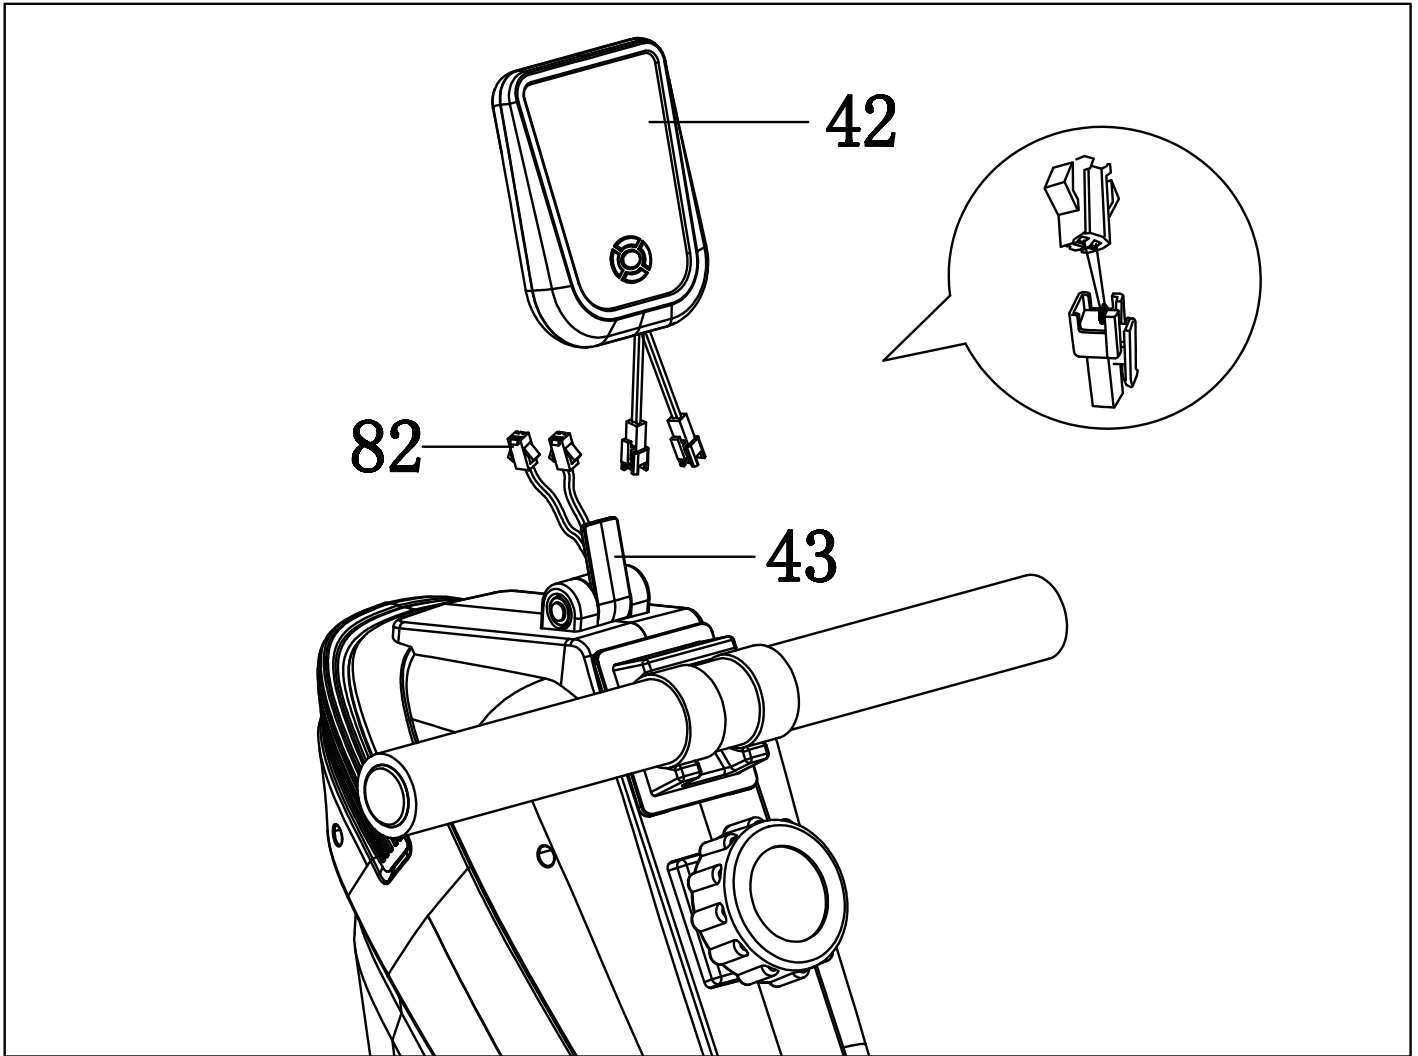

Workout Area



 The free area must be at least 0.6m greater than the training area. This is a space where you can safely dismount, without obstruction, in case of an emergency. Where two pieces of equipment are positioned adjacent to each other the free area may be shared.

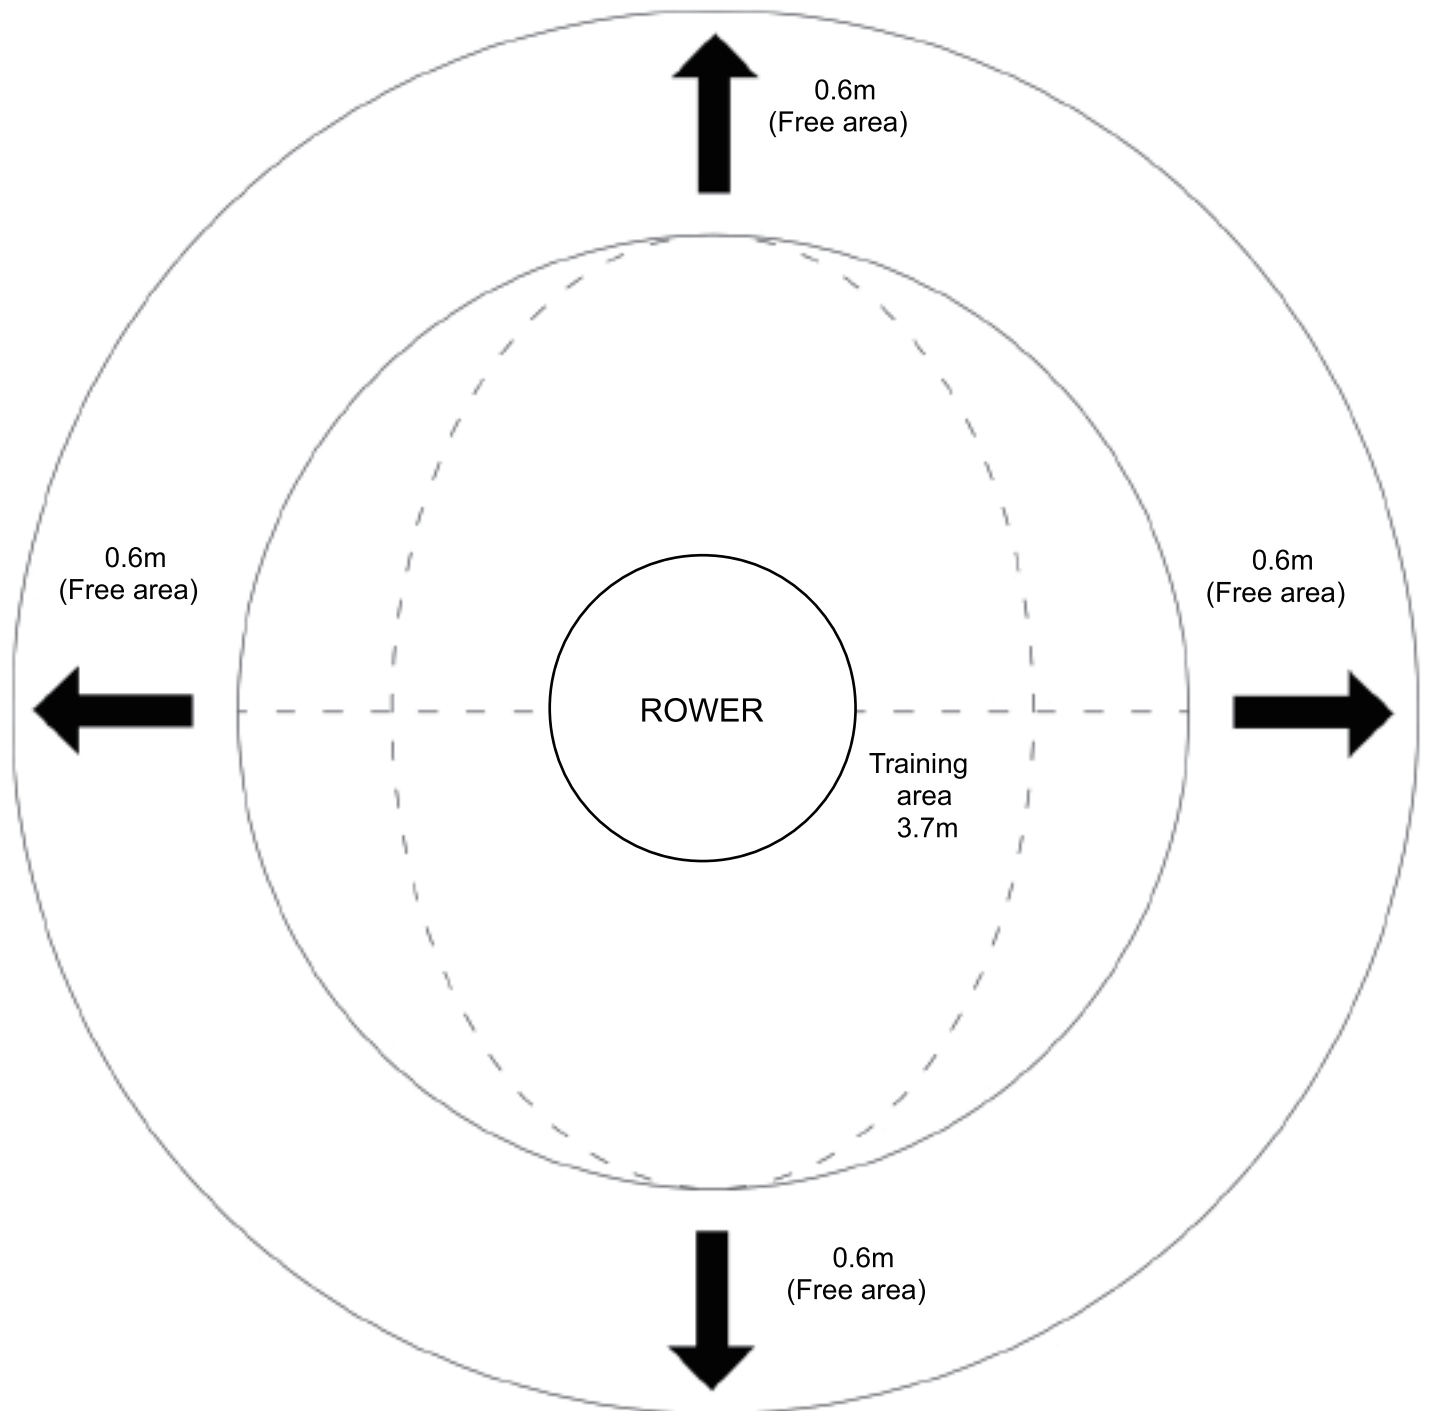

Only one person should be within the training area when the equipment is in use.

Exercise Information



Before starting

Tailor your exercise program according to your physical condition. If you have been inactive for several years, or are overweight, you must start slowly and increase your time on the equipment; a few minutes per workout increase is advisable.

 
Initially, you may be able to exercise only for a few minutes in your target zone, however, your aerobic fitness will improve over the next six to eight weeks. Don't be discouraged if it takes longer. It's important to work at your own pace.

Please remember these essentials:

- Have your doctor review your training and diet programs to advise you of a workout routine you should adopt.
- Begin your training program slowly with realistic goals.
- Monitor your pulse frequently. Establish your target heart rate based on your age and condition.
- Set up your equipment on a flat even surface with adequate training area, as prescribed in this manual.


Exercise intensity

To maximize the benefits of exercising, it is important to exercise with the proper intensity. The intensity level can be found by using your heart rate as a guide. For effective aerobic exercise, your heart rate should be maintained at a level between 65% and 85% of your maximum heart rate as you exercise. This is known as your target zone. You can find your target zone in the table below.

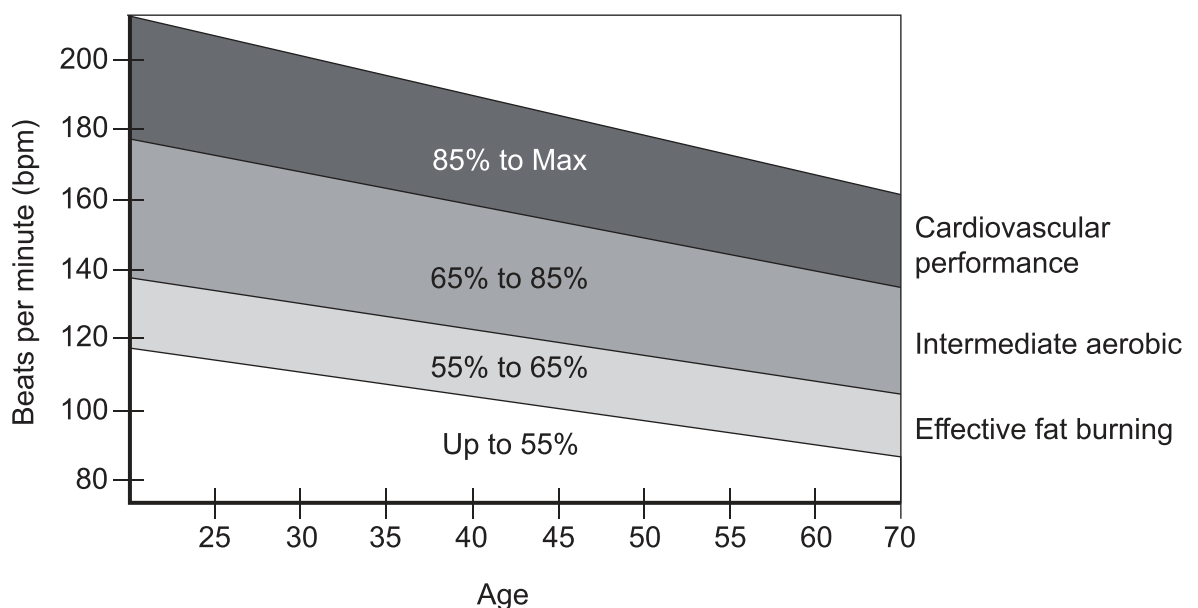

During the first few months of your exercise program, keep your heart rate near the low end of your target zone as you exercise. After a few months, your heart rate can be increased gradually until it is near the middle of your target zone as you exercise.

 To measure your heart rate, stop exercising but continue moving your legs or walking around and place two fingers on your wrist. Take a six-second heartbeat count and multiply the results by 10 to find your heart rate. For example, if your six-second heartbeat count is 14, your heart rate is 140 beats per minute. (A six-second count is used because your heart rate will drop rapidly when you stop exercising.) Adjust the intensity of your exercise until your heart rate is at the required level.

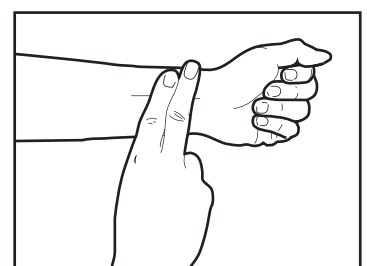

Muscle chart

Aerobic Exercise

 
Aerobic exercise improves the fitness of your lungs and heart - your body's most important muscle. Aerobic exercise is promoted by any activity that uses your large muscles (arms, legs, or buttock, for example).

Weight Training

Along with aerobic exercising which helps get rid of and keep off the excess fat that our bodies can store, weight training is an essential part of the exercise routine. Weight training helps tone, build and strengthen muscle. If you are working above your target zone, you may want to do a lower number of reps.


Targeted Muscle Groups

The exercise routine that is performed on the rower will develop the upper and lower body muscle groups. These muscle groups are highlighted on the muscle chart below.

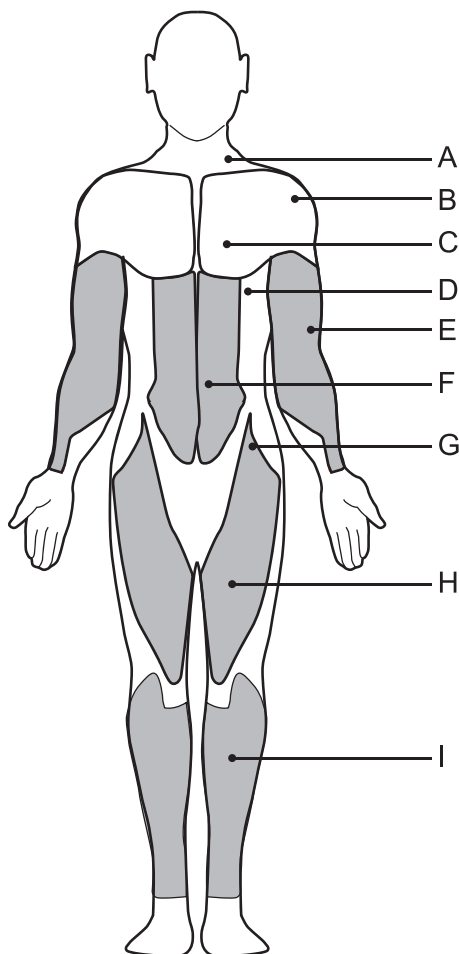

Front

- | | |
|----------------------|----------------------|
| A: Trapezius | F: Abdominal |
| B: Anterior Deltoid | G: Sartorius |
| C: Pectoralis Major | H: Quadriceps |
| D: Serratus Anterior | I: Tibialis Anterior |
| E: Biceps | |

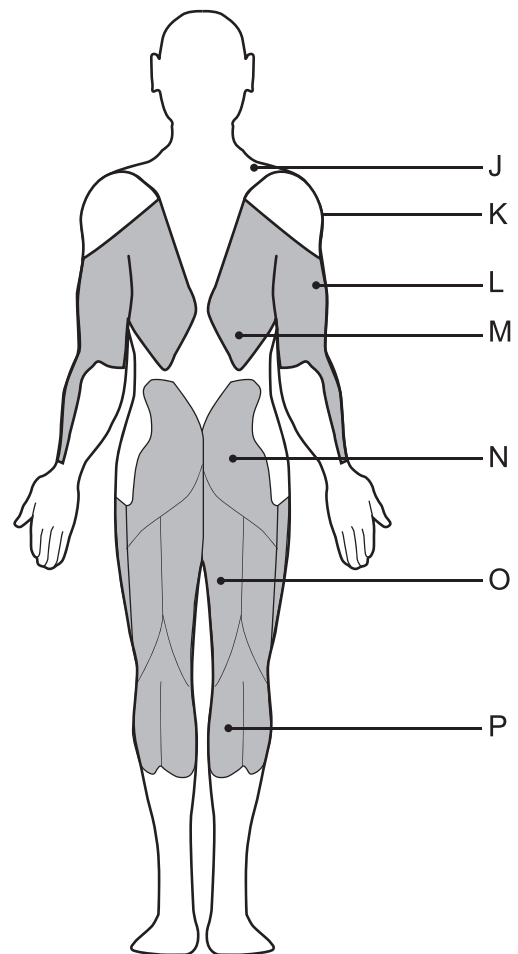 

Back

- | | |
|----------------------|------------------|
| J: Trapezius | N: Gluteals |
| K: Posterior Deltoid | O: Hamstrings |
| L: Triceps | P: Gastrocnemius |
| M: Latissimus Dorsi | |

Warming up and Cooling down

Each workout should include the following three parts:

1. A warm-up, consisting of 5 to 10 minutes of stretching and light exercise. A proper warm-up increases your body temperature, heart rate, and circulation in preparation for exercise.
2. Training zone exercise, consisting of 20 to 30 minutes of exercising with your heart rate in your training zone. (Note: During the first few weeks of your exercise program, do not keep your heart rate in your training zone for longer than 20 minutes.)
3. A cool-down, with 5 to 10 minutes of stretching. This will increase the flexibility of your muscles and will help to reduce post-exercise muscle soreness.

Exercise Frequency

To maintain or improve your fitness, plan three workouts each week, with at least one day of rest between workouts. After a few months of regular exercise, you may complete up to five workouts each week, if desired. Remember, the key to success is make exercise a regular and enjoyable part of your everyday life.

Suggested Stretches

For a correct warm up, see the following basic stretching exercises. Move slowly as you stretch, never bounce.

Toe touch stretch

Stand with your knees bent slightly and slowly bend forward from your hips. Allow your back and shoulders to relax as you reach down toward your toes as far as possible.

Hold for 15 counts, then relax.

Repeat 3 times.

Stretches: Hamstrings, back of knees and back.



 
Hamstring stretch

Sit with one leg extended. Bring the sole of the opposite foot toward you and rest it against the inner thigh of your extended leg. Reach toward your toes as far as possible.

Hold for 15 counts, then relax.

Repeat 3 times for each leg.

Stretches: Hamstrings, lower back and groin.

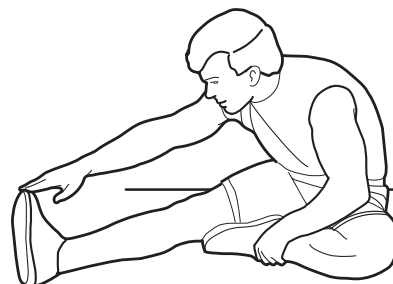


Calf/achilles stretch

With one leg in front of the other, reach forward and place your hands against a wall. Keep your back leg straight and your back foot flat on the floor. Bend your front leg, lean forward and move your hips toward the wall.

Hold for 15 counts, then relax.

Repeat 3 times for each leg. To cause further stretching of the achilles tendons, bend your back leg as well.

 Stretches: Calves, achilles tendons and ankles.

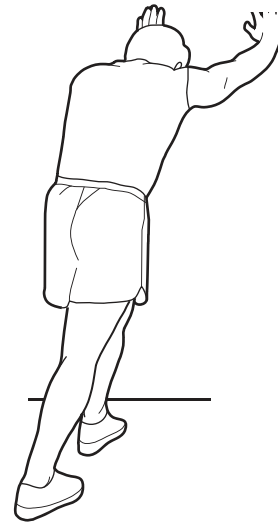

Quadriceps stretch

With one hand against the wall for balance, reach back and grasp one foot with your other hand. Keeping your bent knee pointing directly downward towards the floor, gently pull your heel towards your buttock until you feel a gentle stretch in the target area.

Hold for 15 counts, then relax.

Repeat 3 times for each leg.

Stretches: Quadriceps and hip muscles.



 
Inner thigh stretch

 
Sit with the soles of your feet together and your knees outward. Pull your feet toward your groin area as far as possible.

Hold for 15 counts, then relax.

Repeat 3 times.

Stretches : Quadriceps and hip muscles.

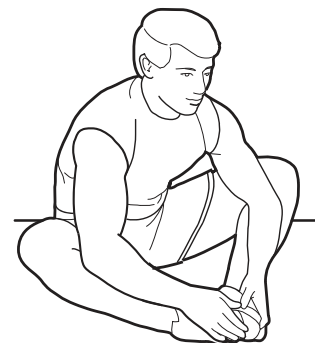

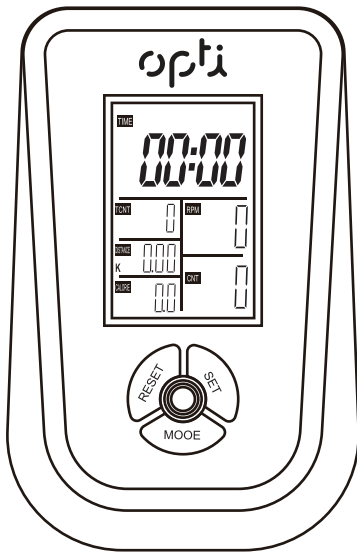

Specifications

Function	Time	0:00-99:59 hour/min
	Distance	0.000—999.9 km
	Calorie	0.0-9999 kcal
	Count	0-9999 times
	RPM	0-9999 times/min
	Total count	0-9999 times
Battery type	2 x Size - AAA (not included)	

KEY FUNCTION:

MODE: To select the function you want. Hold the key for 4 seconds to have all function values reset(total reset).

RESET: To let the value reset.

OPERATION PROCEDURES:

AUTO ON/OFF: The console will be automatically shut off if there is no signal coming in for 4 minutes. The console will be auto-powered when start exercise or press the key.

FUNTION:

1. **TIME:** Displays the Workout time during rowing.
2. **COUNT :** Current number of movement.
3. **CALORIE:** Burned calories during rowing.
4. **RPM:** Stroke per minute.
5. **TOTAL CNT:** Steps you have exercised.
6. **DIST:** Rowing distance

 
NOTE If there is a possibility to see an improper display on the console, Please replace the batteries to have a good result. This console uses two batteries. You can replace the batteries at the same time. Removed the battery cover by hand, install two pieces of 1.5V "AAA" new batteries, then install the battery cover.

Exercise Information




Adjustment of the resistance

Adjustment of Resistance level by turning the 8-level tension knob either to the right (increase) or left (decrease).

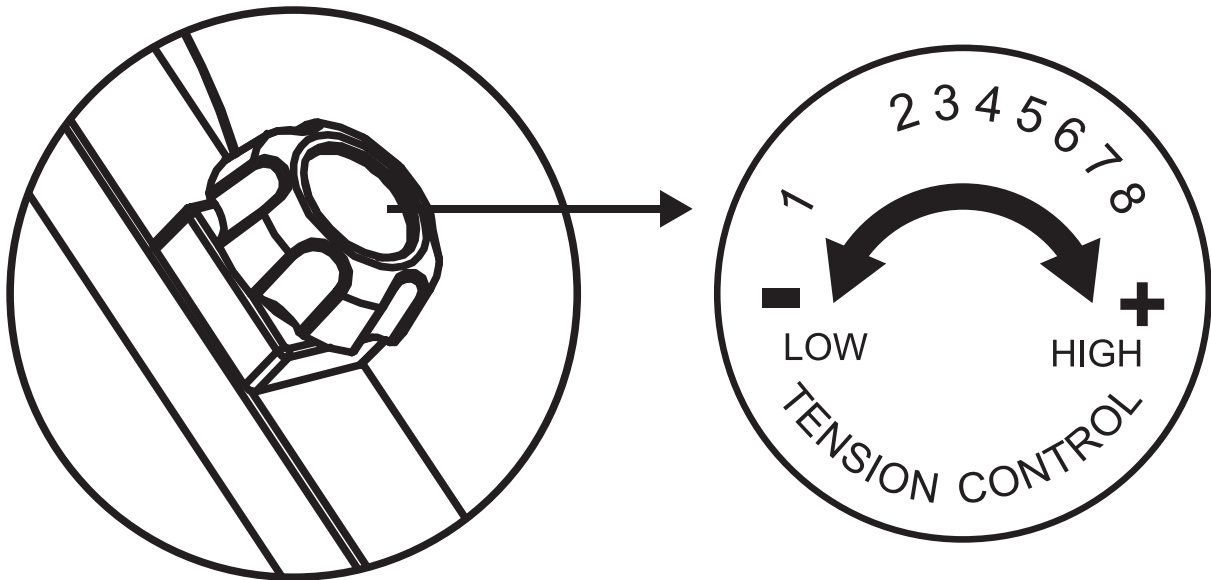


Storage

 1. To store the Magnetic Rower, simply keep it in a clean dry place.
2. Move the Magnetic Rower with the moving wheels on the End Caps of the FRONT STABILIZER(2). Lift the Rear Stabilizer (3) to move the Magnetic Rower. Don't hold the SEAT (26) to move the Rower. The SEAT (26) can move and may pinch your hand or fingers.
3. To avoid damage to the Console, remove the batteries for storage of more than one year.
4. Refer to the illustration below. You can stand the Magnetic Rower on end for storage.

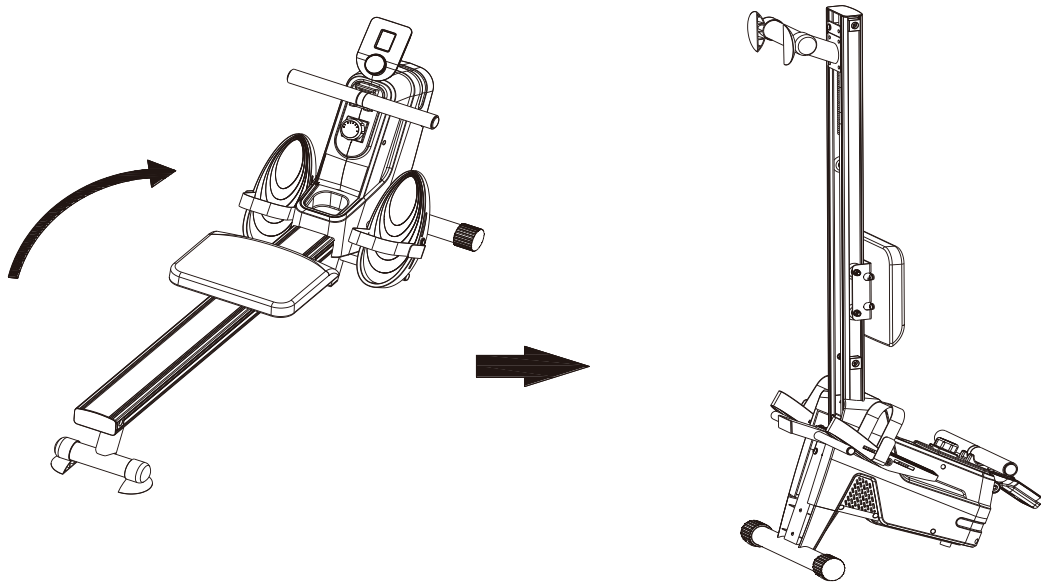


Moving Instructions

 Raise the rear stabilizer and push the rower machine when you want to move it.

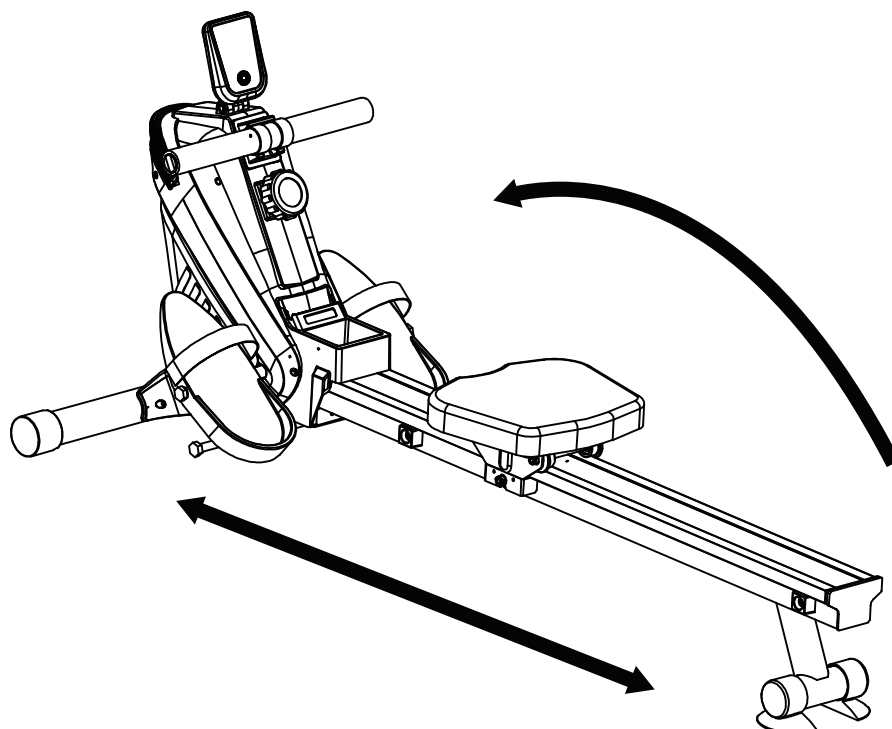


The Basic rowing stroke

 
1. Sit on the saddle and fasten your feet to the pedals using the Velcro straps. Then take hold of the rowing bar.
2. Take up the starting position, leaning forward with your arms straight and knees bent as shown in (Fig 1).
3. Push yourself backwards, straightening your back and legs at the same time (Fig 2).
4. Continue this movement until you are leaning slightly backwards, during this stage you should bring your arms out of the side (Fig 3). Then return to stage 2 and repeat.

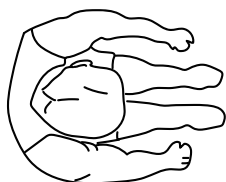

(Fig.1)

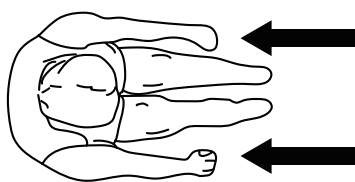 

(Fig.2)

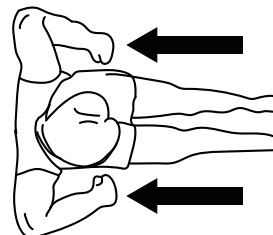 


(Fig.3)

Training Time


Rowing is a strenuous form of exercise, because of this it is best to start with a short, easy exercise programmed and build up to longer and harder workouts. Start rowing for about 5 minutes and as you progress, increase the length of your work out to match your improving level of fitness. You should eventually be capable of rowing for 15-20 minutes, but do not try to achieve this too quickly. Try to train on alternate days, 3 times a week. This gives your body time to recover between workouts.

Arms Only Rowing

 
This exercise will tone muscles in your arms, shoulders, back and stomach. Sit as shown in Fig 4 with your legs straight, lean forward and grasp the handles. In a gradual and controlled manner lean back to just past the upright position continuing to pull the handles towards your chest. Return to the starting position and repeat.

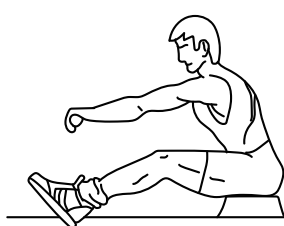

(Fig.4)

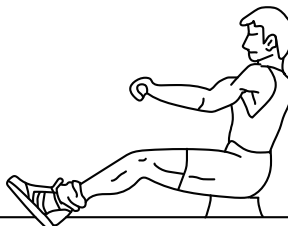 


(Fig.5)

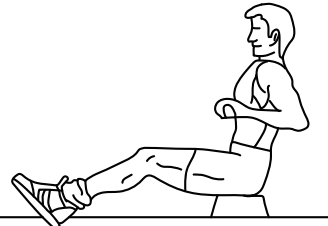 


(Fig.6)

Legs Only Rowing

 
This exercise will help tone muscles in your legs and back. With your back straight and arms out stretched, bend your legs until you are grasping the rowing arm handles in the starting position, Fig 7. Use your legs to push your body back whilst keeping your arms and back straight.

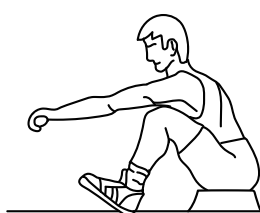

(Fig.7)

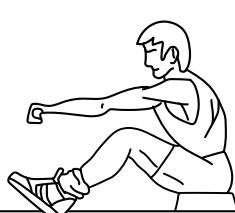 



(Fig.8)

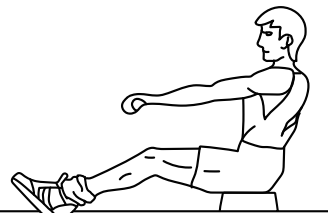 

(Fig.9)



  Warning: Hold the handlebar all the time during exercise, do not bounce the belt .

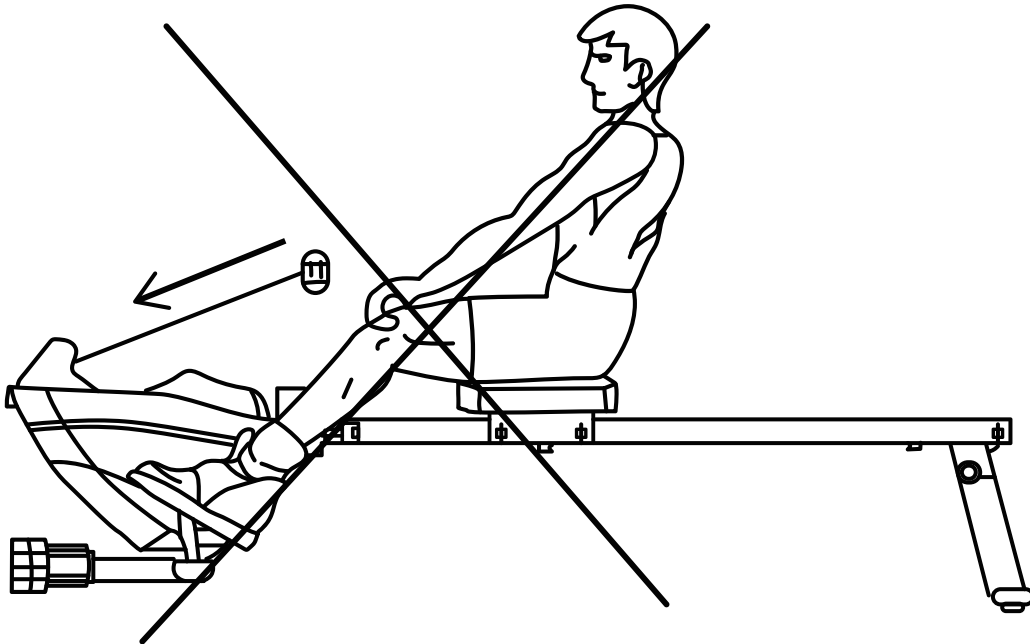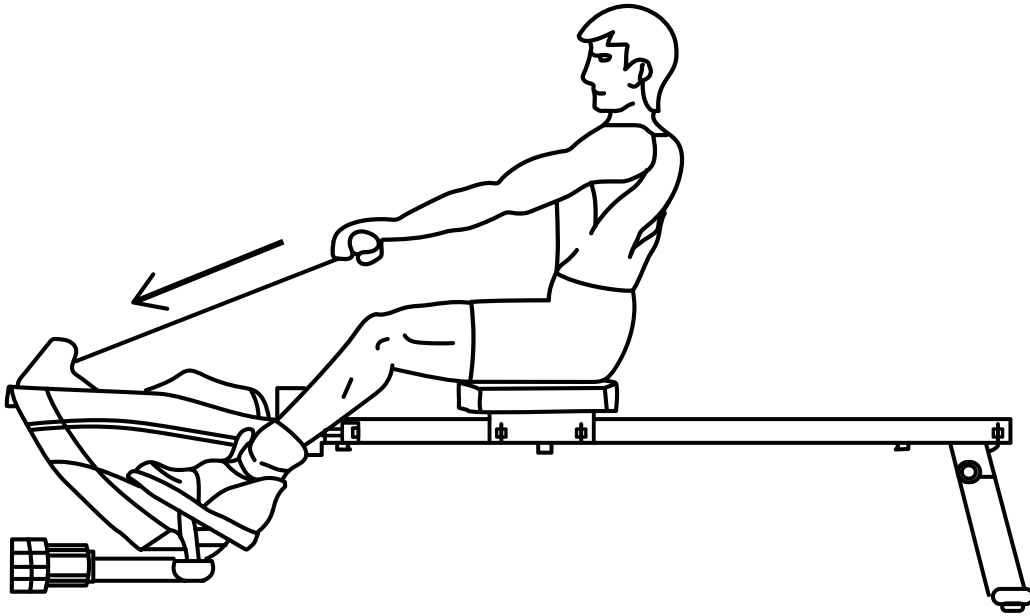

Care and Maintenance



1. The safety level of the equipment can only be maintained if it is examined regularly for damage and wear e. g. ropes, pulleys and connection points.
2. Lubricate moving parts with light oil periodically to prevent premature wear. To prevent damage to the computer, keep liquids away and keep it out of direct sunlight.
3. Inspect and tighten all parts before using the equipment. Replace defective components immediately and/or keep the equipment out of use until repair. Pay special attention to components most susceptible to wear.
4. The equipment can be cleaned using a damp cloth and mild non - abrasive detergent.
Do not use solvents.
5. Do not attempt to repair this equipment yourself. Should you have any difficulty with assembly, operation or use of your exercise product or if you think that you may have parts missing, contact the manufacturer, their approved service agent or the
Customer Helpline:
0345 600 1714 www.argos-support.co.uk
Guarantee:
For guarantee purposes, please retain your purchase receipt.

Information for Users on Disposal of old Equipment and Batteries

These symbols indicate that equipment with these symbols should not be disposed of as general household waste. If you want to dispose of the product or battery, please consider the collection systems or facilities for appropriate recycling.

Notice: The sign Pb below the symbol for batteries indicates that this battery contains lead.

 


Products



Battery

Exploded Parts Diagram

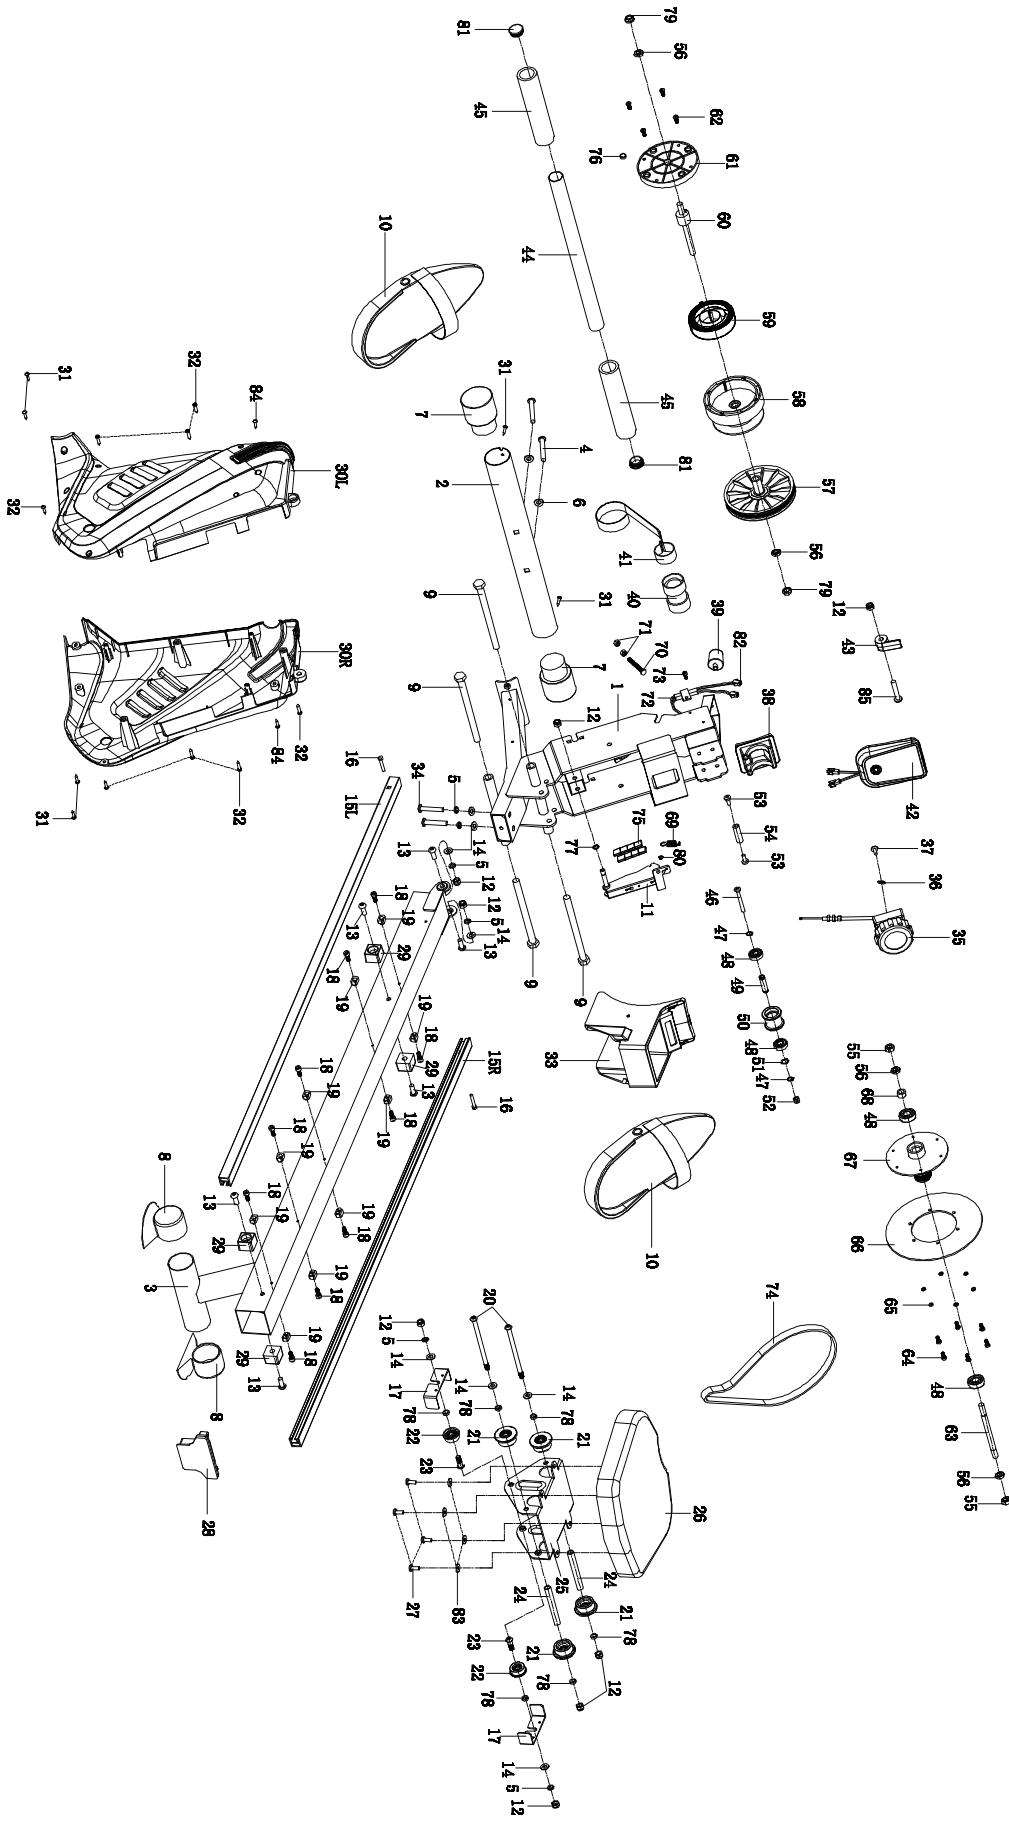

Parts List



No.	Sion Code	Description	QTY	No.	Sion Code	Description	QTY
1	SNSK01	Main Frame	1	43	SNSK45	Console Bracket	1
2	SNSK02	Front Stabilizer	1	44	SNSK46	Handle	1
3	SNSK03	Rear Stabilizer	1	45	SNSK47	Foam Grip	2
4	SNSK04	Bolt M8*60	2	46	SNSK48	Bolt M6*55	1
5	SNSK05	Washer D8	6	47	SNSK49	Shaft Circlip D10	2
6	SNSK06	Curved Washer D8	2	48	SNSK50	Bearing 6000Z	4
7	SNSK07	Front End cap	2	49	SNSK51	Belt Roller Bushing	1
8	SNSK08	Rear End Cap	2	50	SNSK52	Belt Roller	1
9	SNSK09	Bolt M12*160	4	51	SNSK53	Washer D10	1
10	SNSK10	Pedal	2	52	SNSK54	Nylon Nut M6	1
11	SNSK11	Magnetic Board	1	53	SNSK55	Bolt M6*10	2
12	SNSK12	Nylon Nut M8	8	54	SNSK56	Belt Shaft	1
13	SNSK13	Screw M8*20	6	55	SNSK57	Nut M10*1*H8	2
14	SNSK14	Washer Ø16 *Ø8.5*1.5	8	56	SNSK58	Nut M10*1*H5	4
15L	SNSK15	Left Rail	1	57	SNSK59	Belt Pulley	1
15R	SNSK16	Right Rail	1	58	SNSK60	Webbing Pulley	1
16	SNSK17	Screw M5*30	2	59	SNSK61	Spring	1
17	SNSK18	Plate	2	60	SNSK62	Belt Shaft	1
18	SNSK19	Bolt M5*15	10	61	SNSK63	Belt Shaft Cover	1
19	SNSK20	Front Stop	10	62	SNSK64	Screw 4.2*12	4
20	SNSK21	Bolt M8*130	2	63	SNSK65	Inertia Wheel Axle	1
21	SNSK22	Seat Cushion Roller	4	64	SNSK66	Screw M5*10	6
22	SNSK23	Lock Wheel	2	65	SNSK67	Washer D5	6
23	SNSK24	Bolt M8*25	2	66	SNSK68	Aluminum Sheet	1
24	SNSK25	Long Spacer	2	67	SNSK69	Aluminum Plate Fixing Sleeve	1
25	SNSK26	Seat Bracket	1	68	SNSK70	Inertia Wheel Sleeve	1
26	SNSK27	Seat	1	69	SNSK71	Spring	1
27	SNSK28	Screw M6*15	4	70	SNSK72	Bolt M6*50	1
28	SNSK29	Rail End Cap	1	71	SNSK73	Nut M6	2
29	SNSK30	Stop	4	72	SNSK74	Sensor Holder	1
30L	SNSK31	Left Housing	1	73	SNSK75	Screw ST4.2*12	1
30R	SNSK32	Right Housing	1	74	SNSK76	Belt	1
31	SNSK33	ST4.2*20 Screw	6	75	SNSK77	Magnet	8
32	SNSK34	ST4.2*20 Screw	8	76	SNSK78	Magnet	1
33	SNSK35	Holder	1	77	SNSK79	Washer D8	1
34	SNSK36	Bolt M8*45	2	78	SNSK80	Sleeve	6
35	SNSK37	Tension Control	1	79	SNSK81	Frank nut M10*1	1
36	SNSK38	Washer Ø18 *Ø5*1.5	1	80	SNSK82	Anti-off pipe plug	1
37	SNSK39	Screw M5*20	1	81	SNSK83	Plug	2
38	SNSK40	Handle Holder	1	82	SNSK84	Sensor wire	2
39	SNSK41	Cushion	1	83	SNSK85	Washer Ø6.2*Ø16*1.5	4
40	SNSK42	Handle Sleeve	1	84	SNSK86	Screw ST4.8*20	2
41	SNSK43	Belt	1	85	SNSK87	Bolt M8*35	1
42	SNSK44	Console	1				



Product Guarantee

This product is guaranteed against manufacturing defects for a period of



This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual.
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.
- In the event of a problem with the product within the guarantee period call the Customer contact number: 0345 600 1714 www.argos-support.co.uk

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW