

Sliding Glass Media Unit


Assembly Instructions - Please keep for future reference

622/8226

625/1499

625/3480

THE
COLLECTION
BY ARGOS

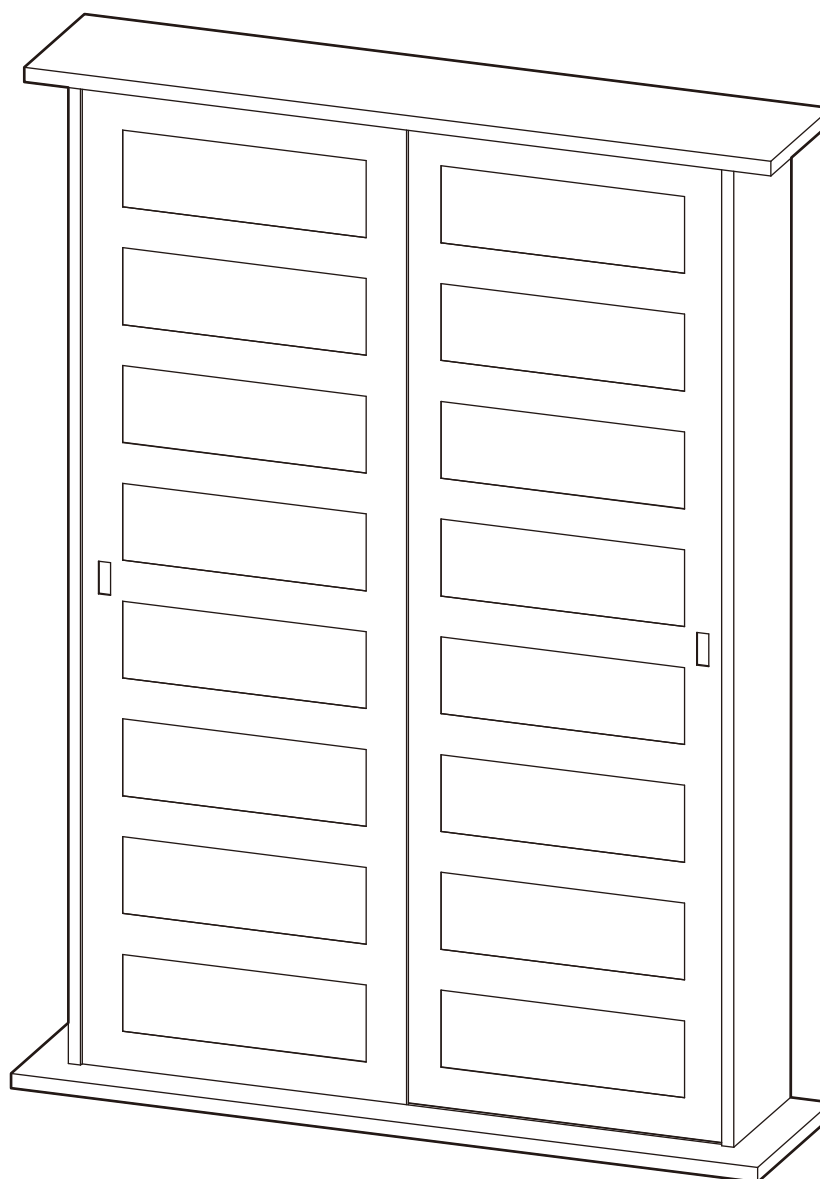

Dimensions

Width - 92cm

Depth - 24cm

Height - 123.4cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

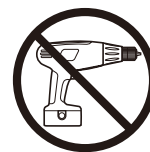

- We do not recommend the use of power drill/drivers **for inserting screws**,

as this could damage the unit. Only use hand screwdrivers.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Keep these instruction for future Reference

- This unit contains toughened glass with 5mm nominal thickness.

- Argos Ltd. MK9 2NW.
- Batch No. / Date of Manufacture.

- If a glass component is chipped or broken, stop using the product and consult the manufacturer or supplier.

Warning

- Do not place very hot or very cold items against or in close proximity to glass surfaces unless an adequately thick insulating material is used to prevent such items from coming into contact with the glass.

- Do not strike the glass with hard or pointed items.

- When cleaning glass panels use a damp cloth or leather with washing up liquid or soft soap if necessary; do not use washing powders or any other substances containing abrasives since these substances scratch glass.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0345 6400800**


Please check you have all the panels listed below




1 Top (19.7x92cm)

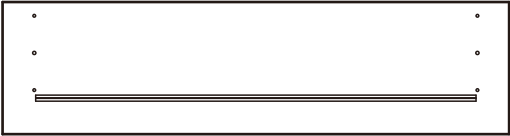

2 Base (24x92cm)

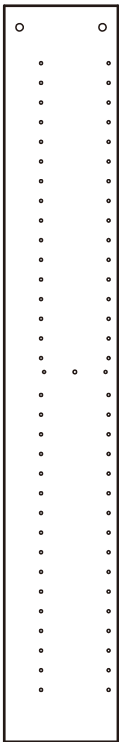

3 Left side (119.8x18.5cm)

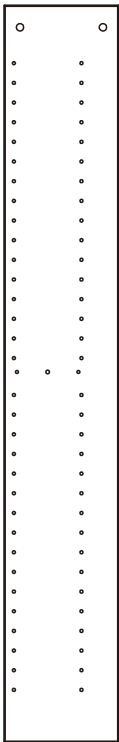


4 Right side (119.8x18.5cm)




5 Adjustable shelf x 6 (14x79cm)



6 Fixed shelf (14x79cm)

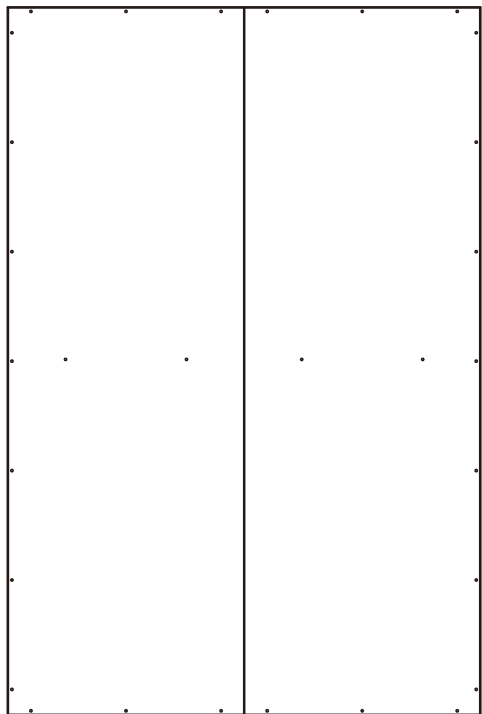

7 Back (122.8x81.8cm)

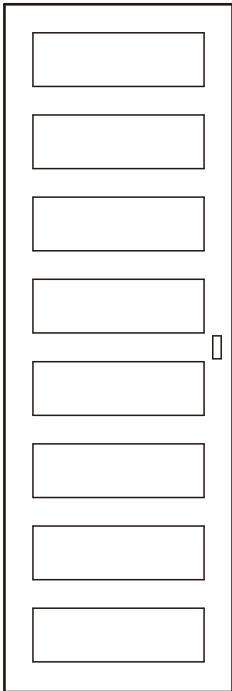


 



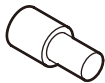




8 Glass door x 2 (120.5x40cm)

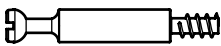


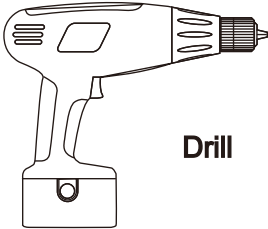





Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Cam bolt x 8	B  Cam lock x 8	C  45mm Screw x 4
D  15mm Screw x 28	E  Dowel x 6	F  Shelf support X 24
H  Wall strap x 2	I  12mm Screw x 2	J  Wall plug x 2
K  26mm Screw x 2		

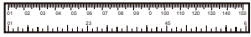Tools required

 Phillips screwdriver (medium & large)	 Drill	 Small hammer
 Flatblade screwdriver (medium)		 Ruler/tape measure
 7mm Suitable drill bit (for use with wall plug)		 Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Attaching Side panel

Screw the Cam bolt **A** and insert Dowel **E** into the panel **3** & **4**.

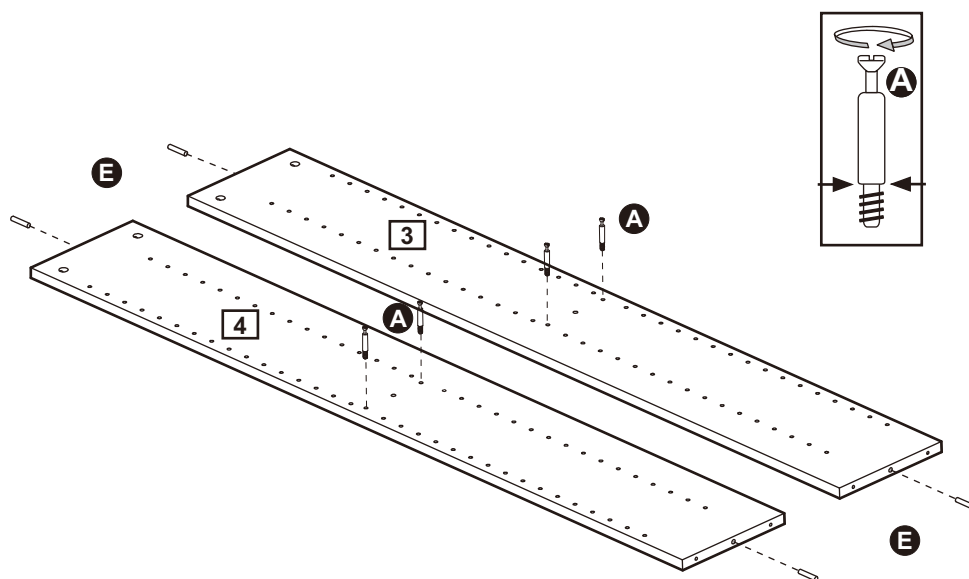

Step 2

Fixed shelf Assembly

Place Cam lock **B** into Fixed shelf **6**.


Ensure arrow on the Cam lock face towards the side panel to be attached.

Insert Dowel **E** into Fixed shelf **6**.

Do not force, if shelf does not fit easily check arrows on Cam lock **B** are facing the correct direction and try again.

Turn Cam lock **B** clockwise until tightened.

Be careful not to over-tighten as this can break the lock.

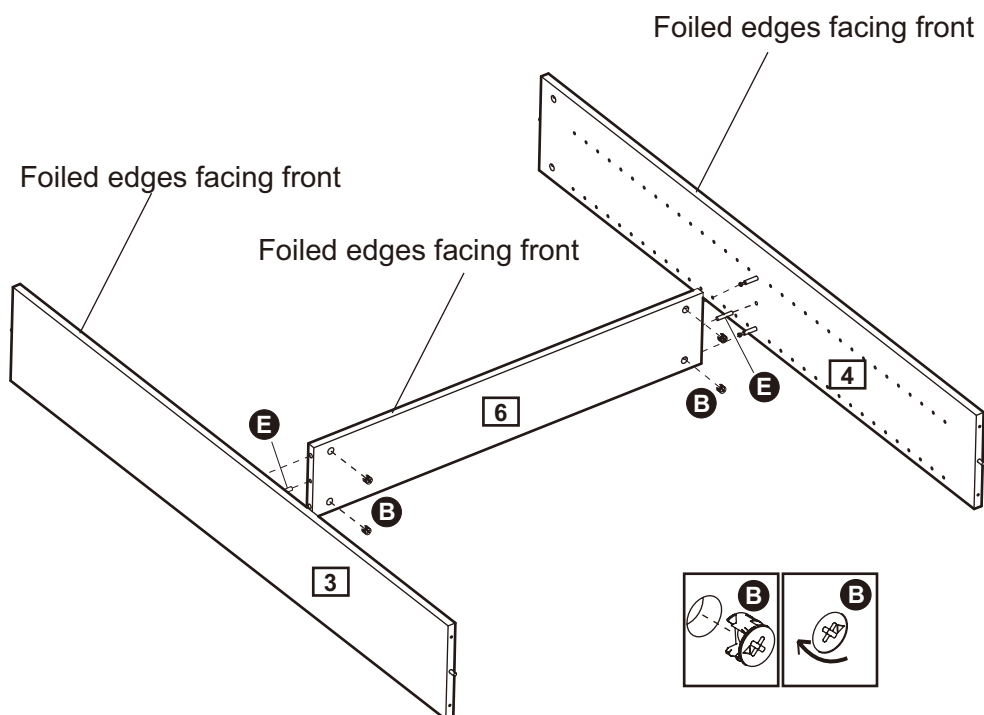


Assembly Instructions

Step 3

Attaching Top panel

Screw the Cam bolt **A** into the top **1**.

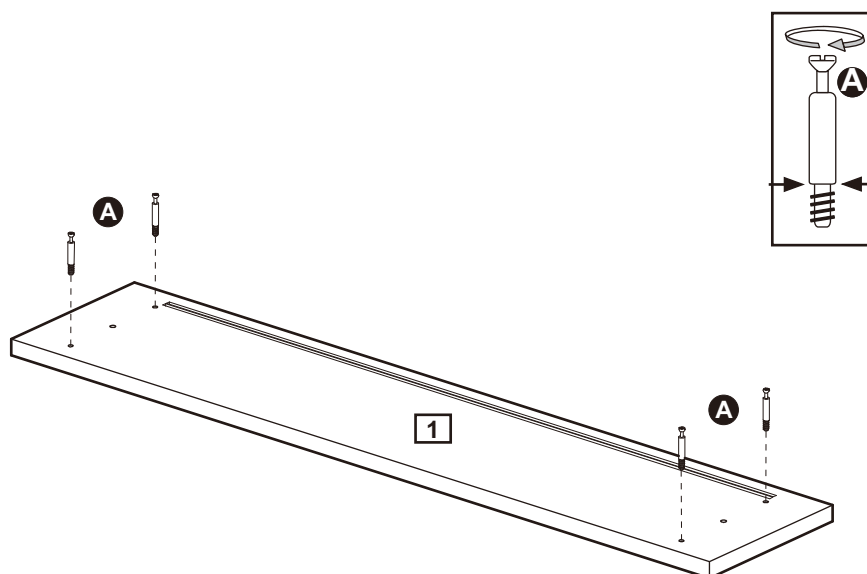

Step 4

Attaching the Top


Place Cam lock **B** into side panels **3** and **4**.

Ensure arrow on the Cam lock face towards the Top **1** to be attached.

Do not force, if the top does not fit easily check arrows on Cam lock **B** are facing the correct direction and try again.

Turn Cam lock **B** clockwise until tightened.

Be careful not to over-tighten as this can break the lock.

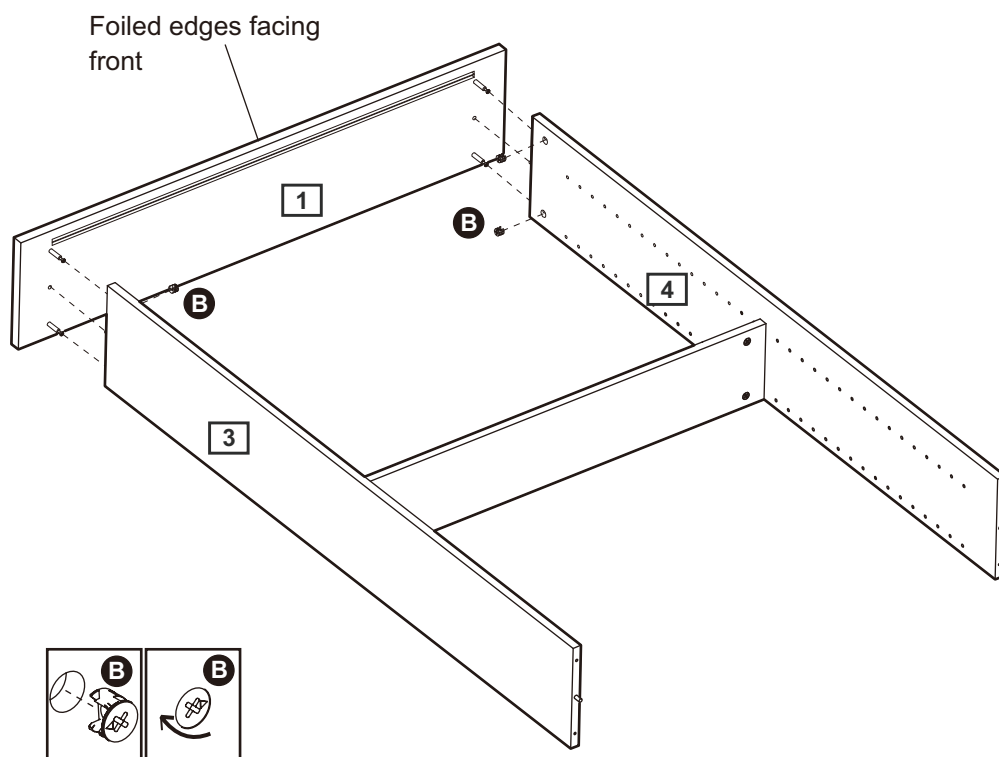


Assembly Instructions

Step 5

Base Assembly

Attach the Base **2** to the unit using Screw **C**.

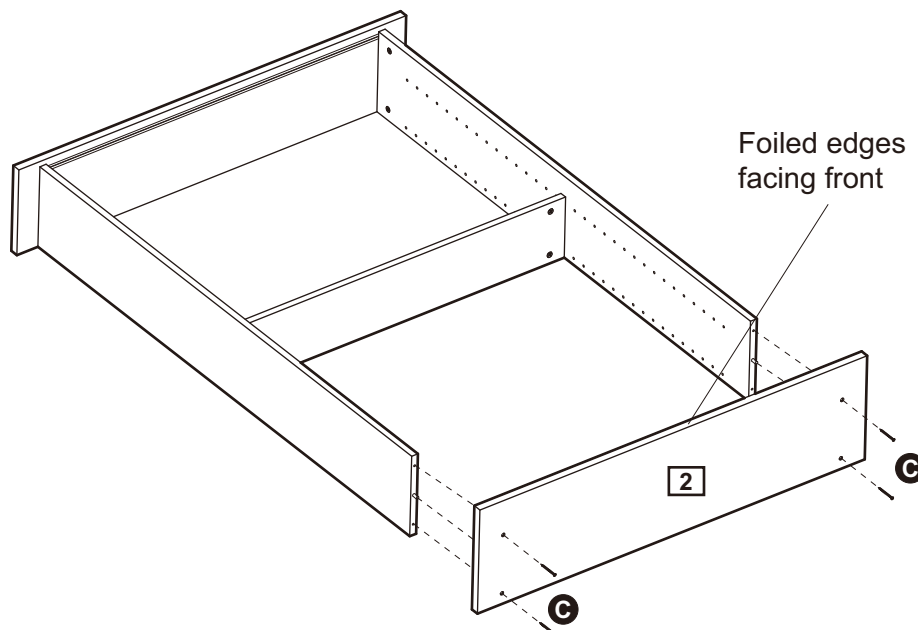


Step 6

Fixing Back panel

Turn the unit up side down carefully.

Attach the Back **7** with Screw **D**.


Attach the Wall strap **H** using Screw **I** into the Back **7**.

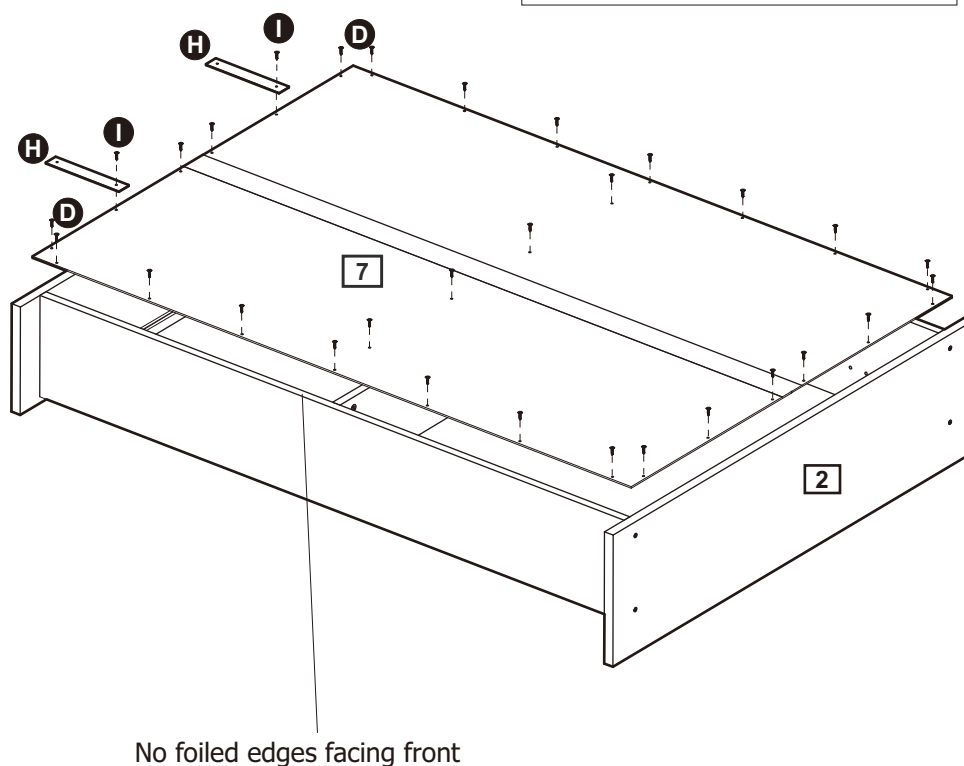

Assembly Instructions


Step 7

Attach the Shelf support **F** to the unit in the desired location, depending on the media to be stored.

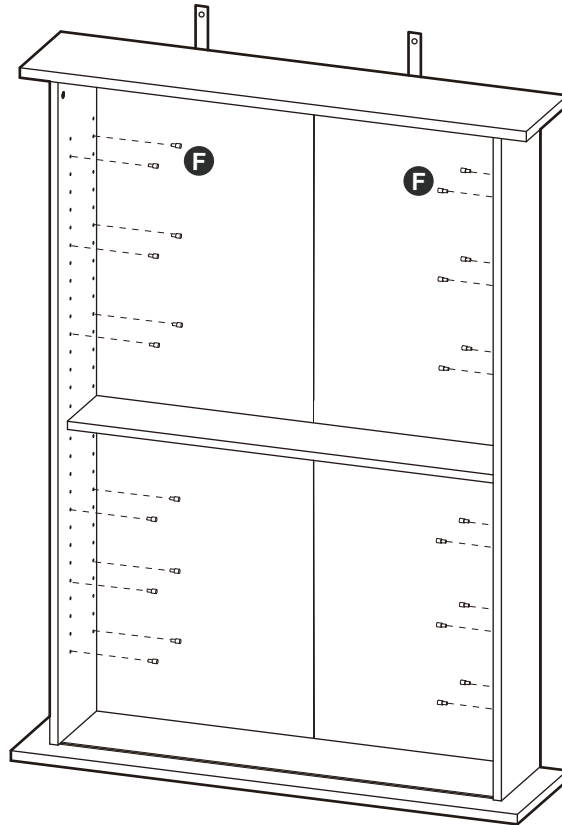

Step 8

Then install the Adjustable shelf **5**.

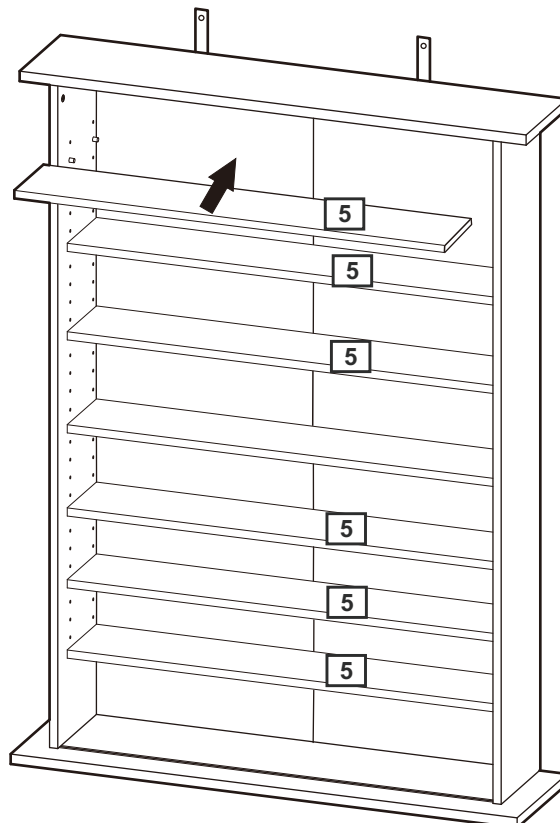


Assembly Instructions

Step 9

Glass door assembly

Attach the Glass door **8** to the unit in the corresponding grooves, ensure the finger grip is facing towards the sides of the unit, as per the picture.

One door needs to slide behind the other.

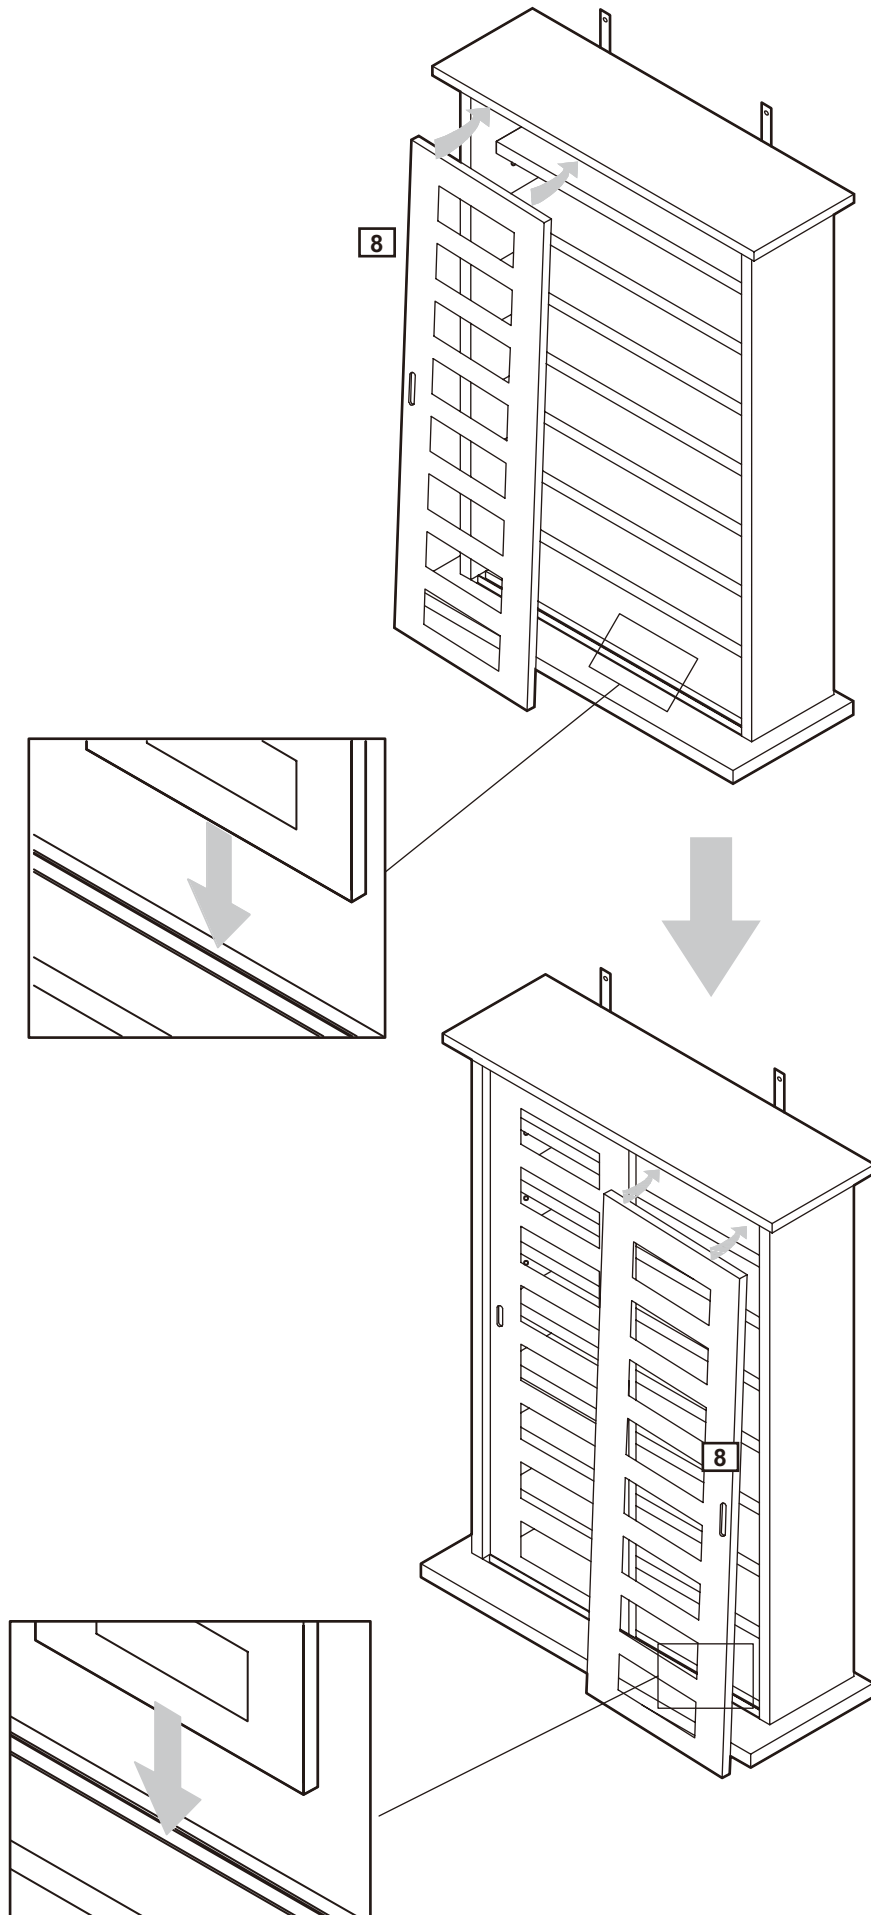

Assembly Instructions

Step 10

Fixing to wall

NOTE: It would be useful to ask someone to help you at this stage.


It is strongly recommended that the unit is attached to the wall using Wall strap **H**.

Drill a hole in the wall at an appropriate position and insert Wall plug **J**.



Warning:
Before drilling, check wall for hidden pipes and cables.

To secure the unit, fix Wall strap **H** to the wall using Screw **K**.

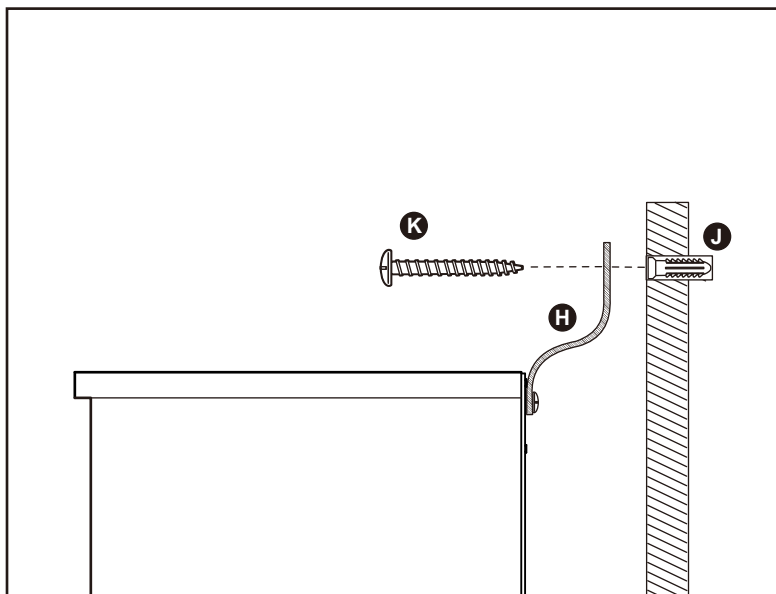

Assembly is complete.

Note: Wall plugs supplied are for solid walls only.

The correct type of fixing must be used for your wall, seek professional advice if in doubt.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: **General rule:** Always use a larger screw and wall plug if you are not sure.
- 2: Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

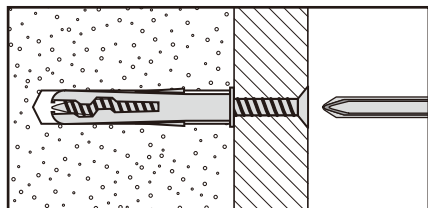


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

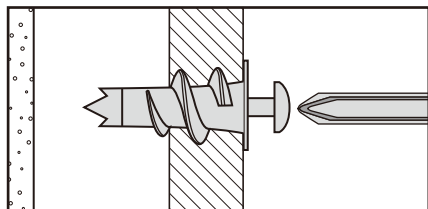


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

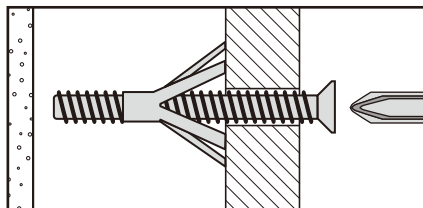


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

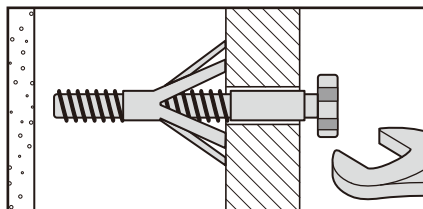


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

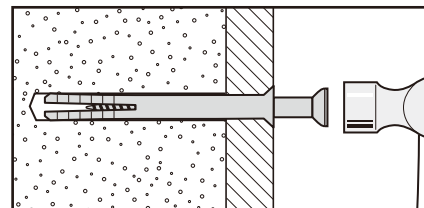

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

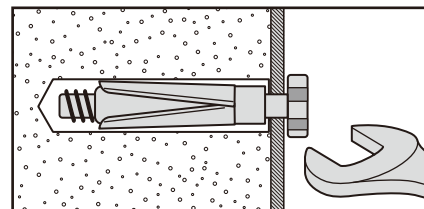

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.