

Lightweight Curtain Track

AG 25.0/2508

Fitting Instructions

Before fitting your track, please take care in reading these instructions and checking the contents of the pack against the table below.

Length metres →	1.2	1.5	1.8	2.4	4.5
Contents ▼					
A Plastic Track	1	1	1	1	1
B End stops	2	2	2	2	6
C Brackets	4	5	6	8	15
D Gliders	12	15	18	24	56

 
Tools required: Steel Tape measure, Soft Pencil, Posi-Drive Screwdriver, Spirit level, Drell and Drill bits, Hacksaw

Please ensure the correct wall plugs are used to suit your wall type.


Installation & Assembly

1. Carefully remove all packaging and clean the track by spraying with furniture polish and buffing with a soft cloth.

2. Measure out and if necessary cut lengths of track for the window required, allowing for curves when working within bay windows. Bends should not have a radius less than 225mm (9in).

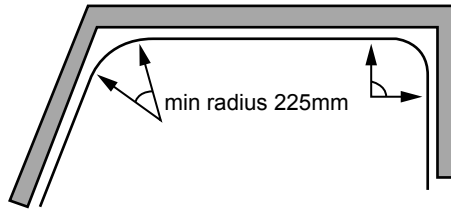


 3. Mark the position of the track above the window using a spirit level. The mounting brackets should be spaced every 365mm.

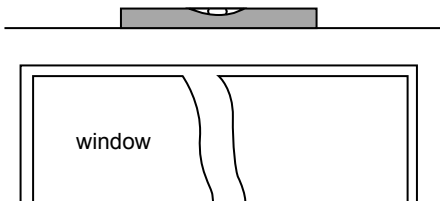


4. Mount a bracket at each side of the window inset 30mm from the end position of the rail.

 5. Brackets can be top mounted ① or front mounted ②.

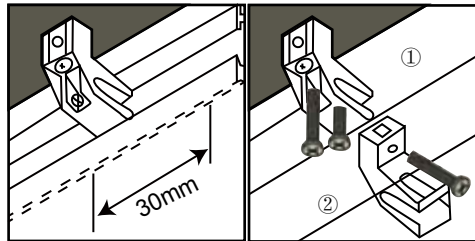


6. Mount the remaining brackets at the marked positions.

 
7. Slide or clip the rail onto the mounted brackets.

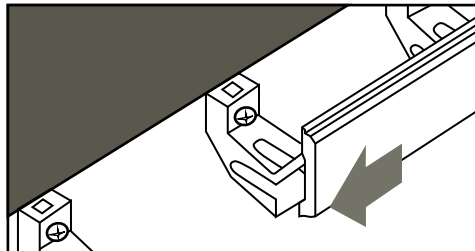

 
8. When the rail is in position tighten the locking screws to fix the rail. Clean the ends of the rail. Turn the locking screws to secure the ends in the rail.

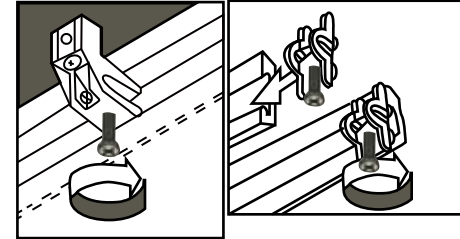

 9. Insert the Glidehooks into the curtain tape pockets at approximately 8cm intervals (the rings beneath the Glidehooks are only used with special pleating tapes).

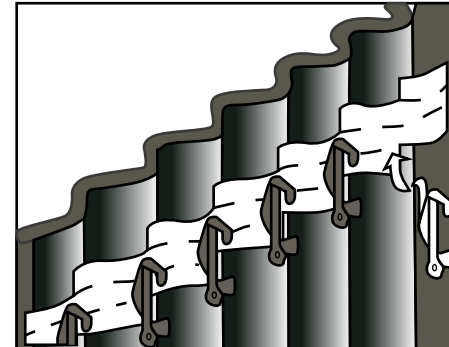

 10. Engage the bottom of the Glidehooks with the bottom of the rail and snap top of Glidehooks over the top of the rail.

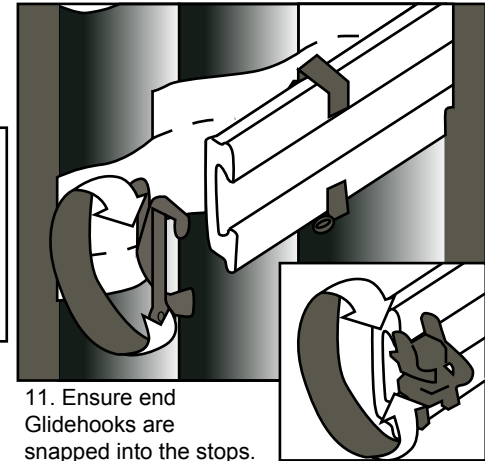

11. Ensure end Glidehooks are snapped into the stops.

Safety

- Only use step ladder or stable chair to reach batten and/or wall fixing height.

- Never over reach. Move the step ladder or chair and keep both feet firmly fixed.

- Do not hold or lean on the track to support your weight.

- Use two people for the installation of longer tracks.

- Take care when using power tools. Use of a Residual Current Device (RCD) is recommended.

- Always wear eye protection when drilling.

- Beware of hidden pipe runs and cables.

Care and Maintenance

- Tracks should be wiped clean periodically with a warm damp cloth.

- The occasional of furniture polish and buffing with a soft cloth will ease the movement of the glider.

 
Argos

Produced in China. Sainsbury's Supermarkets Ltd, Argos Limited, London EC1M 6HA, UK. Sainsbury's (NI) Ltd and Argos (N.I.) Ltd, Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK.

help.sainsburys.co.uk/help/contact-us
argos.co.uk/help/contact-us

A Guide to

Wall Mounting & Fixings

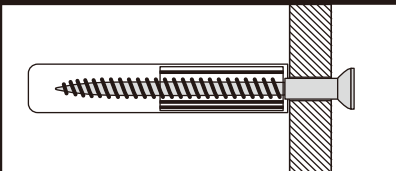

IMPORTANT:

When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
HINTS:

- 1) General Rule  Always use a larger screw and wall plug if you are not sure.
- 2) Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
- 5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug General Wall Materials

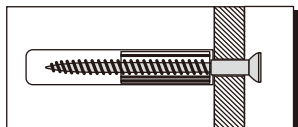

These come in various sizes and are made from plastic or sometimes wood fiber.

 
No.2 "General Purpose" Wall Plug Aerated / Breeze Block

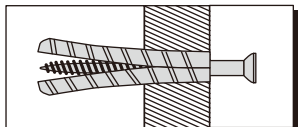

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.


For light loads, a General Purpose Plug can be used.

 No.3 "Shield Anchor" Wall Plug Heavy Loads

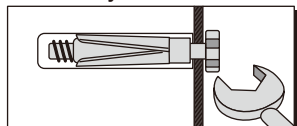


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

 No.4 "Cavity Fixing" Wall Plug

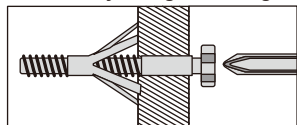


For use with plaster board partitions or hollow wooden doors.

 No.5 "Cavity Fixing - Heavy Duty" Wall Plug

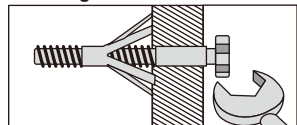

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

 No.6 "Hammer Fixing" Wall Plug

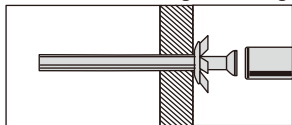

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

SAFETY

Always check the fitting and location to ensure your safety in and around the home.

FITTING

From time to time check the fitting to ensure the wall plugs or screws do not become loose.

WARNING

- Young children can be strangled by loops in pull cords, chains, tapes and inner cords that operate the product.
- To avoid strangulation and entanglement, keep cords out of the reach of young children. Cords may become wrapped around a child's neck.
- Move beds, cots and furniture away from window covering cords.
- Do not tie cords together. Make sure cords do not twist and create a loop.
- Please note that this corded pole is only suitable for straight runs and can not be bent to fit into a bay window.