# WATER HYACINTH CHEST-LARGE



#### Dimensions

Width - 120 cm Depth - 44 cm Height - 45cm

### Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos** 0345 6400800

# Safety and Care Advice

#### Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly may be easier with 2 people.



• To reduce the likely hood of damaging your product please ensure that your

power drill is set on a low torque setting.

#### Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners. • From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

#### **Handy Hints**

• Reguraly check and ensure that all bolts and fittings are tightend properly.

• Assemble the item as close to its final position (in the same room) as possible.

*Note:* if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

### Components

If you have damaged or missing components, call the **Customer Helpline: Argos 0345 6400800** 

Please check you have all the panels listed below



## **Components - Fittings**

### Please check you have all the fittings listed below

*Note:* The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

		B	G	
Screw	Ø6*50 mm x 8	Allen key	Bolt	Ø3*30 mm x 6
Screw	Ø6*40 mm x 10			

### **Tools required**



The Screw length is measured from the head to the point ( 50mm screws shown).

### Ruler - Use this ruler to help correctly identify the screws

# **Assembly Instructions**



## **Assembly Instructions**

### Step 3

Attach front panel 2 into bottom panel 6, left panel 4 and right panel 5. Using 4pcs of screw A and 4pcs of screw D as shown in the figure.





### Step 4

Connect top panel 1 to back panel 3 using 6pcs bolt C at the hinges. A hammer may be used to help to insert the bolts into the hinges.

Connect the strings by pressing the hook of the string on top panel **1**.

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos** 0345 6400800