 


TC Facet Towel Rail

Assembly Instructions – Please keep for future reference

634 / 4557 D

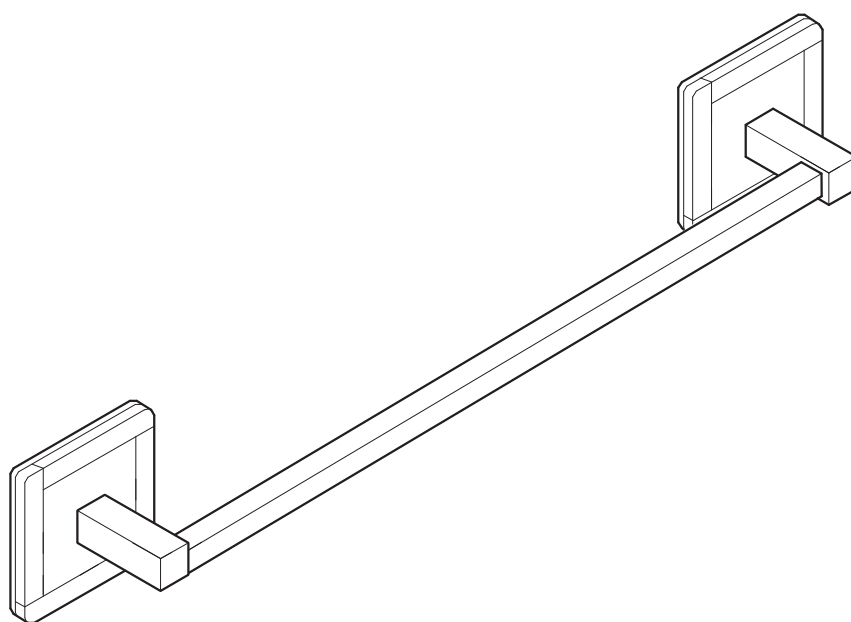

Warning: To prevent breakage - Do Not press on to the glass back plate too hard when assembling.

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Dispose of all packaging carefully and responsibly.
- **Warning:** To prevent breakage - Do Not press on to the glass back plate too hard when assembling.

Glass safety – Take care when handling glass, please follow the advice below

 
- If a glass component is chipped or broken replace with glass of the type described on this instructions. Consult the manufacturer, retailer or agent with regard to obtaining a manufacturing specification and shape for replacement glass quoting the model number, and batch or date of manufacture.
- Do not place very hot or cold items against or in close proximity to the glass surfaces unless adequately thick insulating material is used to prevent such items coming into contact with the glass.
- Do not strike the glass with hard or pointed items.
- When cleaning glass panels or mirrors use a damp cloth or leather with washing up liquid or soft soap if necessary.
- Do not use washing powders or any other substances containing abrasives since these substances scratch glass.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Parts

Please check you have all the parts listed below

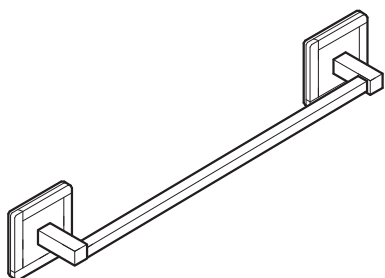


1 Towel rail

Components - Fittings


If you have damaged or missing components,
call the **Customer Helpline: 08456 400800**

Please check you have all the fittings listed below

 Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



Wall Plug x 4

 


Screw x 4



Washer x 2

 Tools required

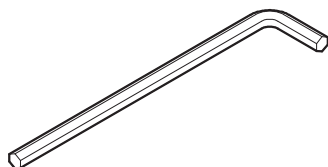

Allen Key
(Provided)

Assembly Instructions

 
Step 1

Decide upon position of items.

Vertically position the flat side of the metal wall plate on the wall. Mark screw fixing hole positions as required.



Note: Ensure gap in pin is on underside.

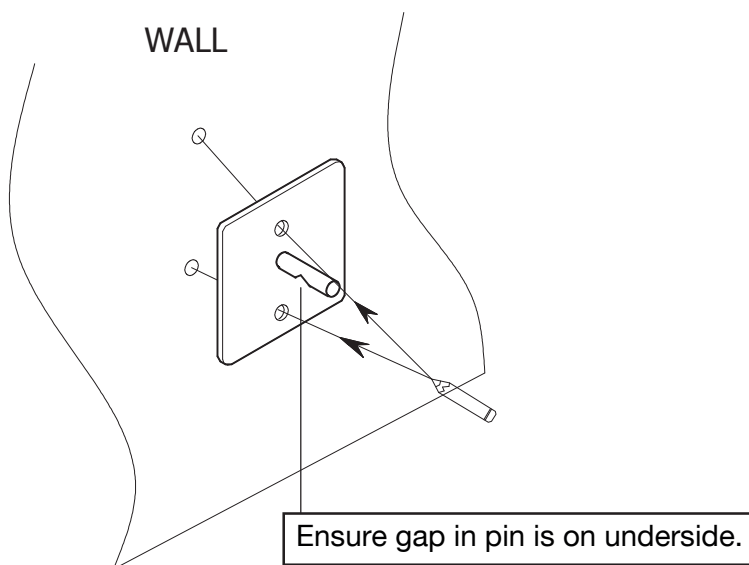


Step 2

Before drilling check for any hidden pipes and cables.

Drill holes (6mm diameter x 40mm deep) at the positions marked and push in the wall plugs **A** provided. Secure the back plate to the wall using the 2 screws **B**.



Ensure it is level before fully tightening.

 Ensure screw heads are flush with wall plate.

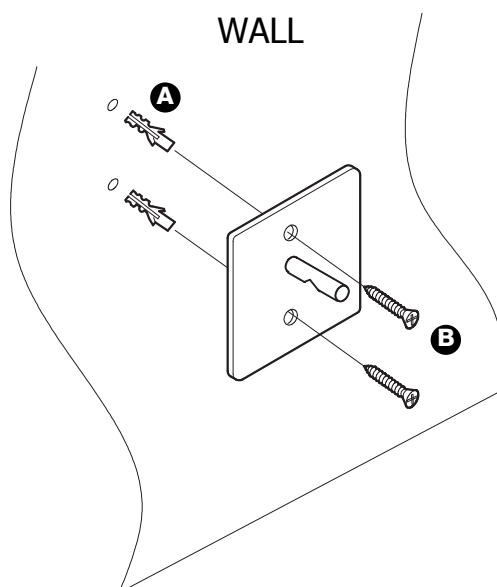

Step 3

  Peel off the pad cover and stick the Glass back plate over the back plate ensuring it is straight and central.

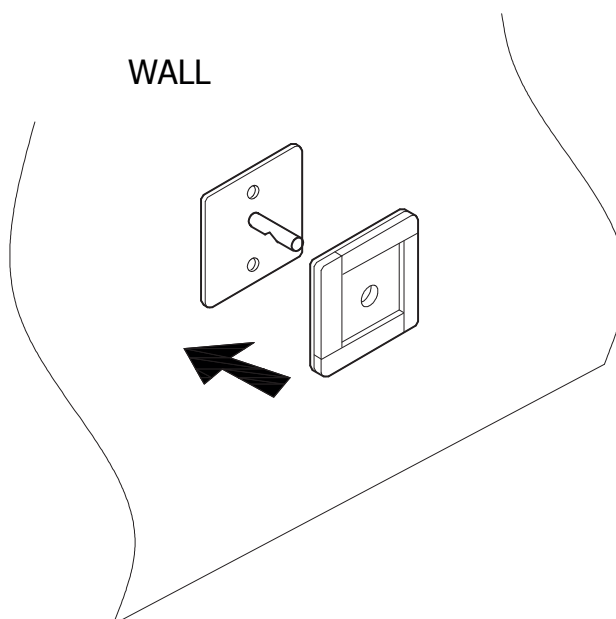

Assembly Instructions

Step 4

 
Loosen the grub screw as shown.

Place the washer **C** & metal part over the back plate. Secure by tightening the grub screw as shown.



Note: To prevent breakage - Do

Not press on to the glass back plate too hard when assembling.

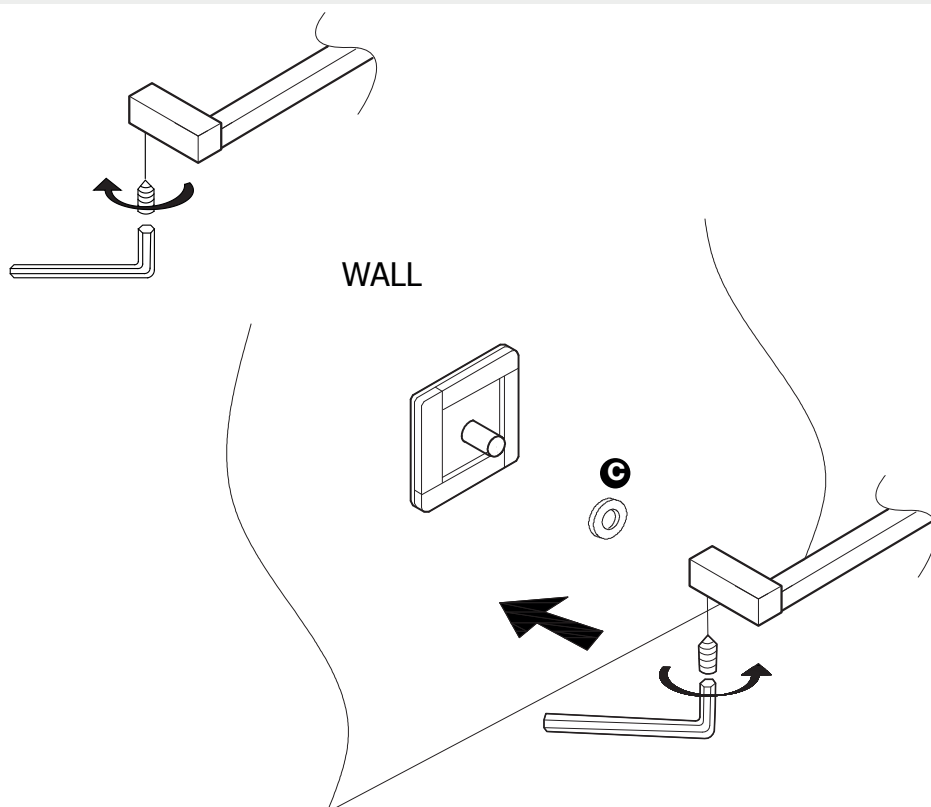


Note: The wall fixing

step is for securing the product to a wall and should only be attempted by experienced persons.



Note: The fixings described are

 for use with solid masonry walls only. Alternative fixings should be purchased if you have a different wall construction.

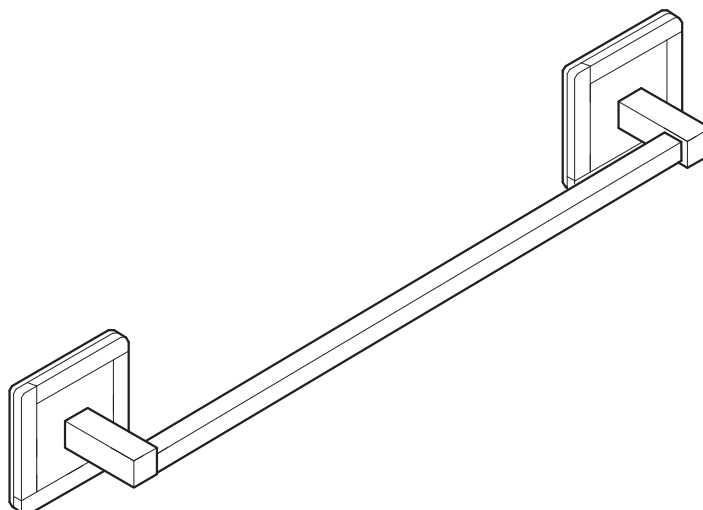

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Help Line: 08456 400800**
Home Retail Group plc. Avebury, 489-499 Avebury Boulevard. Milton Keynes. MK9 2NW

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.


Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

 
Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

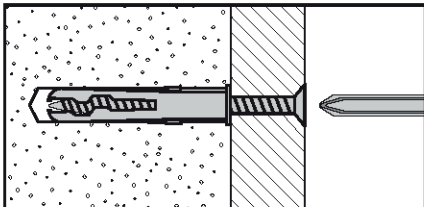


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

 No.2 "Plasterboard" wall plug

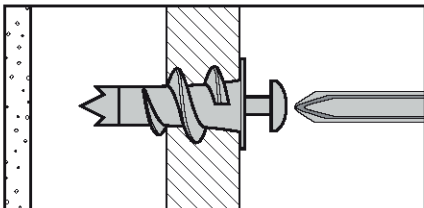


For use when attaching light loads on to plasterboard partitions.

 No.3 "Cavity Fixing" wall plug

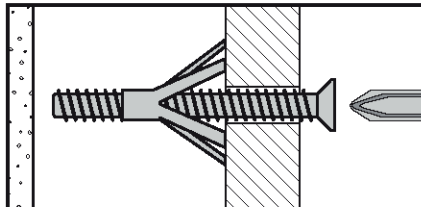


For use with plasterboard partitions or hollow wooden doors.

 No.4 "Cavity Fixing-Heavy Duty" wall plug

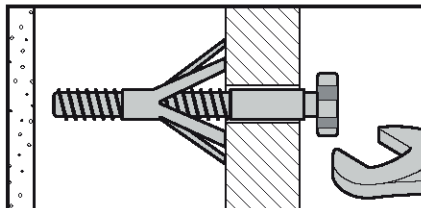


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

 No.5 "Hammer Fixing" wall plug

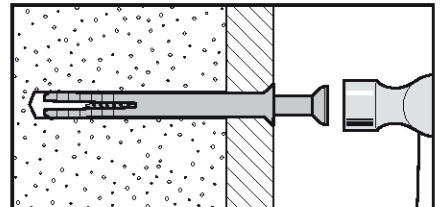

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

 No.6 "Shield Anchor" wall plug Heavy loads

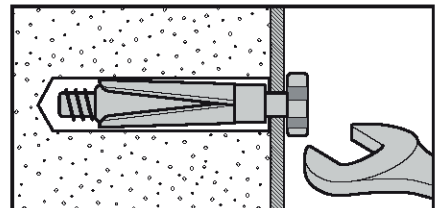

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.