Cast Aluminum Carver Chair

Assembly Instructions - Please keep for future reference

650/3037



Dimensions

Width - 52cm Depth - 54cm Height - 89cm

IMPORTANT-PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

For further assistance please visit http://www.argos-support.co.uk/

Retailer: Argos Address: 489-499 Avebury Boulevard Saxon Gate West, Central Milton Keynes Bucks, MK9 2NW

\land Safety and Care Advice

IMPORTANT PLEASE READ THESE INSTRUCTIONS FULLY BEFORE STARTING ASSEMBLY

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

 Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage. • Assemble on a soft level surface to avoid damaging the unit or your floor.

- Assemble the unit as close to its final position (in the same room) as possible.
- Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.

• This product is for domestic use.



• We do not recommend the use of power drill/drivers for inserting screws,

as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• Warning: The unit weights approxomately **6** kgs.

Safety weight:110kgs Please lift with care.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

- Suggestion:When you do not use it ,find one suitable cover on it.
- From time to time check that there are no loose screws on this unit.
- Don`t fully tighten all screws until assembly is complete.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.
- Make sure each screw match the correspondingfigure to ensure correct assembly.

Components - Parts


If you have damaged or missing components, call the Customer Helpline: 03456 400 800 For further assistance please visit http://www.argossupport.co.uk/

Please check you have all the parts listed below






2 4 x Rear Leg

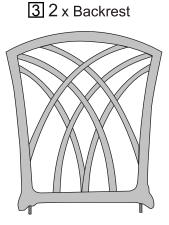



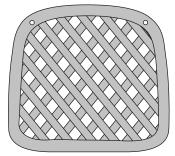






Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

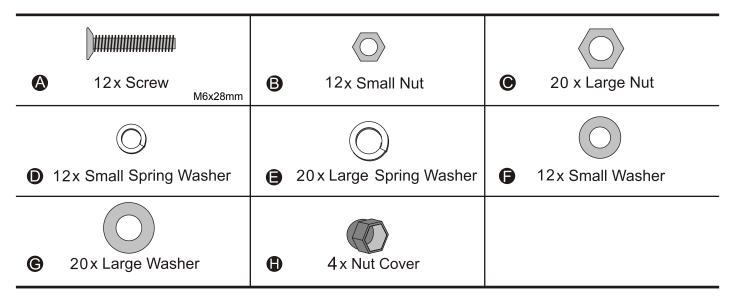

Tools required



1xWrench

Not included

Ruler - Use this ruler to help correctly identify the screws


 $0 \quad 5 \quad 10 \quad 15 \quad 20 \quad 25 \quad 30 \quad 35 \quad 40 \quad 45 \quad 50 \quad 55 \quad 60 \quad 65 \quad 70 \quad 75 \quad 80 \quad 85 \quad 90 \quad 95 \quad 100 \quad 105 \quad 110 \quad 115 \quad 120 \quad 125 \quad 130 \quad 135 \quad 140 \quad 145 \quad 150 \quad 155 \quad 160 \quad 165 \quad 170 \quad 100 \quad 10$

Assembly Instructions

Step 1

Take away the plastic covers on the studs and keep away from children!

Place the seat on one soft surface, such as carpet. Use large nuts , large spring washers and large washers for fix the front legs and rear legs onto the seat 4. See fig. 1.

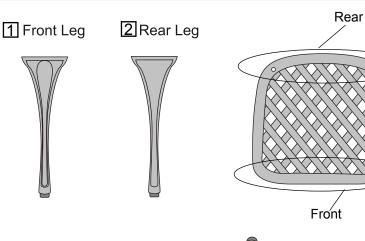

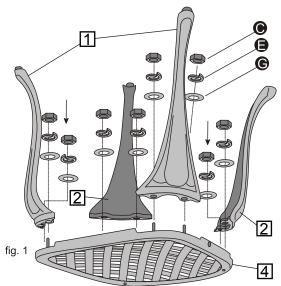


fig.2 Fig.2 Control Control

Step 2

Use large nuts, large spring washer and large washer to fix backrest onto the unit.

See fig. 2.

The rubber screw caps at the bottom of the four legs can be adjusted, if necessary, to make the legs level with the ground.


Assembly Instructions

Step 3

Use screws (), small nuts (), small spring washer () and small washers () to fix the left armrest () and right armrest () onto the unit. Then use two nut covers () to cover the small nuts () at the back of the backrest. See fig. 3. and 4.

Finally place the unit in the desired location. **See fig. 5.**

Check you have tightened all the screws. Assembly is complete

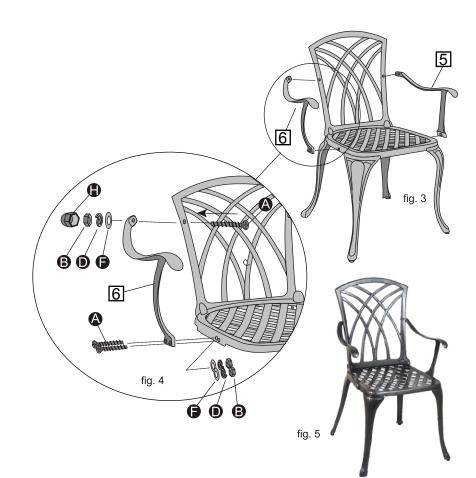

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800 For further assistance please visit http://www.argos-support.co.uk/ Retailer: Argos Address: 489-499 Avebury Boulevard Saxon Gate West. Central Milton Keynes Bucks. MK9. 2NW