



## Components

Ⓐ 1x Seat Unit

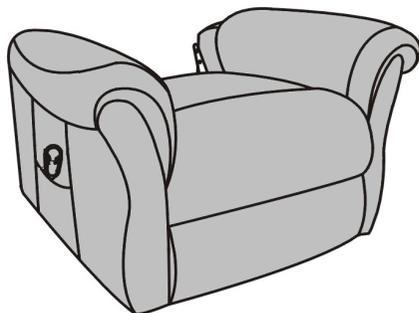

Ⓑ 1x Back Rest

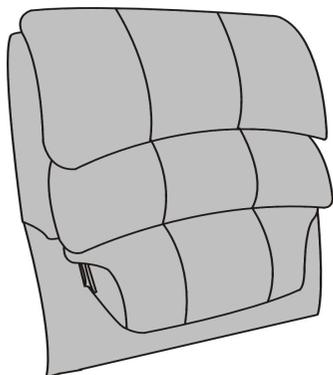

Ⓒ 1x Remote Control




# Warwick H9950C Power Recliner

Simple Assembly Instructions - Please keep for future reference

6905941

6911265

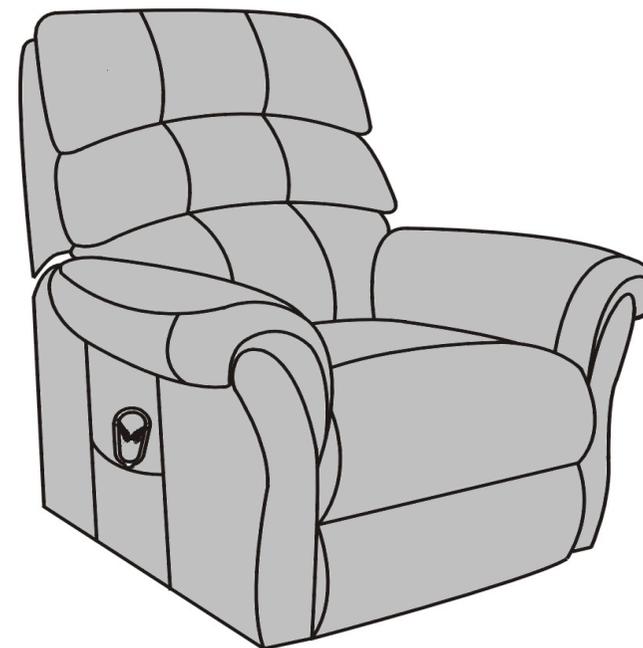

## Fittings

Ⓔ 1x Transformer



Ⓓ 1x Mains Electricity Supply Plug Cable



## IMPORTANT

1. Read these instructions carefully and familiarise yourself with the procedure before assembling the unit.
2. Check that you have all the component parts following the list on the back cover and familiarise yourself with each part before proceeding.
3. Take all the fittings out of the plastic bag and separate them into their groups.
4. Ensure you have enough space to lay out all the parts before assembly.
5. To avoid scratching it is recommended that you assemble the unit on a soft level surface.

# Assembly Instructions

## Stage 1 - Fiting the unit

**⚡ WARNING:** If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**NOTE:** It would be useful to ask someone to help you at this stage.

See fig. 1.

1. Remove and unpack the fittings which are stored under the Seat Unit (A).

See fig. 1.

2. Connect the Mains Plug Cable (D) socket (labelled G in fig 1) into the Transformer (E).

See fig. 2.

3. Please to find the Electric Motor Cable (H) which is fasted to the metal frame of the Seat Unit (A). **Please do not untie the wire on the metal frame.**



4. Connect the Electric Motor Cable (H) to the Transformer Cable (E) at point (F).

See fig. 2.

5. See fig 2 for the completed wiring connections.

6. Insert the Back Rest (B) into the Metal Locks of the Seat Unit (A). Ensure they lock into place by fully pushing them down.

See fig. 2.

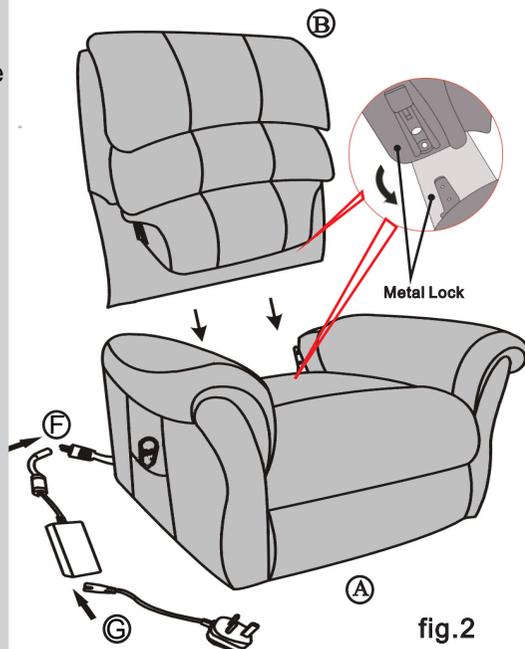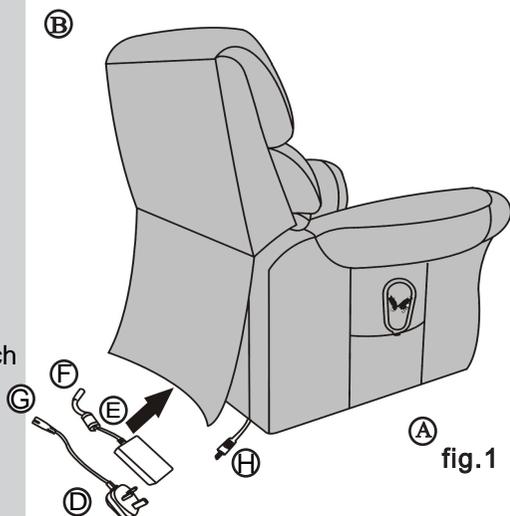

# Assembly Instructions

## Stage 2 - Adjusting the unit

**NOTE:** Connect the adapt or to the mains sock et.

### Back and Foot Rest Adjustment

This chair features a electronic reclining function and raised foot rest. You need to use the remote (C) to adjust it.



1. Remove the Remote Control (C) from the storage pocket

2. Push the "DOWN" button which will recliner the chair and raise the footrest

See fig. 3.

3. Push the "UP" button which will lower the footrest and move the chair to its normal position or incline it forward.

See fig. 4.

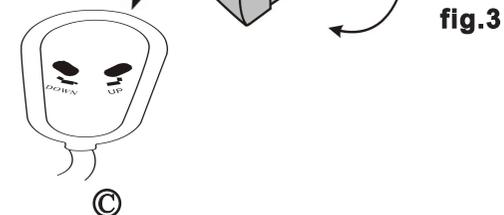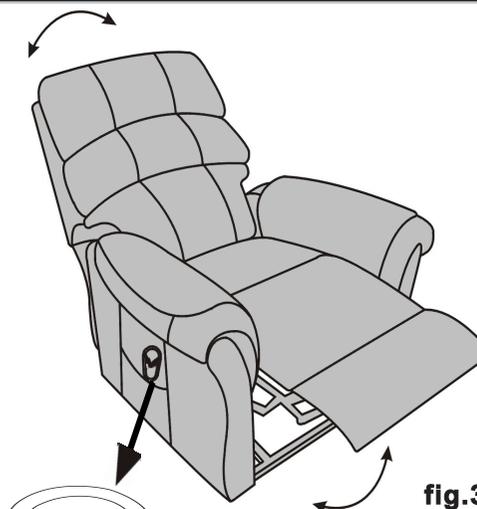

# Assembly Instructions

## Stage 3 - Safety Power Pressure Pads

1. The Warwick is fitted with 3 Pressure Pad Strips on the underside of the frame at the back and sides of the Chair. The diagram shows the locations

2. These are fitted for your safety to prevent entrapment by stopping the chair from any further motion should an object become trapped on the underside of the chair. When the pressure pad strip comes into contact with anything the chair will stop. The obstruction should then be removed to enable the chair to function normally.

3. It is important to ensure that these pressure pads are kept clear of obstructions.

4. Finally always make sure that there are no obstructions under the chair before or during operation. Children and Pets should always be kept away from the underside of the chair.

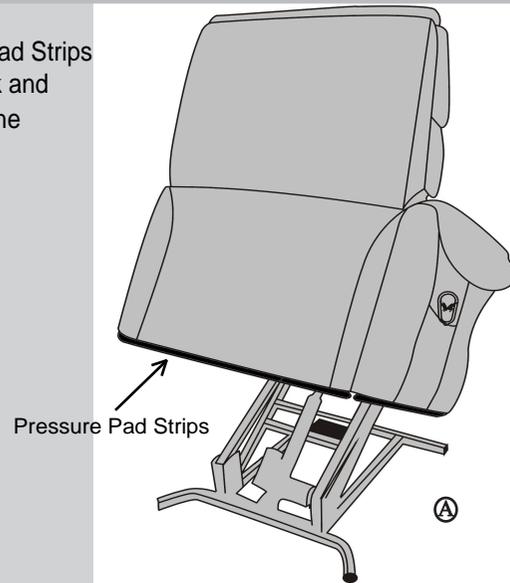


fig.5



fig.6

# Assembly Instructions

## Stage 4 - Finishing the Unit



### CAUTION:

- Beware of entrapment. Keep hands and fingers clear of mechanism when operating the controls.
- Ensure that children or pets are not playing or lying in the way when the mechanism is operated.
- Prevent children from playing on the furniture or with the controls.
- Ensure that the cable between the transformer and the plug is kept clear of the mechanism under the chair.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.



WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

NOTE: It would be useful to ask someone to help you at this Stage.

1. Finally carefully place the unit in the desired location.  
See fig.6.

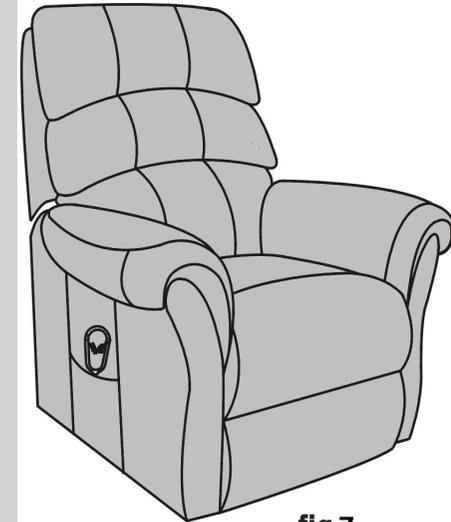


fig.7

## Care and Maintenance

### Safety

To avoid any risk of suffocation to animals or children dispose of the plastic bags immediately.

### Cleaning

As with all surfaces clean with a damp cloth and mild detergent, do not use bleach or abrasive products.

### Fitting

From time to time please ensure there are no loose screws on the product.