

cookworks

Can Opener

Model No. CO2061-V



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference




Electrical safety

- You should only plug the appliance into a 220V-240V AC, 50Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before assembling, cleaning or dismantling the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep motor housing, cable and plug and appliance dry and away from areas where it is likely to get splashed. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.

Warning!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not leave unattended during use.
- The cutting blade is sharp, take care when handling or removing from the opener for cleaning.
- Cut edges of the can and lid will be sharp. Take care when handling.
- Never try to open cans that are under pressure (e.g. aerosol cans) with this opener.
- This appliance can cause personal injury if misused.

Parts

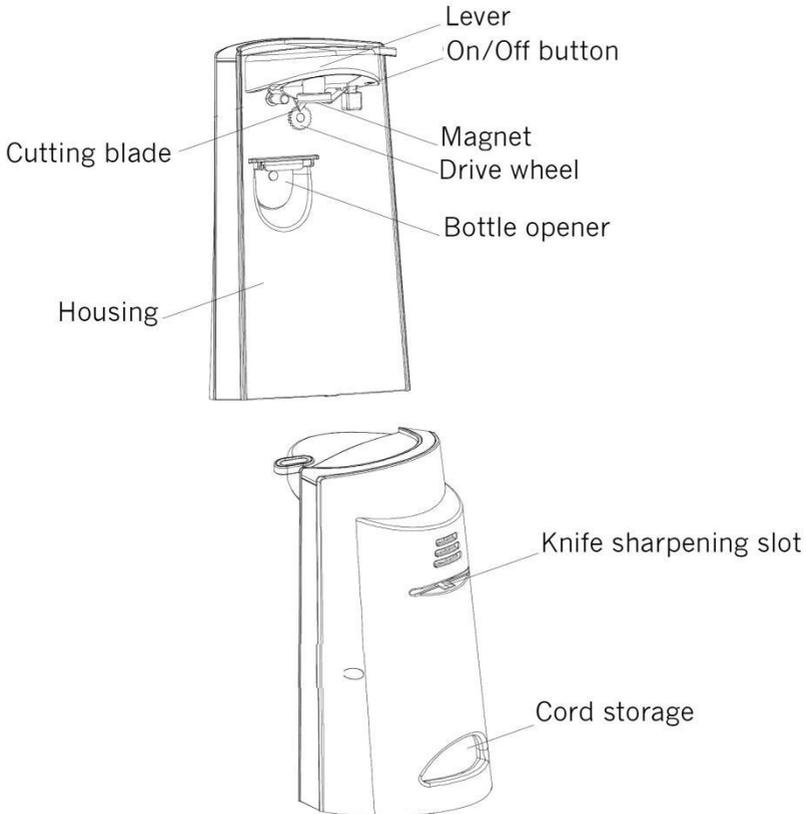

To use– opening cans

1. Fit the lever onto the body of the can opener (fig.1)
2. Place the can opener on a stable, flat surface and clean thoroughly before use. Plug in and switch the power on at the mains.
3. Lift the lever (fig. 2) and position the can so that the lower edge of the can lip rests on top of the drive wheel and the cutting blade is on the inside of the can lip as shown in fig. 3.

Fig. 1



Fig. 2


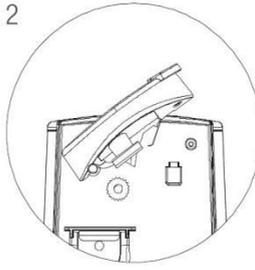


Fig. 3

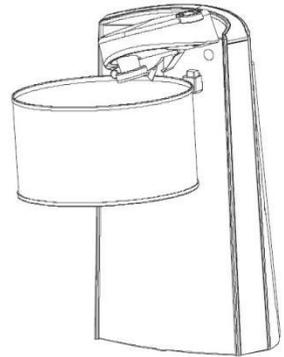

4. Lower the lever firmly so that the cutting blade pierces the lid this will start the can opener working automatically and the can will rotate. It is not necessary to hold the lever or the can during operation.
5. When the can is fully open the can opener will stop.
6. Open cans for a maximum of 1 minute of continuous use.
7. The cut edge of the can and the lid will be sharp. Take care not to touch either when removing the can and the lid from the opener. Hold the can, lift the lever and remove the can from the opener. The lid of the can will be retained by the magnet.
8. The can opener can be stopped at any time by lifting the lever, removing the plug or switching off at the mains.

Notes:

- This can opener is suitable for opening round rimmed cans with maximum dimensions - height 175mm, diameter 50 - 100mm, weight 0.6kg. For cans above 0.5kg, the top of the opener will need to be stabilized with one hand.
- The can opener is not suitable for opening rimless, aluminum, pressurized cans, cans with angled corners, or cans that are designed to be opened by another method (e.g. pull tab, peel off, rolling key etc.).
- Badly dented cans may cause the opener to stall. If this happens grasp the can and manually guide it through the cutter until the damaged area has been passed.
- To open a can that has become jammed, hold the can, lift the lever and release the can. Restart the cutting procedure again on a new place on the can.

To use – opening bottles

1. Place the can opener on a stable, flat surface near to the edge of a work surface.
2. Hold the body of the bottle and position with the cap underneath the top edge of the bottle opener (fig. 4). With your spare hand steady the top of the can opener.
3. Push the lower part of the bottle in a downwards direction to lever the metal cap off the bottle.

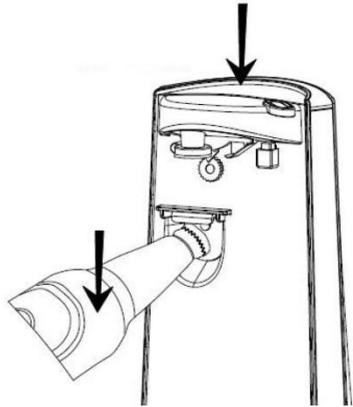


Fig. 4

Notes:

- Not suitable for removing screw caps.

To use – knife sharpener

1. Place the can opener on a stable, flat surface with the can opener sideways to your body.
2. Hold the top of the can opener with one hand.
3. Insert the heel of the clean knife to be sharpened into the groove (fig. 5) at the rear of the opener and with a light pressure, pull the handle of the knife so that the length of the blade passes through the sharpener. Repeat a further four to five times on each side of the knife.

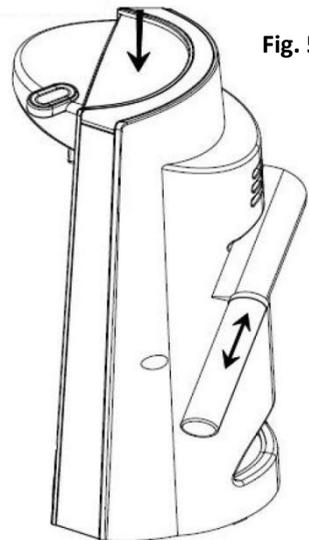


Fig. 5

Notes:

- Keep hands away from the sharp edge of knife at all times.
- Not suitable for sharpening serrated, hollow ground or ceramic knives or scissors.

Cleaning

Clean the blade assembly after each use.

1. Switch off and unplug the can opener from the mains.
2. Lift the lever and gently pull the assembly away from the opener.

Fig. 7


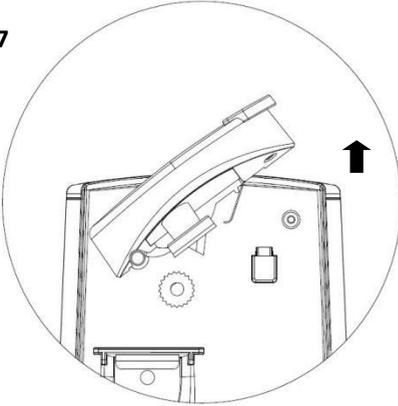



Fig. 8

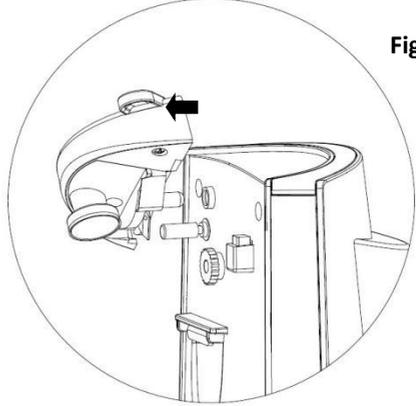

3. The blade assembly can be washed in hot water with a little washing up liquid. NOT SUITABLE FOR DISHWASHERS. Dry immediately to prevent rusting.
4. Wipe the drive wheel and the outside of the can opener body with a damp (not wet) dishcloth soaked in washing up water. Do not use detergents or abrasives as these may scratch the surface and **never immerse in water**.
5. Allow all surfaces to fully dry before using the can opener again.
6. To refit the blade assembly, reverse the above procedure.

Technical specification

Rated voltage	220-240V AC 50Hz
Power consumption	60W
Class rating	2 (double insulated)
BS 1362 fuse	3A

 



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk