

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: This appliance must not be taken into the bathroom.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: Do not use this appliance on synthetic hair or wigs.

NOTE: Use on dry hair only.

WARNING: Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2004/108/EC, the Low Voltage Directive 2006/95/EC, and the ROHS Directive 2011/65/EU.

OTHER PRODUCTS IN THE TONI&GUY SALON PROFESSIONAL COLLECTION

COMPACT AC POWER DRYER



UNIVERSAL COLLAPSIBLE DIFFUSER



EXTREME VOLUME ROLLERS



This appliance complies with EU legislation 2002/96/EC on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life.

Please DO NOT dispose of appliance in normal household waste. Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

For more information regarding TONI&GUY appliances, contact:

ProductService.co.uk
Unit 19 & 20, Calverton Business Park, Hoyle Road, Calverton, Nottingham,
NG14 6QL England.

Telephone: 0844 243 5225

Email: customer.services@hot-uk.co.uk

Website:

www.hairmeetwardrobe.com
www.toniandguyelectrical.com

TONI&GUY appliances by Helen of Troy Limited.

TONI&GUY and related logos are used under licence from Unilever PLC.

100 - 240 VAC 50 - 60 Hz 70W

© 2014 Helen of Troy (TGI-264)

These instructions are also available on our website. Please visit www.hot-europe.com



TONI&GUY

SALON PROFESSIONAL



XL WIDE PLATE

STRAIGHTENER

Use & Care Instruction Manual
TGST2998UK

OPERATING INSTRUCTIONS

This appliance is intended for household use only.
The appearance of this appliance may differ from the illustration.

CERAMIC TOURMALINE TECHNOLOGY

Ceramic Tourmaline is professionally preferred for its high heat that preserves hair's natural moisture for styles without frizz. The easy-to-clean plates emit high, constant heat to penetrate hair follicles quickly and retain natural moisture while minimising damage for soft, luxurious styles.

HEATING THE APPLIANCE

Plug the appliance into the mains. The digital display will flash to indicate the appliance is powered.

To switch the appliance on, press and hold the On/Off button (Ⓢ) until the temperature and timer graphics appear in the display.

Adjust the temperature to the level desired by pressing the (+) or (-) buttons.

The display graphics will be illuminated in blue to indicate the appliance is warming up. When the display graphics turn white the desired temperature has been reached and the appliance is ready to use.

Do not, under any circumstances, leave the appliance unattended when switched on.

To turn the appliance off, press and hold the On/Off button (Ⓢ) until the display flashes and unplug the appliance.

For first use it is recommended that you start with the lowest heat setting and gradually increase temperature to find a suitable level. Only use as much heat as you need for effective styling. Fine hair will require a low heat setting and thicker, less manageable hair will usually require a medium-high heat setting. Allow the appliance approximately 60 seconds to heat up.

AUTO SHUT OFF

Should you fail to turn off the appliance, it will automatically shut off after approximately 60mins. To reactivate press and hold the On/Off button (Ⓢ).

STYLING

To straighten, separate a two-inch section of hair, gently place the hair between the hot smoothing plates and clamp down firmly on the handle. Slide the plates carefully down the isolated section in a smooth, even motion from the root towards the ends of the hair.

This process should take approx. 5 to 8 seconds for fine hair and 10 to 15 seconds for thick hair (the ends will probably require less heat than hair that grows closer to the root). For best results, hold the ends of the hair while smoothing the section.

Finally, release the pressure on the handles and allow the hair to gently slide away from the plates. To create a "flick", use the rounded edge of the plates to curl up or under the ends of the hair.

AUTOMATIC WORLDWIDE VOLTAGE

This appliance will automatically adjust to the correct voltage.

CLEANING

Always unplug the appliance from the mains after use and allow it to cool before cleaning. To clean, wipe the plates with a damp cloth. Ensure the appliance is completely dry before use and that heated surfaces on the unit are free of dust, dirt, styling sprays and gels.

STORAGE

Always unplug when not in use. Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

WIRING


The mains lead of this appliance is fitted with a 13 Amp (BS1363) rewirable plug fitted with a 13 Amp fuse. If this is not suitable for the sockets in the home, it should be removed and disposed of safely and a suitable plug should be fitted.

Proceed as follows: The wires in the mains lead are coloured in accordance with the following code:

Blue – Neutral
Brown – Live

If the colours of the wires in the mains lead do not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:

The blue wire must be connected to the terminal marked with the letter N or coloured black. The brown wire must be connected to the terminal marked with the letter L or coloured red. Never connect the blue or brown wire to the earth pin E, when using a three pin plug. The appliance must be protected by a 13 Amp fuse if a 13A (BS1363) plug is used.

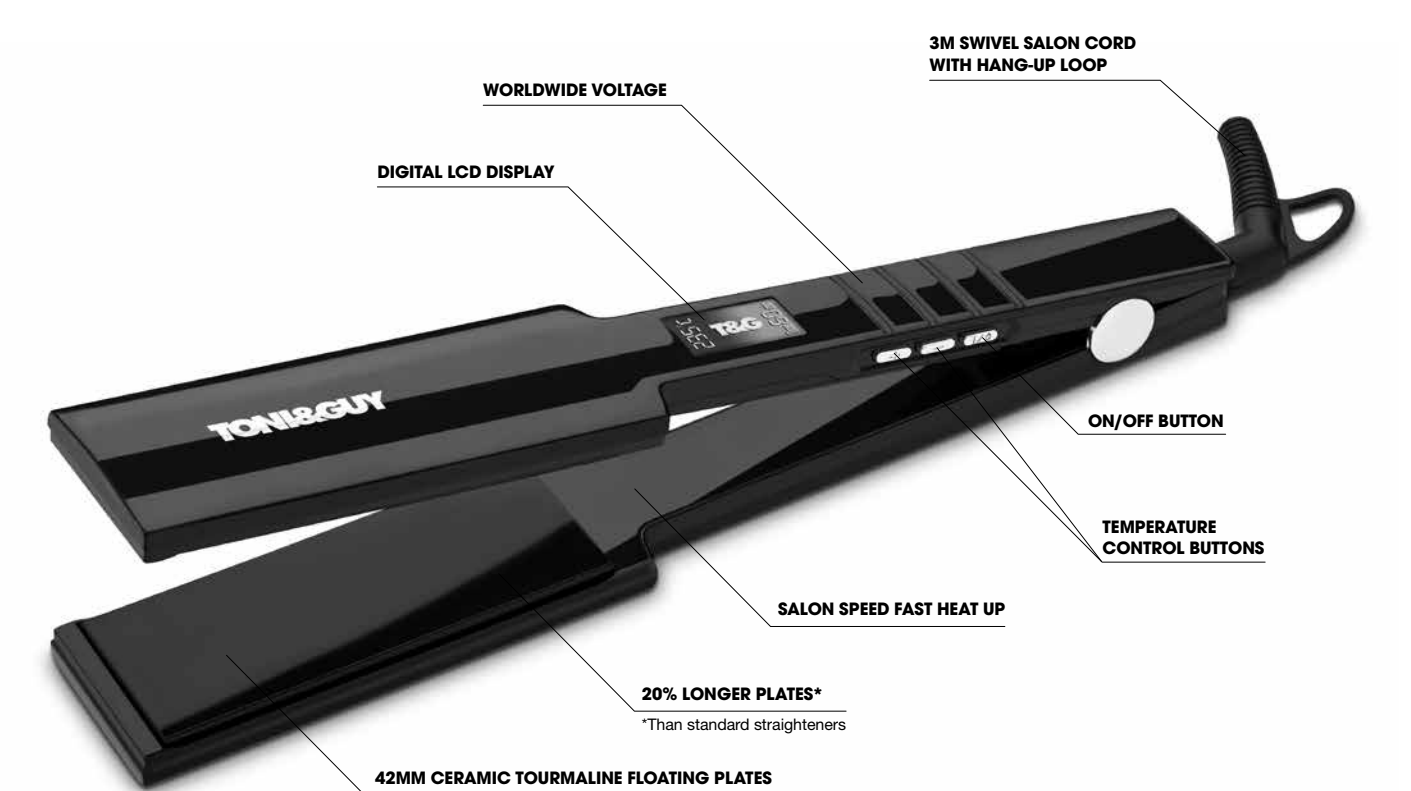

GUARANTEE AND SERVICE

Your TONI&GUY appliance is guaranteed against defects under normal use for five years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your till receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. For all claims within the warranty period please contact our Authorised Service Centre; via email: customer.services@hot-uk.co.uk or by telephone 0844 243 5225. This guarantee does not cover defects which have occurred due to misuse, abuse, or are caused by failure to follow the instruction contained within this manual. This does not affect your consumer statutory rights. The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3414 - product manufactured week 34 of the year 2014.

TOURMALINE COLOUR LOCK TECHNOLOGY

A naturally ionic crushed gemstone. The negative ions produced by this Tourmaline hair appliance help to protect your hair when styling, nourishing and conditioning hair allowing for a super smooth and shiny finish. Tourmaline helps prevent colour loss and maintain core colour intensity.