



**LITHIUM ION
STUBBLE TRIMMER**

STUBBLE TRIMMER

Please read all instructions carefully to familiarise yourself with your new Wahl Lithium Ion Stubble Trimmer before using.

Save these instructions for further reference.

For any further assistance or information call Customer Services on

T: 01227 740066

or visit

W: www.wahl.co.uk

E: customer.services@wahl.co.uk

CONTENTS

GENERAL USER INFORMATION	Page 3
IMPORTANT SAFEGUARDS	Page 4
OPERATING INSTRUCTIONS	Page 7
CARE AND CLEANING	Page 11
DISPOSAL	Page 12
WIRING	Page 12
PRODUCT REGISTRATION	Page 13
GUARANTEE	Page 14

GENERAL USER INFORMATION

Information about using the operation manual

- ▶ Before using the appliance for the first time, you must read and understand the operation manual completely.
- ▶ Consider the operation manual as part of the product and store it in a safe and accessible place.
- ▶ Include this operation manual if passing the appliance on to a third party.
- ▶ In the case of conflicts with national safety specifications or instructions, the national requirements must be followed.

Explanation of symbols and notes



DANGER

Danger of electric shock which may result in serious physical injury or death.



DANGER

Danger of explosion which may result in serious physical injury or death.



WARNING

Warning of possible physical injury or a health risk.



CAUTION

Information about danger of material damage.



Note with useful information and tips.

- ▶ Action to be taken by owner.
1. Carry out these actions in the sequence described.
- List

STUBBLE TRIMMER

Please retain this leaflet for future reference.

IMPORTANT SAFEGUARDS

When using your electrical appliance, basic safety precautions should always be followed, including the following:

Requirements on the user

- Read the instruction manual in full to familiarize yourself with the product before the first use.
- This appliance can be used by children from aged 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Use this appliance only for its intended purpose.

Hazards



Danger! Electric shock due to damage to appliance

- ▶ Do not operate the appliance with a broken cord, plug or charger, or if the appliance malfunctions, or is dropped or damaged in anyway.
- ▶ Any servicing or repair must be performed by an authorized service representative.
- ▶ The use of attachments that are not supplied by the manufacturer may cause fire, electric shock or injury and damage to the appliance.



Danger! Electric shock due to penetration of liquid

- ▶ To protect against risk of electrical shock, never immerse the unit or let it come into contact with water or any other liquids. Do not use the unit with wet hands. If the appliance should become wet, damp or fall in water, remove plug from mains socket immediately. Do not put your hands in the water. Do not take into bathroom.



Danger of explosion!

- ▶ Never use the appliance where aerosol (spray) products are being used or where oxygen is released.
- ▶ Do not attempt to replace the battery. Lithium ion batteries may explode, catch fire and or cause burns if they are dismantled,

damaged or exposed to moisture and/or high temperatures.

- ▶ Do not expose the appliance to temperatures below 0°C and above +40°C for any length of time. Avoid direct exposure to sunlight.




Warning! Injuries due to incorrect handling

- ▶ Switch off the appliance and unplug from outlet when not in use, before putting on or taking off attachments and also before cleaning the appliance.
- ▶ Never use your appliance without paying attention! Except when charging always unplug this appliance from the electricity outlet immediately after using
- ▶ Exhausted batteries/ rechargeable batteries should not be disposed of in the household waste. Dispose of them in a completely discharged state in accordance with local legal regulations. Do not throw into fire where heat could cause them to rupture.



Caution! Danger of product damage

- ▶ Do not wrap the cord around the appliance, charger.
- ▶ Do not use outdoors or in damp areas.
- ▶ Never carry the unit by its power cord.
- ▶ Do not drop or insert any object into any opening.

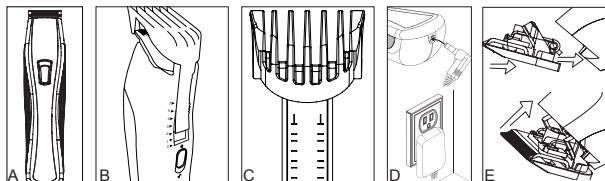

OPERATING INSTRUCTIONS

CHARGING INSTRUCTIONS

1. Only charge the device when charging is required. A charge is required when the product begins to slow down or has trouble maintaining speed while performing its intended function. (Note: If the product is cord/cordless, and you should run out of charge, you may continue running the device corded to complete your task.)
2. If the device is fully discharged, apply a charge right away to prevent damage or inability to recharge.
3. A partial charge is fine; Li-Ion does not require a full charge.
4. Charge the device at moderate temperatures. Do not charge below freezing.
5. If a charging stand is included, limit the time the product remains at full charge in the stand, especially if warm.
6. Do not leave the device connected to the charger, or sitting in the charge stand, when the charger is not plugged into an outlet for charging. (Note: It's okay to leave the device in its stand for storage if the stand allows for the charger to be disconnected from the stand or product)
7. Perform regular maintenance on the device including keeping the blades oiled, clean, and free of debris to prevent taxing the battery.
8. When not in use, store the partially charged device in a cool and dry place away from heat sources and direct sunlight (25°C Ambient or less recommended)

USING YOUR TRIMMER

QUICK START

1. Plug the cord into the trimmer (image D).
2. Plug the power supply into a wall outlet and charge for one hour (image D).
3. Unplug the trimmer and enjoy a great grooming experience.

STUBBLE TRIMMER

SPECIAL FEATURES:

- Your trimmer has been designed with several advanced features to help get perfect results every time you trim. Your trimmer may be used to neatly trim goatees, beards, moustaches, neckline, sideburns around ears and eyebrows, or anywhere you may need grooming. It also makes a great all-round family trimmer for mini haircuts and touch ups between trips to the barber or to clean up the shape of the neck (image A).
- Your trimmer has an ergonomic shape and grip for added comfort, designed so you always hold the trimmer in a comfortable position for precise trimming. The shape also provides optimum trimming visibility.
- A 7- position integrated guide comb makes achieving a consistent trim easy every time (image C). The guide can be removed (providing an eighth cutting position). To attach guide, simply slide it on, adjust the trimming length by moving the comb upward or downward with your thumb to the desired setting, and lock the comb into place (image B).
- A detachable blade system enables you to quickly change from standard-width blade for full grooming to a narrow-width blade for detail trimming around a moustache, goatee, or anywhere to define the hair line and clip any stray whiskers.
- To remove attachment, simply pull top edge of blade away from body unit. To attach align back tab of attachment head to cavity on the inner trimmer unit and push down on top of blade (Image E).
- Should blades become damaged or dull or if you want additional attachment heads for your trimmer, you may purchase them from Wahl. Be sure to ask for the following attachments with part number from our customer service department (see last page for contact information)

Trimmer Head #59300 (Included)

Detailer #59301

T-Blade #59302

Shaver #59303

Rotary #59306



The trimmer you have may not include all these attachment heads, but they will all work with your trimmer if you wish to purchase them.

STUBBLE TRIMMER

Self sharpening blades are high compression, high carbon steel, made to maintain their shape and sharpness for extended periods.

TROUBLE SHOOTING

If your trimmer does not seem to take charge, check the following before returning for repair.

1. Check outlet to make sure it is working by plugging in another appliance.
2. Make sure the outlet is not connected to a light switch which turns the power outlet off when lights are turned off.
3. Be sure the trimmer is properly connected to the recharging transformer, all connections are secure and the switch on the trimmer is turned OFF.
4. If your electricity is connected to a master power switch, we suggest the trimmer be disconnected from the charger anytime the master switch is off. Leaving the unit plugged into a dead outlet or an unplugged charger will drain the battery.
5. If trimmer does not run and it is completely charged, turn the unit ON and pinch or push the blades manually. (oil may have dried out between the blades, so they may be temporarily stuck together).

LITHIUM ION BATTERY REPLACEMENT, TRIMMER DISPOSAL AND RECYCLING

- Do not attempt to remove the battery. Lithium Ion batteries can explode, catch fire, and/or cause burns if disassembled, damaged or exposed to water or high temperatures.
- If you choose not to replace the battery, the entire intact trimmer unit must be disposed. Do not attempt to remove the battery for disposal. Lithium-Ion batteries may be subject to local disposal regulations. Many locations prohibit disposal in standard waste receptacles. Check your local laws and regulations

TRIMMING AND EDGING YOUR BEARD

The following are suggested trimming steps and trimmer positions. You may find different procedures work better for you

STUBBLE TRIMMER

1. Comb your beard in the direction that it grows to help reveal stray hairs that may be longer than others.
2. Attach the desired guide combs to trim and taper your beard.
3. Begin with the guide set at a longer trimming length. Trim toward your chin in smooth, overlapping strokes, following the lay of your beard. If you trim against the way your beard naturally lays, the trimmer will cut the hair much shorter and the result may be patchy. Adjust the trimming guides to progressively shorter settings until you reach the desired length of beard. You may wish to set the trimming guide.

NOTE: Always be sure the trimming guide is locked solidly into the desired position before you trim.

4. To cut the outline of your beard, remove the trimming guide. Starting under your chin and working back toward your jawbone and ears, cut the outer perimeter of your beard underneath the jawbone. Continue the line all the way up to the ears and hairline.
5. Accentuate your beard line by using the trimmer in a downward motion. Start at the line you've created and, working from the chin back toward the ears, trim the area right under your beard line.
6. Define the upper part of your beard using the same technique.

DETAILING NECKLINES, SIDEBURNS MOUSTACHES AND BEARDS

Slowly move trimmer downward on desired areas to neatly trim and shape.

TRIMMING ARM AND LEG HAIR

Simply guide the trimmer over your arm or leg until desired hair length is achieved. The first time you trim the hair, start by using a longer setting on the guide comb on the trimmer, then use progressively shorter settings if a shorter length is preferred.

TRIMMING CHEST AND STOMACH

Glide the trimmer over your torso region, in an upward motion until desired hair length is achieved. For tight, scratch free trimming use the #1 setting on the guide comb.

CARE AND CLEANING

Before storing your trimmer, use the cleaning brush to whisk away any loose hairs from the unit and blades. For units with a soft touch grip, use a damp cloth to wipe down the body of the trimmer, taking care not to get the blades wet. Store unit in such a manner so that the blades are protected from damage. When the trimmer is not in use, the trimmer guide/blade guard attachment should be in place to protect the blades.

OILING BLADES

For best results, put one or two drops of Wahl clipper oil on the blades, before and after every use. When oiling the trimmer, turn the trimmer ON, hold the unit facing down and squeeze one or two drops of oil onto the blades. Wipe off excess oil with a cloth.



Do not over Oil!

Excessive oiling or application of liquids will cause damage if allowed to seep back into the motor.

BLADE CARE

Trimmer blades have precision-hardened, ground and lapped cutting teeth. Blades should be handled carefully and never bumped or used to cut dirty abrasive material. Replacement blades can be ordered from the WAHL online store www.wahlstore.co.uk

DISPOSAL



Handle with care! Environmental damage in the case of incorrect disposal.


- ▶ Correct disposal will ensure environmental protection and prevent any potentially harmful impact on people or the environment.

Adhere to the relevant legal requirements when disposing of the appliance.

Information on the disposal of electrical and electronic appliances in the European Community:



Within the European Community, national regulations are specified for the disposal of electrical appliances, based on EU Waste Electrical and Electronic Equipment Directive 2002/96/EC (WEEE). In accordance with this, the appliance can no longer be disposed of with the local or domestic waste.

 The appliance will be accepted free of charge by local collection points or recycling centres.

WIRING



WARNING: If the transformer is damaged it must be replaced in order to avoid hazard. This product must only be used with the transformer supplied. Should a replacement be required, please contact WAHL customer services on 01227 740066.

PRODUCT REGISTRATION

Wahl are constantly developing and launching new products in the UK. We would like to understand your product needs and expectations and we value any comments you may have. As part of Wahl Customer Care, we are offering you the chance to be kept up to date with the latest product launches, innovations and special offers.

Please take a minute to register your product online at www.wahl.co.uk

STUBBLE TRIMMER

GUARANTEE

This product is guaranteed against defects in material and workmanship for a period of five years from the date of original purchase or receipt as a gift.

Should this product become defective during the guarantee period, return it to the store of purchase together with your proof of purchase for repair or replacement.

Alternatively within the guarantee period you can return the product to Wahl (UK) Ltd who will repair any such defect or elect to replace the product or any part of it, without charge, provided there is proof of purchase. Should a replacement be offered this will not extend the original guarantee period.

The guarantee becomes invalid in the case of misuse, alteration or repair by unauthorised persons.

This guarantee does not include blades, cables, shaver heads, foils and cutters etc., which are consumable parts.

This product is design for domestic use only and use within a professional environment will invalidate the guarantee.

This guarantee in no way affects your rights under law in the United Kingdom.

WAHL (UK) LIMITED
HERNE BAY TRADE PARK
SEA STREET
HERNE BAY
KENT
CT6 8JZ.

CUSTOMER SERVICES **T:** 01227 740066
www.wahl.co.uk

Form No. ZB264 Rev1 03-14