 


重点校对项

- 1. 版面尺寸
- 2. 材质标注
- 3. 物料编码
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 重量标注
- 8. 电压功率

1	2	3	4	5	6
项目					
库					
文件名					

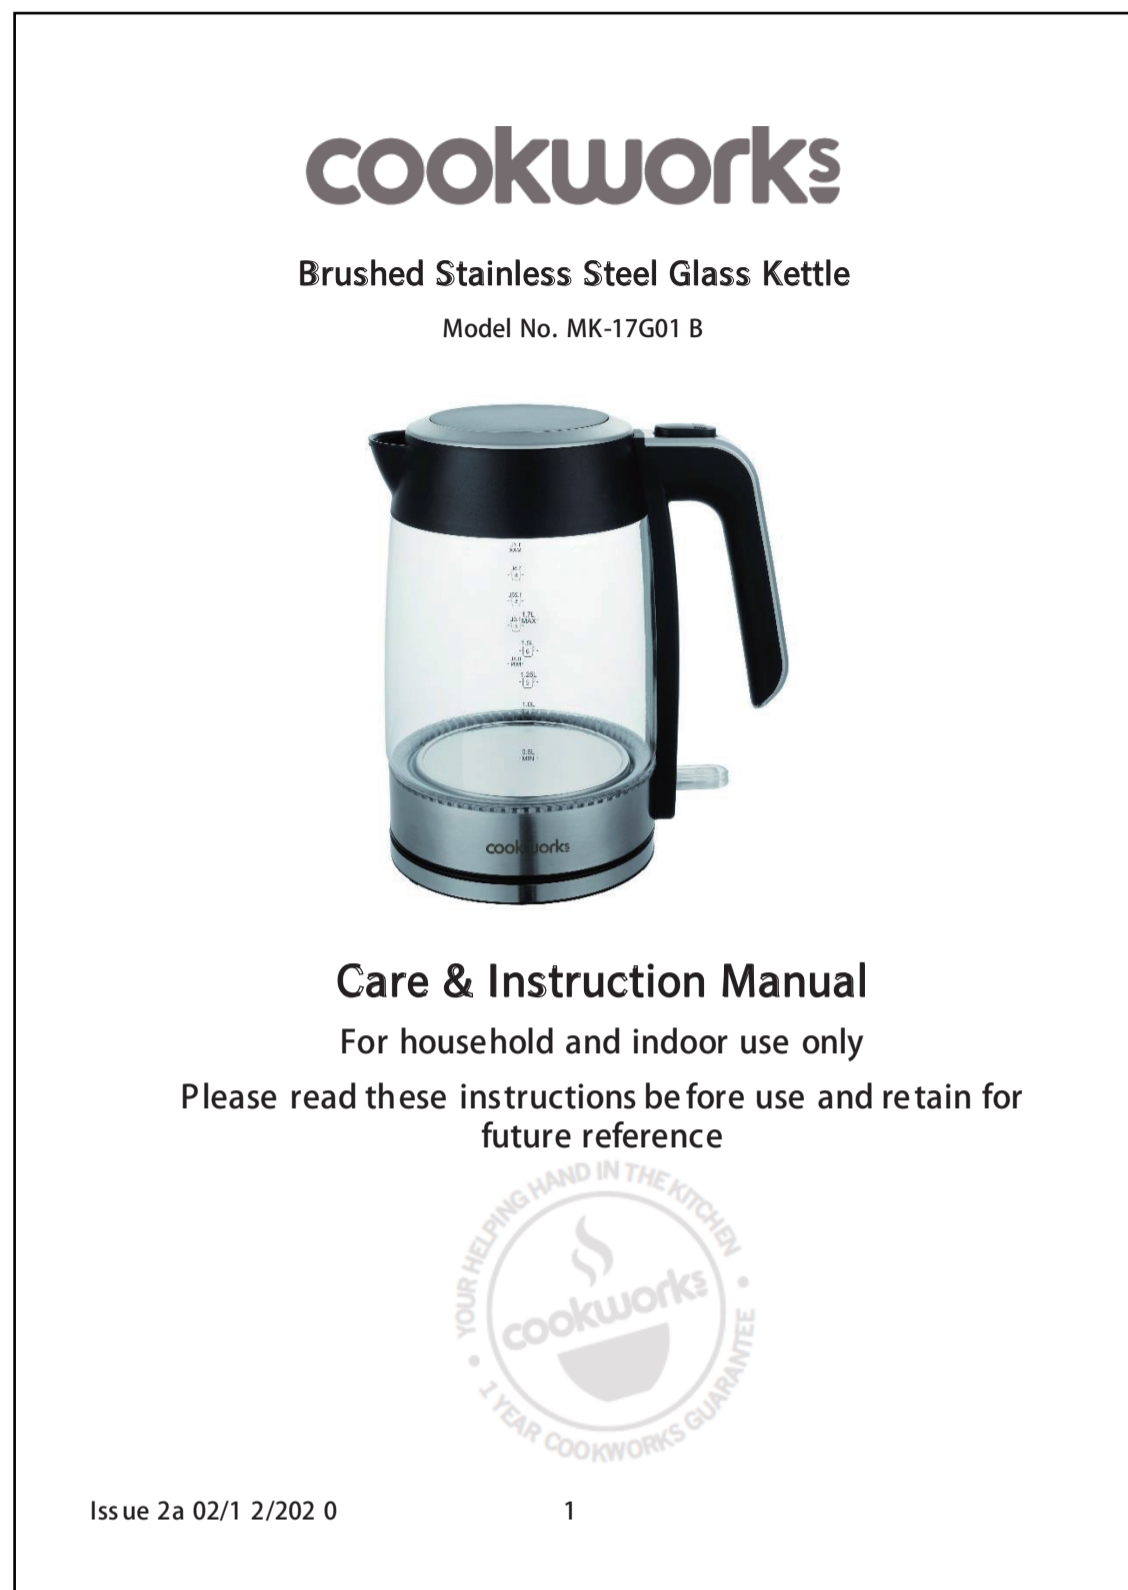

C: 更改第五页保险丝电流参数, 13A更改为10A。
 D: 整版更新
 E: 整版更新

技术要求(版本号: A, 2017-01)

1. 此说明书为Cookworks牌说明书, 为全新客户提供版本。
2. 说明书印刷颜色为黑色。
3. 该说明书的幅面大小为: 145*210mm。
4. 适用于“Cookworks”的MK-17G01B机型。
5. 警告语字高大于3mm

F	1	增加UKCA标识	张晓	20210917				16163500A10181
E	1	整版更新	冯婉菊	2020/12/10	电水壶 MK-17G01B			Cookworks-MK-17G01B (MK-17G01B)-0502
D	1	整版更新	冯婉菊	2020/10/20				
C	1	更改保险丝电流参数	徐明旭	2018/12/6	说明书			材料: 双胶纸 80 克
B	1	整版更新图纸内容	杨旭	2018/12/6				
@1	1	更改第1页警告语标题字高	马玲	2018/3/12				
标记		处数	更改文件号	签字	日期			
制图		徐明旭	审核	孙利华	图样标记	重量	比例	广东美的生活电器制造有限公司
设计		-----	标准化	古广君	K	/	1:1	
校对		-----	审定	古广君				
会签		-----	日期	2017-08-02	共 1 页	第 1 页		

1	2	3	4	5	6
---	---	---	---	---	---

cookworks

Brushed Stainless Steel Glass Kettle

Model No. MK-17G01B



Care & Instruction Manual

For household and indoor use only

Please read these instructions before use and retain for future reference



ELECTRICAL SAFETY

- You should only plug the appliance into a 220V-240V AC, 50/60Hz supply. Connecting it to other power sources may damage the appliance and will invalidate the guarantee.
- Switch off and unplug when not in use and before cleaning the appliance.
- Keep the appliance and its cord out of reach of children less than 8 years.
- Do not allow children to use the appliance without supervision.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep stand, cable, plug and outside of kettle dry and away from areas where it is likely to get splashed. Avoid spillage on the connector. Never immerse in water.
- Do not pull on the cable to disconnect from mains supply.
- Do not operate the appliance if damaged or after it malfunctions. In the event the supply cord is damaged, in order to avoid a hazard it must only be replaced by a qualified service engineer, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- This appliance must be plugged in to an earthed socket outlet.

WARNING!

- This appliance is intended exclusively for use in domestic households. It is not suitable for commercial use.
- Do not open the lid while the water is boiling or when steam is coming out of the kettle.
- Do not cover and allow the kettle to cool fully before storing.
- The surfaces of the kettle will become hot during use. Do not touch and always carry by the handle. Note the kettle and heating element is subject to residual heat after use.
- Do not use the kettle near or under surfaces that are heat sensitive or those that may be damaged by steam.
- Do not overfill the kettle as boiling water may be ejected during operation.
- Use only with the stand provided and to heat water. This appliance can cause personal injury if misused.
- The body of this kettle is made from thermally resistant glass; however this is still glass and will shatter if subjected to physical impact or being dropped.

PARTS

1. Spout
2. Lid
3. Lid button
4. Body
5. Handle
6. Switch
7. Stand
8. Filter



TO USE

1. Place the kettle on a stable, flat, heat resistant surface and away from surfaces that may be damaged by steam.
2. Fully unwind the cable and plug in. For safety do not allow the cable to dangle over the edge of units.
3. Remove the kettle from the stand; press the lid button to open the lid. Fill to the required level using the graduated markings on the glass body as a guide. Do not fill past the maximum (1.7 litre / 7 cups) or below the minimum (0.5 litre / 2 cups) level.
4. **Close the lid fully** (it clicks as it closes) and ensure that the switch is in the off (0) position (lift switch up) before replacing on the stand.
5. Turn the kettle so that the spout faces away from you and switch the kettle on by pressing the switch downwards (I). The kettle will start to operate and the blue indicator strip around the base of the kettle will illuminate.
6. When the water boils, the kettle will switch off automatically and the indicator light will go off.
7. To stop or interrupt the boiling process, switch the appliance off by lifting the switch up before removing the kettle from the stand.

Notes:

- Before using for the first time, fill the kettle to the maximum level, bring to the boil and then discard water. Repeat this step two further times.
- This kettle is fitted with a safety device that automatically switches off the heater element if the appliance is inadvertently switched on when empty or if it boils dry. In this case allow the kettle to cool completely (minimum 15 minutes) before refilling with cold water. The kettle will resume operation after refilling.

CLEANING

To maximize the efficiency of the kettle, clean and descale it regularly. **If living in a hard water area it will be necessary to descale the kettle frequently (e.g. weekly) to maintain visual appearance of the glass.**

1. Switch off and unplug the kettle and allow it to cool completely.
2. Open the lid and then press downwards on the lip of the filter (fig 1 & 2) to unclip the filter. Clean the filter under a running tap while gently brushing with a soft nylon brush to remove the scale, then refit (hook bottom of filter over retaining lip first, then click top into position).

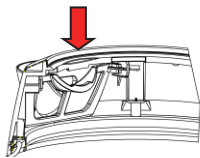 


Fig. 1

 


Fig. 2

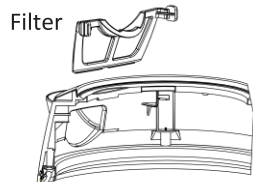 


Fig. 3

3. Descale with a proprietary descaler suitable for plastic kettles and use in accordance with the instructions on the pack. Alternatively half fill the kettle with water and add the juice of one lemon. Boil the kettle and allow it to stand for 15 minutes. Repeat this last step a further two times before discarding the solution.
4. After descaling the kettle, fill the kettle to the maximum level, bring to the boil and then discard water.
5. Wipe external surfaces with a soft damp cloth. Do not use detergent or abrasives as these may scratch the surface.

TECHNICAL SPECIFICATION

Cookworks Brushed Stainless Steel Glass Kettle	
Model	MK-17G01B
Rated Voltage & Frequency	220 – 240V AC 50/60Hz
Rated Power Input	1850-2200W
Capacity	1.7 litre
Class rating	1 (earthed)
BS 1362 fuse	10A
Product dimensions (external)	23 x 15.2 x 25cm
Product weight (net)	1.2kg approx.



RECYCLING ELECTRICAL PRODUCTS

You should now recycle your waste electrical goods and in doing so help the environment.

This symbol means an electrical product should not be disposed of with normal household waste. Please ensure it is taken to a suitable facility for disposal when finished with.

Visit www.recycle-more.co.uk, click on “bank locator” and enter your postcode to find your nearest recycling site.



PLUG / WIRING ADVICE

The wires in this mains lead are coloured in accordance with the following UK electrical code:

BLUE = NEUTRAL

BROWN = LIVE

 
GREEN + YELLOW = EARTH

Non-rewireable plug

This appliance may be fitted with a “non-rewireable” plug. If you need to change the fuse in a “non-rewireable” plug, the fuse cover must be refitted. If the fuse cover is lost or damaged, the appliance must not be used.

Rewireable plug

The colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in a rewireable plug. **Rewireable plugs should only be replaced by a suitably competent person. If in doubt, consult a qualified electrician.**

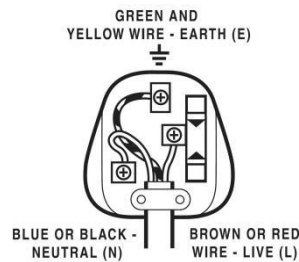

The BLUE wire must be connected to the terminal marked with the letter N

The BROWN wire must be connected to the terminal marked with the letter L

The GREEN & YELLOW wire must be connecting to the terminal marked with the letter E or the earth symbol (⊕).

Produced in China for and imported by

Argos Limited,
489-499 Avebury Boulevard,
Milton Keynes, MK9 2NW
www.argos.co.uk/cookworks
Tel: 0345 640 3030



PRODUCT GUARANTEE

This product is guaranteed against manufacturing defects for a period of



Year

This product is guaranteed for twelve months from the date of original purchase.

Any defect that arises due to faulty materials or workmanship will either be replaced, refunded or repaired free of charge where possible during this period by the dealer from whom you purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in this manual. A replacement copy of this instruction manual can be obtained from www.argos-support.co.uk
- It must be used solely for domestic purpose.
- The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- The manufacturer disclaims any liability for the incidental or consequential damages.
- The guarantee is in addition to, and does not diminish your statutory or legal rights.

Guarantor: Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW
www.argos-support.co.uk