



# Scoop & Learn Ice Cream Cart™



 
## Parent's Guide

This guide contains important information. Please keep it for future reference.

91-003385-001 UK

# INTRODUCTION

Thank you for purchasing the **Scoop & Learn Ice Cream Cart™**. Serve up sweet pretend play with four flavours of ice cream, three toppings and more to create tons of delicious and imaginative combinations! Use the magic scooper to scoop up the ice cream and toppings, then ring up the customer's order using the cash register.

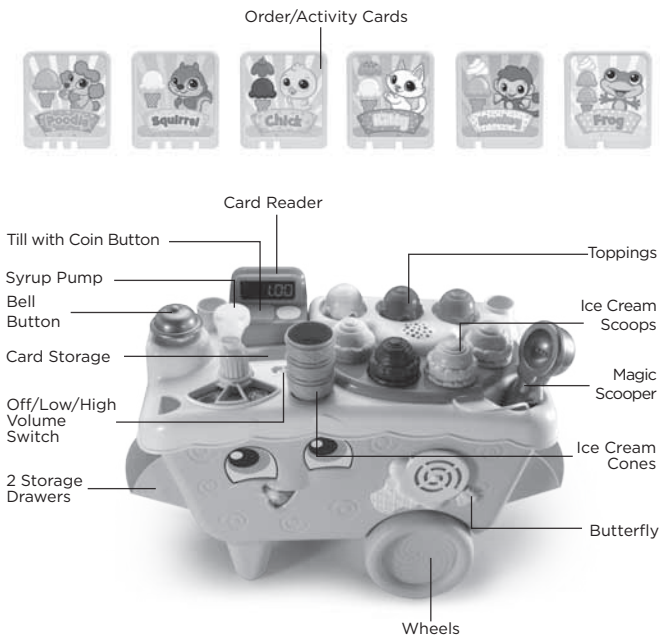

# INCLUDED IN THIS PACKAGE

- One **Scoop & Learn Ice Cream Cart™**
- Two scoops of mint ice cream
- Two scoops of chocolate ice cream
- Two scoops of strawberry ice cream
- Two scoops of vanilla ice cream
- One whipped cream topping
- One cherry sauce topping
- One orange sprinkles topping
- Three ice cream cones
- Six double-sided order/activity cards
- One canopy
- Two canopy poles
- One cart handle
- One label sheet
- One parent's guide

## **WARNING:**

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE:**

Please keep this parent's guide as it contains important information.

## Unlock the packaging locks:


- 1 Rotate the packaging locks 90 degrees counterclockwise.
- 2 Pull out the packaging locks and discard.

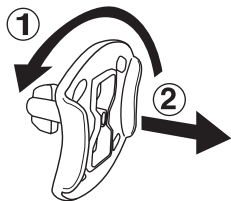

# GETTING STARTED

## BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AA (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

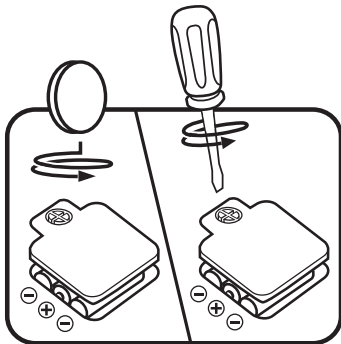

## BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision

## Disposal of batteries and product



 
The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health. The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC). The solid bar indicates that the product was placed on the market after 13th August, 2005. Help protect the environment by disposing of your product or batteries responsibly. For more information, please visit:

[www.recycle-more.co.uk](http://www.recycle-more.co.uk)  
[www.recyclenow.com](http://www.recyclenow.com)


# ASSEMBLY

With the **Leapfrog® Scoop & Learn Ice Cream Cart™** safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the two **Canopy Poles** into the **Canopy** and insert the poles into the top of the cart.


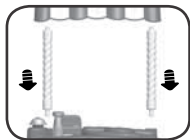


 2. Insert the **Cart Handle** into the top of the cart.

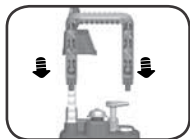

# LABEL APPLICATION

  
Please securely adhere the labels to the cart as indicated below.

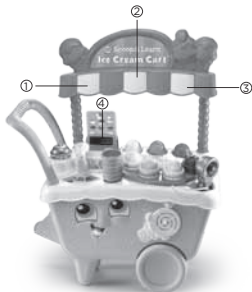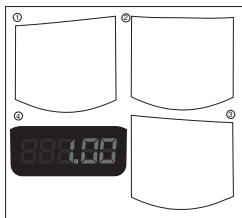

# PRODUCT FEATURES


## 1. Off/Low/High Volume Control Switch

 Slide the **Off/Low/High Volume Switch** to turn the toy on and select the volume.

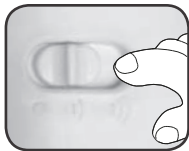

## 2. Magic Scooper

 Place the **Magic Scooper** on the top of an **Ice Cream Scoop** or **Topping** to easily pick them up. To release the **Ice Cream Scoop** or **Topping**, press the button on the side of the **Magic Scooper**.

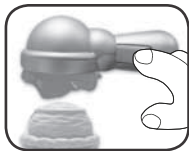

## 3. Order/Activity Cards

For guided play, insert one of the six double-sided **Order/Activity Cards** into the **Card Reader**.



## 4. Wheels

Push the cart around to hear songs and music.



 
## 5. Syrup Pump

Slide to choose from three flavours, then press down on the pump to hear numbers as you count along.




## 6. Bell Button

Press to hear bell sounds and when prompted during guided play with the **Order/Activity Cards**.

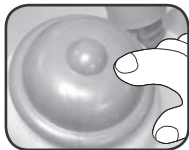


## 7. Coin Button

 Press to hear coin sounds and numbers as you count along.

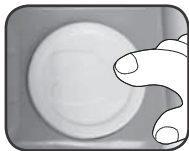

## 8. Butterfly

 Slide the butterfly from side to side to make the ice cream swirl colours change.

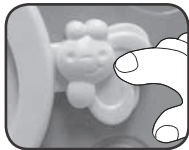

# TO BEGIN PLAY

## Activate Normal Play Mode

Slide the **Off/Low/High Switch** to the **Off** position, then slide to Low or High volume to turn the toy **On**.

# ACTIVITIES

## 1. Ice Cream and Toppings

Pick up **Ice Cream Scoops** or **Toppings** using the **Magic Scooper**. It will recognise the flavour or colour of the **Ice Cream Scoop** or **Topping**.



## 2. Order Cards

Insert an **Order Card** into the **Card Reader** to hear the customer's order. Listen to the order and the order song and remember the ingredients needed. Build the treat in the correct sequence and ring the bell to finish the order.

## 3. Colours Activity Card

Insert the **Colours Activity Card** into the **Card Reader**. Listen to the question and try to find the correct **Ice Cream Scoop** or **Topping** colour using the **Magic Scooper**.

## 4. Counting Activity Card

Insert the **Counting Activity Card** into the **Card Reader**. Listen to the question and press the **Flavour Pump** the correct number of times.

## 5. Flavours Activity Card

Insert the **Flavours Activity Card** into the **Card Reader**. Listen to the question and try to find the correct **Ice Cream Scoop** flavour and learn a fun fact about where the flavour comes from.

## 6. Numbers Activity Card

Insert the **Numbers Activity Card** into the **Card Reader**. Listen to the question and press the **Coin Button** the correct number of times.

## 7. Stacking Activity Card

Insert the **Stacking Activity Card** into the **Card Reader**. Stack as many **Ice Cream Scoops** and **Toppings** on the **Ice Cream Cone** as you can before the music stops. When you're done, press the bell.

## 8. Creativity Activity Card

Insert the **Creativity Activity Card** into the **Card Reader**. Create your own ice cream cone using the **Magic Scooper** or **Syrup Pump**. Press the bell when you're done to hear the daily special.

## 9. Push Cart

Push the cart for fun music and songs, and exercise gross motor skills.

# CARE & MAINTENANCE

1. Keep the toy and accessories clean by wiping them with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose it to excess moisture.

# TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

## Environmental phenomena.

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email [info@leapfrog.com](mailto:info@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**CLASS 1  
LED PRODUCT**



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***[leapfrog.co.uk](http://leapfrog.co.uk)***

***For warranty information, please visit  
[leapfrog.co.uk/warranty](http://leapfrog.co.uk/warranty).***

LeapFrog Enterprises, Inc.,  
a subsidiary of VTech Holdings Limited.  
TM & © 2017 LeapFrog Enterprises, Inc.  
All rights reserved.  
91-003385-001 