

BUSH

Instruction manual

WM2760FM





You'll soon be enjoying your new Stereo Flat Micro System.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.



Help and Guidance

We're here to help you get the most from your Stereo Flat Micro System. Should you require any guidance, a simple solution can often be found online at:

www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

BUSH



Contents

1 Safety information

Help and Guidance	2
Power source	8
Moisture and water	8
Heat sources and flames	9
Ventilation	9
Positioning the Stereo Flat Micro System	9
General safety information	10

2 Getting to know your Stereo Flat Micro System

Initial set-up	17
Fitting your Micro onto its stand.	17
Inserting batteries	17
Power connection	18
Set the clock	18
Power on	18
Power off	19
Change the mode	19
Adjusting the volume	19
Mute	19
Sleep timer	19
Set an alarm	20
Stop the alarm	20
Snooze	20
Turn an alarm on or off	20
Using headphones	21

Contents

3 Using your Stereo Flat Micro System

Play a CD	24
CD controls	24
Programmed play mode	25
Repeat and Random modes	26
Remove the CD	26
Caring for compact discs	27
FM Radio mode	27
Wire radio aerial	27
Tuning to an FM station	28
Storing an FM station preset	28
Tune to an FM station preset	29
Bluetooth mode	29
Pairing your Stereo flat Micro System	29
Listening to Music/Audio using Bluetooth	30
Aux in mode	31

4 Other information

Wall mounting your Micro	34
Technical specification	36

5 Product support

Troubleshooting	40
Help and assistance	42
Disposal	43
Your Bush Guarantee	44

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**.

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

 


This page is left intentionally blank



Safety information

1

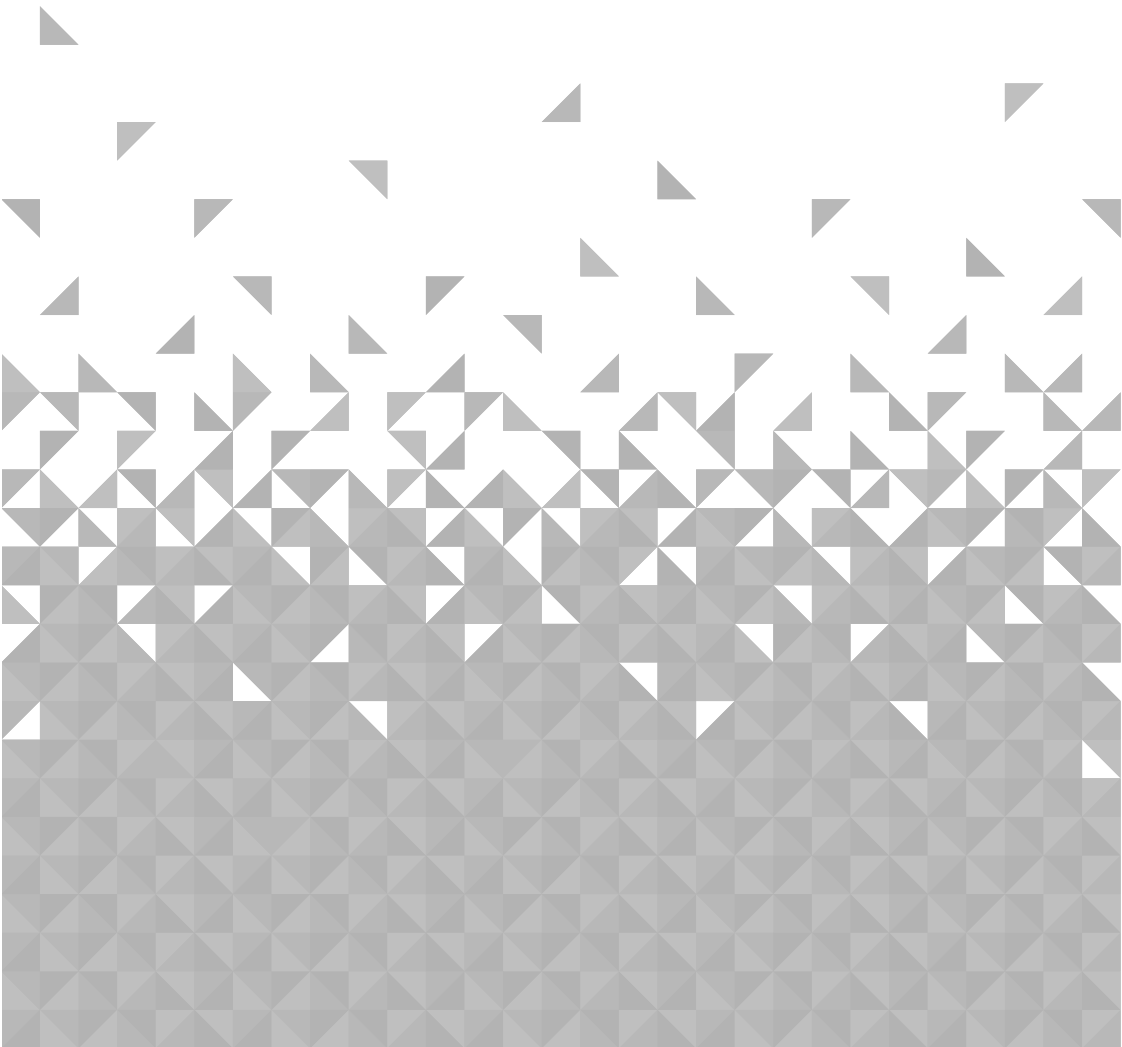



Safety information

Important - Please read these instructions fully before installing or operating

Power source

- Only use the power supply that came with the product. Using an unauthorised power supply will invalidate your guarantee and may irrecoverably damage the product.
- Disconnect your Micro from the mains power supply during thunderstorms.
- Always check that you have completely switched off your Micro System, before you change or disconnect the power supply.
- Where the mains power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- If the Micro System will not be used for a long period of time, remove the CD and make sure that the mains power is unplugged and the battery is removed from the remote control.
- Only use recommended batteries or those of the same or equivalent type in the remote control.
- Batteries are to be inserted with the correct polarity.
- The supply terminals are not to be short-circuited.
- Never throw batteries in a fire or attempt to open the outer casing.
- Batteries are harmful if swallowed, so keep away from young children.



Caution:

- Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.

Moisture and water

- Keep it dry. Avoid exposure to precipitation, humidity and liquids which could all affect the product circuitry. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



Safety information

Important - Please read these instructions fully before installing or operating

Heat sources and flames

- Do not leave it in high temperatures as electronic devices and plastic parts may warp in heat.
- Keep it away from bright sunlight or heat sources, such as a radiator.
- Never place any type of candle or naked flame on top of, or near the product.

Ventilation

- Do not block or cover slots, holes or openings on the product by placing on soft furnishings such as carpets, rugs or beds as these are provided for functionality and/or ventilation to ensure safe operation of the product.
- The underneath and sides of this product may become warm after a long period of use. This is normal.

Positioning the Stereo Flat Micro System

It is important that you consider carefully in advance where your Micro System and speakers will be situated and make sure that they are:

- on a flat and stable surface.
- within 1.4 metres of a power socket. Please ensure that the mains power lead and speaker cables are not a trip hazard.
- at least 1 metre away from other electrical appliances to avoid interference.
- where it will be in range of the connected or 'paired' bluetooth device (e.g. iPod/iPhone/iPad/Android/other phone/computer, which is about 10 metres or less (33 feet or less) in line of sight.
- where there is enough height for the Micro System wire radio aerial.
- Never place your Micro System directly onto antique or polished surfaces.



Caution

To avoid possible hearing damage, do not listen to this Micro System at high volume levels for long periods of time. Always keep the volume within reasonable limits.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.



Safety information

Important - Please read these instructions fully before installing or operating

General safety information

- Keep the product and all its parts out of reach of small children.
- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do NOT place foreign objects into the CD compartment.
- CAUTION: Never touch or look into the optical lens within the CD compartment.



This is a **CLASS-1** laser product.

- Use of controls or adjustments other than those specified herein, may result in hazardous laser light beam exposure.
- Do NOT open the cover and do NOT attempt to repair it yourself.
- Refer servicing to qualified personnel. This product does not contain any user serviceable parts.
- Unauthorised handling of the device may damage it and will void your warranty.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH

 


This page is left intentionally blank



Getting to know your Stereo Flat
Micro System

2

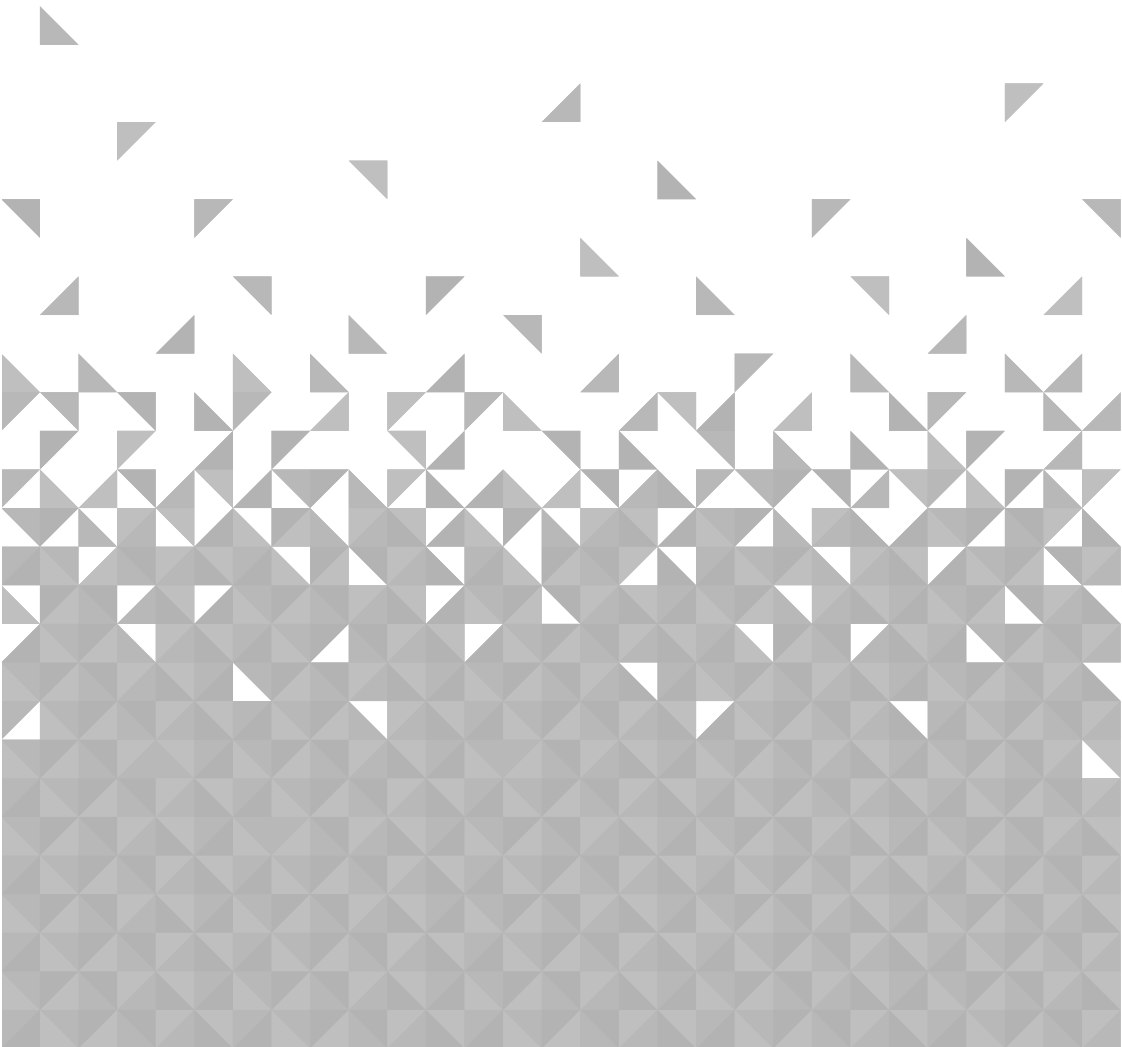

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

Fig 1.


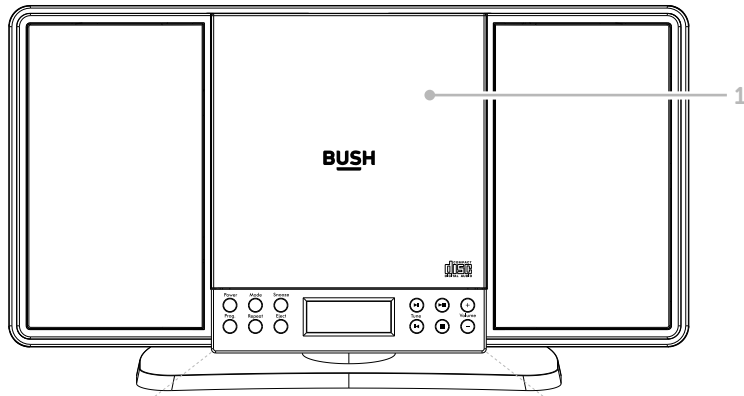 


Fig 2.

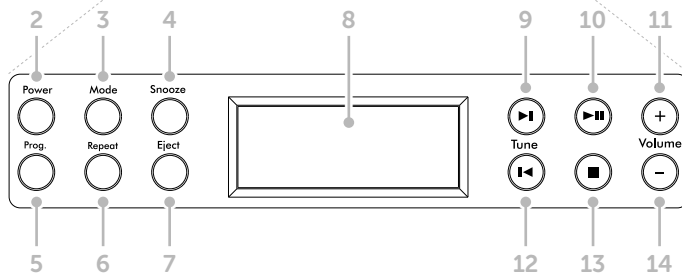 

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Fig 3.


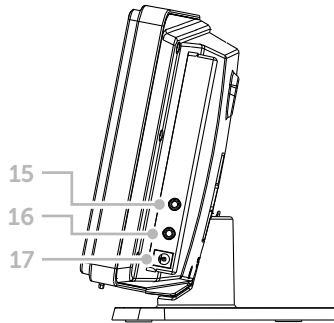 


Fig 4.

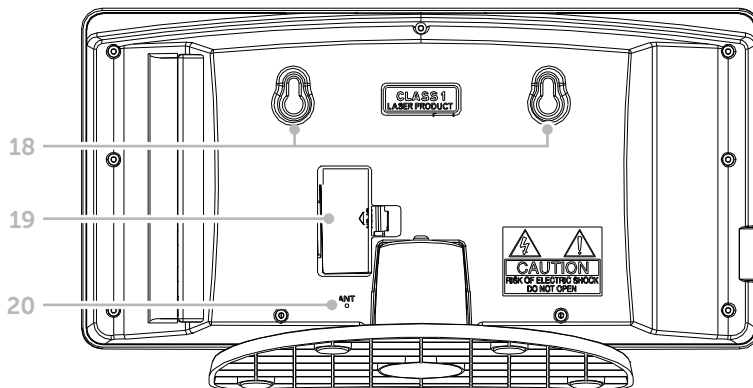 


- | | |
|---------------------------|--------------------------|
| 1. CD compartment | 11. Volume + |
| 2. Power on/off (standby) | 12. Tune -/Skip backward |
| 3. Mode | 13. Stop |
| 4. Snooze | 14. Volume - |
| 5. Prog. | 15. Aux in socket |
| 6. Repeat | 16. Headphone socket |
| 7. Eject | 17. Mains power socket |
| 8. Backlit display | 18. Wall mounting points |
| 9. Tune +/Skip forward | 19. Battery compartment |
| 10. Play/Pause | 20. Wire FM radio aerial |

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

 Fig 5.

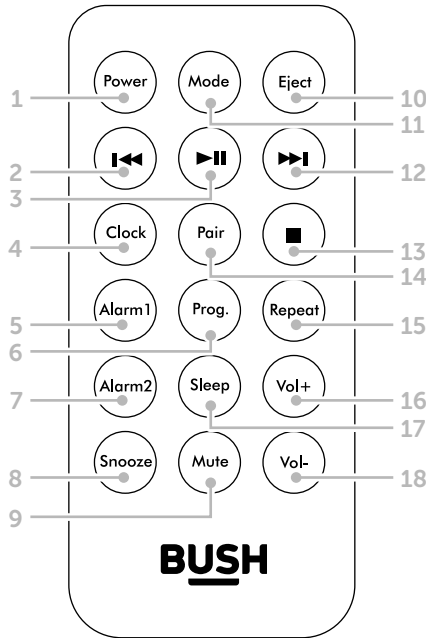

1. Power on/off (standby)
2. Skip back
3. Play/Pause
4. Set the clock (Standby mode only)
5. Set alarm 1 (Standby mode only)
6. Prog.
7. Set alarm 2 (Standby mode only)
8. Snooze
9. Mute
10. Eject (CD mode)
11. Mode (CD/FM/BT/Aux)
12. Skip forward
13. Stop
14. Pair
15. Repeat
16. Vol +
17. Sleep
18. Vol -

Note: The remote signal may not be received if there is an obstacle between the remote and the Micro. Direct sunlight or other bright light sources shining on the remote sensor next to the Micro display, may affect the performance of the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time


Initial set-up

Clip your Micro onto its stand

When assembled the flat part of the stand faces towards the front.

For ease of assembly we recommend that you place your Flat Micro face down onto a soft cloth on a stable surface. Place the two prongs on the stand at the top of the two long grooves on the back of the Micro and then press down. The stand will clip into place.

 Fig 6.

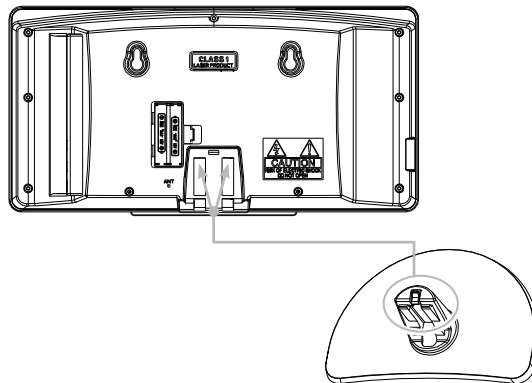

Inserting batteries

1. Before installing the batteries (not included) please ensure that the Micro is switched off using the Power switch and has been unplugged from the mains power supply.
2. On the back of the Micro, press in the tab on the small battery compartment cover to remove it.
3. Insert 2 x 1.5V AAA-size (also known as LR-03) batteries, making sure to note the '+' and '-' markings and position the batteries the correct way around. These batteries will maintain the clock time on your Micro, if there is a power cut.
4. Replace the battery compartment cover, making sure that it 'clicks' shut.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Note: If there is a power cut, the 2 x AAA back up batteries will maintain the clock time but the display backlight and alarms will not function, to conserve battery power.

Short press the Power button on the front of your Micro System. The first time you switch on your Micro it will start in CD mode, subsequently it will start in the mode you were last using unless it has been unplugged from the mains power supply.

Power connection

1. Fully extend the wire radio aerial on the back of the Micro to receive the best possible radio reception and sound quality.
2. Connect the mains power lead into the bottom power socket behind the right hand speaker on the side of your Micro.
3. Plug the mains power plug into the mains power wall socket and switch on. Your Micro will now be in Standby mode.
4. Pull out the safety strip on the remote control to activate the battery.

Set the clock

1. With the Micro in Standby mode, long press the Clock button on the remote control until 24H flashes in the display.
2. Use the Vol+ or Vol- on the remote control to change between 24H and 12H. Short press the Clock button on the remote control to confirm.
3. The clock digits will now flash. Use the Vol- button on the remote control to set the hour and Vol+button to set the minutes. Short press the Clock button on the remote control to confirm. The clock digits will stop flashing and the clock time is now set.

Power on/off

Power on

Short press the Power button on the Micro or on the remote control to power on your product.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Power off

Short press the Power button on the Micro or on the remote control. Your Micro will go to Standby mode and the clock will be displayed.

Change the mode

Short press the Mode button on the Micro or on the remote control to change between CD, FM Radio, Bluetooth and Aux in modes. Please check the display, which will confirm the mode.

Adjusting the volume

Short press the Volume + or Volume - buttons on the Micro or the Vol+ or Vol- buttons on the remote control to adjust the volume.

Check the display, which will confirm the volume setting.

Mute

Short press the Mute button on the remote control to mute and unmute the sound.

Sleep timer

You can set your Micro to turn off automatically using the sleep timer. You can choose from 90, 75, 60, 45, 30 and 15 minutes.

Short press the Sleep button on the remote control to cycle through the available options, stop when the sleep time you would like is displayed.

Note: To cancel the sleep time, follow the steps to set the sleep time but stop when the normal display for the mode you are in, is displayed e.g. 93.30 in FM Radio mode.

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Using the alarms

Set an alarm

Note: Check that your Micro has the correct time before you set an alarm. Please remember to use 24 hour clock.

In standby mode:

1. On the remote control, long press the Alarm 1 (or Alarm 2) button to set an alarm. The Micro clock display digits will flash.
2. Use the Vol- on the remote control to set the hour for the alarm and use the Vol+ to set the minutes for the alarm.
3. Whilst the clock alarm digits are still flashing, short press the Mode button on the remote control to choose the sound source for the alarm. You can choose from CD, FM radio or buzzer. CD, FM or just a flashing display (for the buzzer choice), will indicate the selected sound source setting.
4. Short press the Alarm 1 (or Alarm 2) button on the remote control to confirm the settings. The digits will stop flashing and the clock time will be displayed.

Stop the alarm

When the alarm sounds, short press any button except snooze to turn off the alarm. The alarm will reset for the next day.

Snooze

When the alarm sounds you can short press the Snooze button on the remote control to snooze. After 9 minutes your alarm will sound again.

Turn an alarm on or off

In standby mode:

Short press the Alarm 1 (or Alarm 2) button to turn each alarm on or off. 'ON' or 'OFF' will be displayed as appropriate.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Getting to know your Stereo Flat Micro System

You'll be up and running in no time

Using headphones

You can connect headphones with a 3.5mm plug (not included) to the socket behind the right hand speaker on the side of your Micro. When you have headphones connected the Micro speakers are switched off and all sound is via the headphones.

Note: Always keep the volume within reasonable limits.

 


This page is left intentionally blank



Using your Stereo Flat Micro System

3

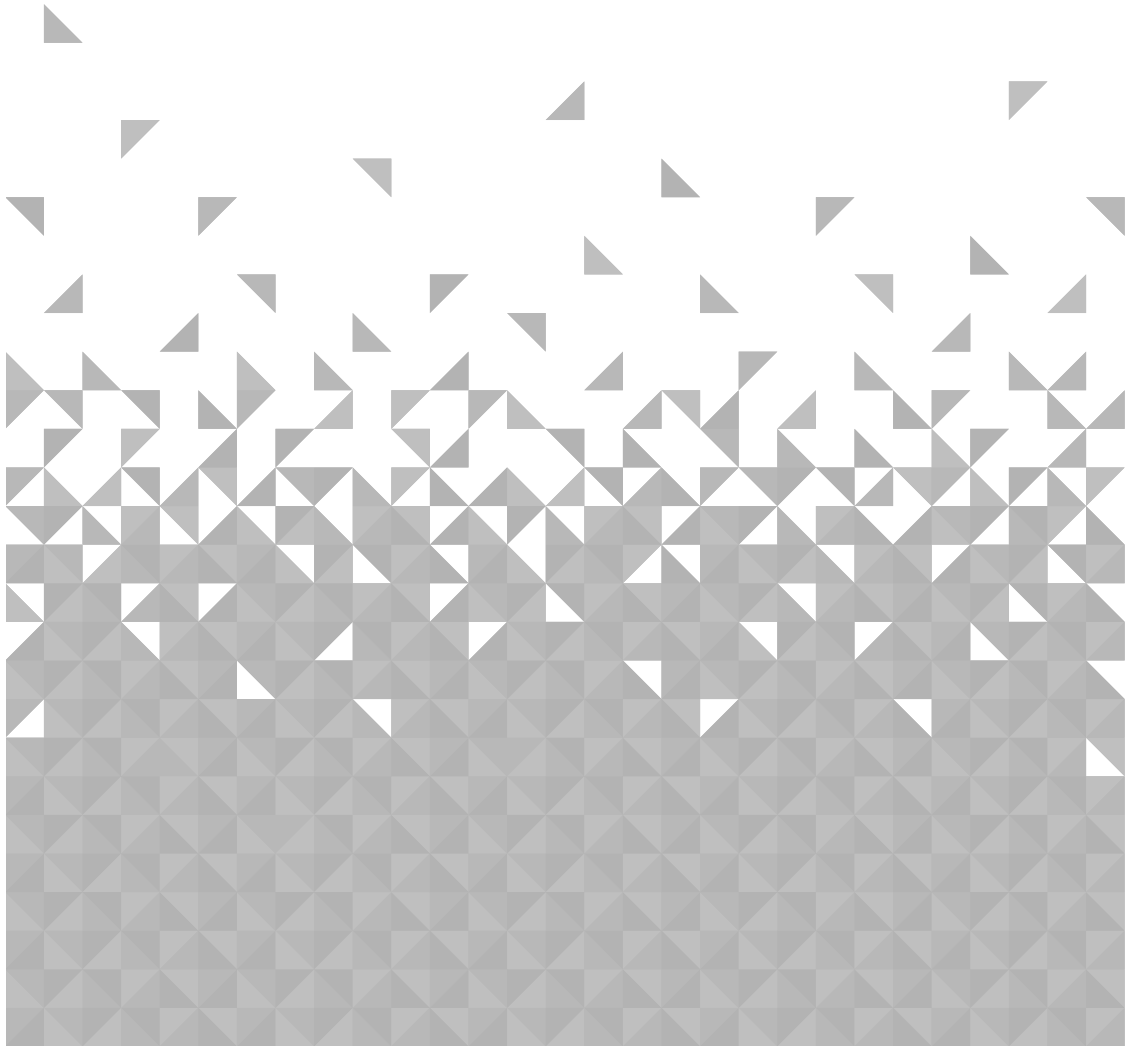

Using your Stereo Flat Micro System

Let's get started

CD Mode

Note: Please make sure that you remove the cardboard shipping protector from within the CD compartment before you try to use CD player.

Check that your Micro is in CD mode. If you are not already in CD mode, short press the Mode button on the front of the Micro or on the remote control, until you are in CD mode (check the display). The display will show 'CD' and '- -' will flash, followed by '10' if the CD compartment is empty.

Play a CD

Note: It is not possible to play DVD or computer CDs.

1. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide up and 'OPEN' will be displayed.
2. Place an audio CD, label side facing towards you, into the CD compartment. Please ensure that you line up the hole in the centre of the CD, with the central spindle and press back into place.
3. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide down and '- -' will flash on the display, followed by the number of tracks on the CD, e.g. 12.
4. Short press the ▶|| button on the Micro or on the remote control to play the CD.

CD controls

You can use the following controls on your Micro in CD mode.

- Play

Short press the ▶|| button on the Micro or on the remote control. The first track will begin to play and the track number will be displayed.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

- **Pause**
Short press the ►|| button on the Micro or on the remote control. A small ► will flash on the right hand side of the display to indicate that the CD has been paused. Short press the ►|| button again to continue to play the track/CD.
- **Next track:**
Short press the ►| button on the Micro or the ►►| button on the remote control.
- **Previous track:**
Short press the |◀ button on the Micro or the |◀◀ button on the remote control.
- **Fast forward within a track:**
Long press the ►| button on the Micro or the ►►| button on the remote control.
- **Fast backward within a track:**
Long press the |◀ button on the Micro or the |◀◀ button on the remote control.
- **Stop.**
Short press the ■ button on the Micro or on the remote control.

Programmed play mode

In programmed play mode, you can program the play order of the tracks on your CD. You can program up to 20 tracks in total.

Note: To set up programmed play mode, the CD must be stopped in the CD compartment and must not be paused or playing.

In CD mode, with the CD you wish to programme in the CD compartment and stopped:

1. Short press the Prog. button on the Micro or on the remote control to enter CD programmed play mode. 'P' will flash in the display.
2. Use the |◀ or ►| buttons on the Micro or the |◀◀ or ►►| buttons on the remote control to go to the track number that you would like to program to play first. Short press the Prog. button on the Micro or on the remote control to confirm.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo Flat Micro System

Let's get started

3. '02' will flash in the display and you can select the second track that you would like to programme. Continue to select each track as in Step 2 above, up to a total of 20 tracks.
4. Short press the Prog. button on the Micro or on the remote control again to confirm the last track in the programmed play mode list.
5. Short press the ►|| button on the Micro or on the remote control to play the programmed tracks.
6. To exit programmed play mode, short press the ■ button twice on the Micro or on the remote control.

Repeat and Random modes

1. Short press the Repeat button on the micro or the remote control. An ↺ icon is displayed. Continuously short press the Repeat button to cycle through the available options of :
 - ↺1 Repeat (current track)
 - ↺ALL Repeat all (all the tracks on the CD)
 - RAND Random (random play order)

Short press the Repeat button one more time to turn off Repeat and Random modes.

Remove the CD

1. Short press the Eject button on the Micro or on the remote control in CD mode. The CD compartment cover will slide up and 'OPEN' will be displayed.
2. Put your thumb on the central spindle and put your fingers under the outside edge of the CD and lift off and remove the CD from the compartment.
3. Short press the Eject button on the Micro or on the remote control. The CD compartment cover will slide down and '- -' will flash on the display, followed by '00'.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

Caring for compact discs

- Do NOT touch the playback side of the CD.
- Do NOT attach paper or tape or any other material to the disc.
- Fingerprints and dust on the disc will cause sound deterioration. Wipe the disc from the centre outwards with a soft cloth. Always keep the disc clean.
- If dust or marks cannot be removed with a soft cloth, wipe the disc lightly with a slightly damp soft cloth and then wipe with a soft dry cloth.
- Do NOT use any type of solvent, commercially available cleaners or antistatic spray for vinyl as it may damage the disc.
- Do NOT store discs in a place subject to direct sunlight or near a heat source.
- Do NOT store discs in a place subject to moisture or dust, such as a bathroom or near a humidifier.
- Always store discs vertically in a case, stacking or placing objects on discs may cause warping.

FM Radio mode

If you are not already in FM mode, short press the Mode button on the front of the Micro or on the remote control to go to FM mode (check the display). If you were listening to an FM station when you switched the Micro off then this station will be automatically selected when you switch the Micro back on.

Wire radio aerial

Please make sure that the wire aerial on the back of the Micro is fully extended and adjusted before you attempt to tune to an FM radio station (a vertical position is recommended). This will ensure that the maximum signal strength is available when the Micro begins to scan. Extending the aerial also ensures the best possible sound quality.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Using your Stereo Flat Micro System

Let's get started

Tuning to an FM station

In FM mode:

Long press the Tune **▶|** on the front of the Micro or the **▶▶|** button on the remote control to scan up the frequency band, your Micro will search for the next available station and then stop on that station.

Short press the Tune **▶|** on the front of the Micro or the **▶▶|** button on the remote control to move up the frequency band in 0.05MHz steps.

Long press the Tune **|◀** button on the front of the Micro or the **◀◀|** button on the remote control to scan down the frequency band, your Micro will search for the next available station and then stop on that station.

Short press the Tune **|◀** button on the front of the Micro or the **◀◀|** button on the remote control to move down the frequency band in 0.05MHz steps.

Note: If reception is poor check that the wire aerial is fully extended or try moving the Micro to another location.

Storing an FM station preset

Your Micro can store up to 10 FM stations in its preset memories for instant access to your favourite stations.

1. Tune the Micro to the FM radio station frequency that you wish to preset.
2. Long press the Prog. button on the front of the Micro or on the remote control. 'P XX' will flash in the display, where XX are the digits from 01 to 10.
3. Short press the Prog. button on the front of the Micro or the remote control to move the preset number that you would like to store the radio station to (P01-P10).
4. Long press the Prog. button on the Micro or on the remote control to store the station to that preset location, 'P XX' will stop flashing confirming that the preset has been stored to your chosen location and the FM radio station frequency will be displayed again.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

Tune to an FM station preset

In FM mode:

1. Repeatedly short press the Prog. button on the front of the Micro or on the remote control to move through the 1-10 preset locations.
2. Stop when the preset location you require is displayed, e.g. **FM4**. After a short delay, your Micro will tune to that station and begin to play, the FM radio frequency stored under that preset location will be displayed.

Bluetooth mode

Check that your Micro is in Bluetooth (BT) mode. If you are not already in BT mode, short press the Mode button on the front of the Micro or on the remote control until you are in BT mode (check the display). 'bt' will flash in the display, whilst your product searches for Bluetooth devices.

Pairing your Stereo flat Micro System

In Bluetooth (BT) Mode:

1. 'bt' will flash in the display, whilst your product searches for Bluetooth devices.
2. On the device that you would like to connect to your Micro via Bluetooth (e.g. iPhone/iPad/Android/other phone/Tablet/Computer), turn on Bluetooth connectivity and ensure that it is 'discoverable'.

Note: If necessary, refer to the instructions for your device to add or set up Bluetooth.

3. Select to 'Add new device', if necessary.

Note: Some products will automatically search for a new device and so the 'Add new device' option is not available.

4. When found, your Micro will be displayed as 'BUSH FM MICRO'. Select the device name to begin pairing.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021.

Using your Stereo Flat Micro System

Let's get started

5. When pairing is complete 'bt' will stop flashing in the display, and will be constantly displayed.
6. Now that you have paired your device with the Micro, it will connect to it when it is within range, which is about 10 metres or less (33 feet or less), line of sight.
7. Your device will remain paired with the Micro unless you decide to disconnect or 'unpair' it.

Note: If your device should be come unpaired for any reason, follow the steps above to 'pair' it again. You can short press the Pair button on the remote control to restart the Bluetooth pairing process.

Listening to Music/Audio using Bluetooth




In Bluetooth (BT) Mode:

1. Select and start the music or audio that you wish to listen to on your paired Bluetooth device, it will now be heard through the Micro speakers. Adjust the volume on the connected device and/or your Micro.

Note: If your previously paired device is within range but does not automatically connect, go to the Bluetooth connectivity settings on your device and select 'BUSH FM MICRO' to reconnect. Alternatively, short press the Pair button on the remote control to restart the Bluetooth pairing process.

2. You can use the controls on your paired Bluetooth device as well as those on the front of the Micro or on the remote control when listening to music via Bluetooth.

Controls available on your Micro and the remote control are:

- Play/Pause
 Short press on the front of the Micro or on the remote control.
- Skip back to the previous track
 Short press on the front of the Micro.
 Short press on the remote control.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Using your Stereo Flat Micro System

Let's get started

- Skip forward to the next track
 - ▶ Short press on the front of the Micro.
 - ▶▶ Short press on the remote control.

Aux in mode

Check that your Micro is in Aux in mode. If you are not already in Aux in mode, short press the Mode button on the front of the Micro or on the remote control, until you are in Aux in mode (check the display).

Using a 3.5mm audio input connection cable (not included), Aux in allows for a quick and easy connection to an external sound source.

1. Connect one end of the 3.5mm audio connection cable to the headphone (or auxiliary out) socket of your secondary device, connect the other end to the Aux in socket behind the right hand speaker on the side of your Micro.
2. Press the Play button on your external device to start playback through the Micro speakers.

To gain optimal volume levels, adjust the output volume level on both the secondary device and on the Micro.

Note: It is recommended that you unplug the Audio cable from the Aux in socket after you have finished listening to your external device.

 


This page is left intentionally blank



Other information

4

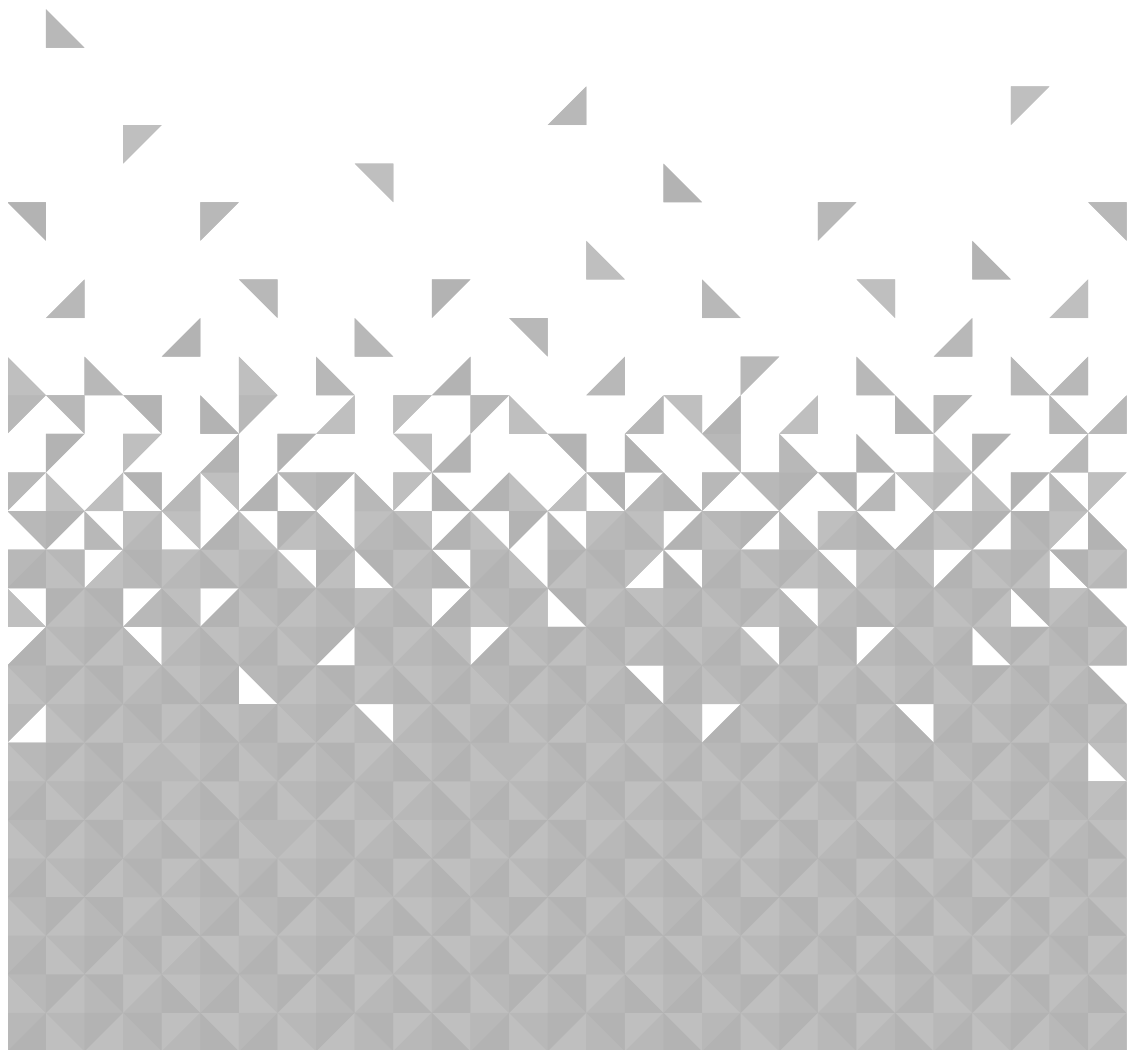

Other information

Helpful technical information

Wall mounting your Micro

You can wall mount your Micro without its stand. You will need:

 
2 x rawl plugs of a type and size that are suitable for the wall that you will hang the Micro on.

2 x screws that are the correct size for the rawl plugs. You will also need to check that the screw heads fit and hold well into the wall mount points on the back of the Micro.


Notes:

- Make sure that the screws and rawl plugs you use are suitable for supporting the Micro.
- To avoid damage to the Micro and personal injury, you should get a qualified person to drill the fixing surface and fit the appropriate wall fixings.
- When drilling into walls, always check that there are no hidden wires or pipes etc.
- Before wall mounting your product, check the wall strength. If this is not clear, then consult relevant qualified personnel.
- Take care not to allow the Micro to fall whilst attempting to hook it onto the screws you have fitted to hang the product onto.
- You must remove the base stand from your Micro, before you attempt to wall mount it. Press down on the clip on the top central part of the stand to remove it (if fitted).

1. Align the Micro in your chosen location and use a pencil to mark the drilling positions 120 mm apart.



 2. Drill the holes as marked in point 1.

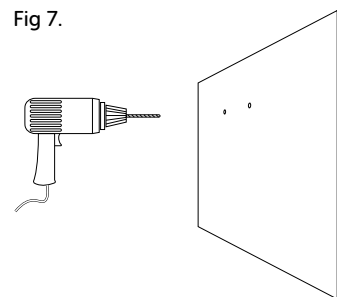

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Other information

Helpful technical information

3. Push 2 rawl plugs (not supplied) into the holes. Insert 2 screws (not supplied) into the holes and tighten. Take care to leave enough space between the screw heads and the wall.

Note: You will need to ensure that the screws heads can fit into the wall mount points on the back of your Micro and that they are long enough to sufficiently grip into the rawl plugs and wall. You must also leave enough space between the screw head and the wall for the screw head to fit into the mounts.

4. Hang the Micro onto the screws. For secure mounting ensure the screw heads slide firmly into the narrow part of the wall mount fixings on the back of the Micro.

Other information

Helpful technical information

Technical specification



Please use only the specified external adapter
Dongguan Yingna Electronic Technology Co.,Ltd. (Model name: YNQX09T059100BL)

Power adaptor:	Input AC 100-240V~50/60Hz
Battery:	2 x AAA (also known as LR-03), to maintain the clock if there is a loss of mains power. 1 x 3V CR2025 for the remote control (supplied)
Output:	2 x 1W RMS
Frequency range:	FM:87.5 MHz to 108 MHz
Bluetooth:	Version: v3.0 Profiles: A2DP/HFP/HSP/A2DPAVRCP Frequency range: 2.4GHz-2.480GHz
Pairing name:	BUSH FM MICRO

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

 


This page is left intentionally blank



Product support

5

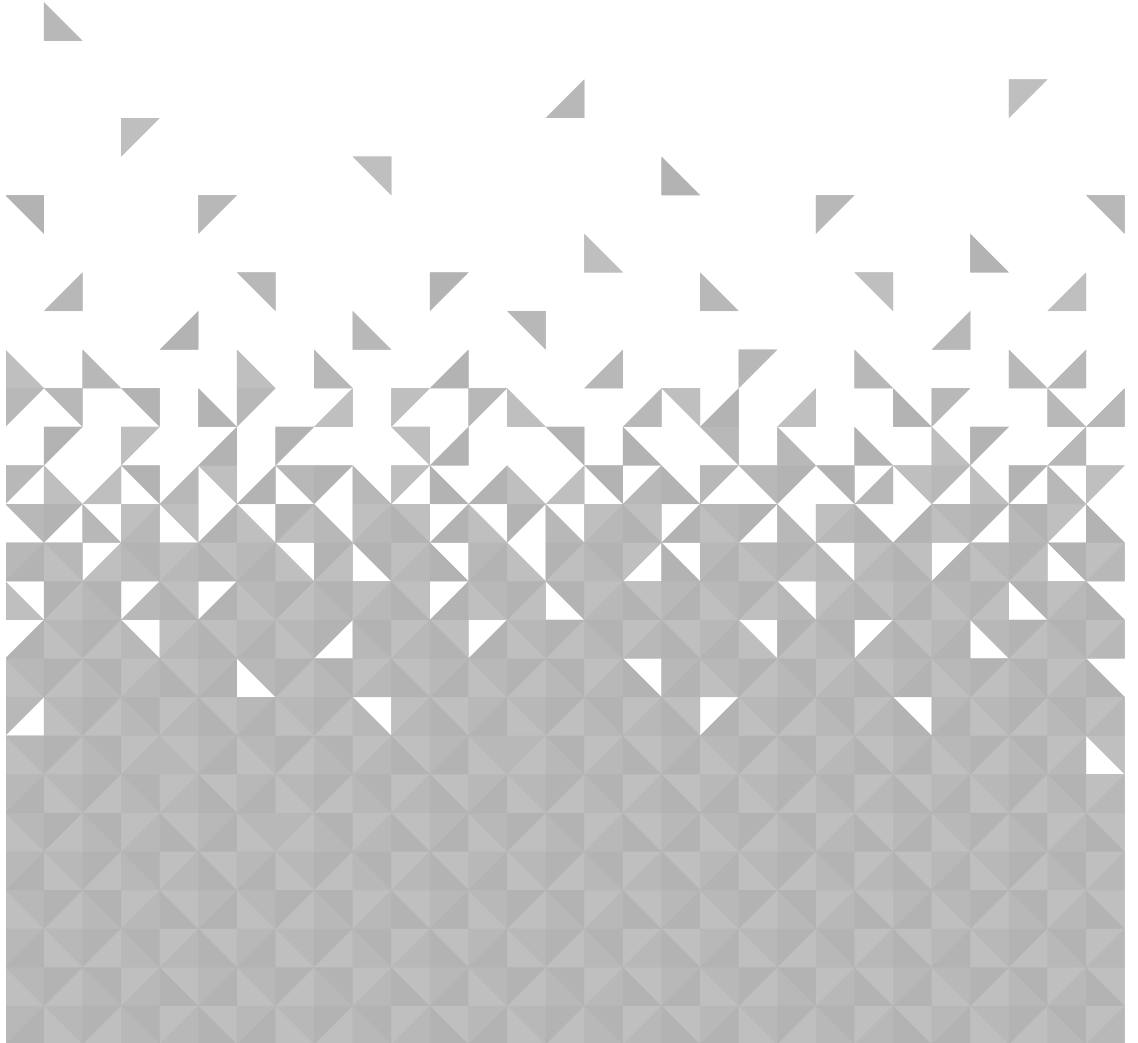

Product support

Help is always at hand

Troubleshooting

If you are experiencing problems with your Micro, there are some quick and easy checks that you can do, which may help to solve the problem.

CD Does not play:

- Check that you are in CD mode. Short press the Mode button on the Micro or on the remote control to change the mode (check the display).
- Take out the CD and check that it is not marked or scratched. Damaged CDs cannot be played in the Micro or may skip or not rotate correctly.
- Please check that you are using an original audio CD and not a copy. Often copied CDs will not play.

No sound / power:

- Adjust the volume using the Volume + on the Micro or the Vol + button on the remote control.
- Check that the sound is not muted. Short press the Mute button on the remote control.
- You may have headphones connected. Either use the headphones to listen to your Micro or unplug the headphones.
- If you are using a Bluetooth connected device or an external sound source via Aux in. Increase the volume on the secondary device and on the Micro.
- Check that the mains power wall socket is switched on and that the Micro is not in Standby mode.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Radio reception is poor:

- Fully extend the wire aerial to get the best reception and sound quality.
- Retune the radio station/s.
- Try moving your Micro to another location to see if reception improves.
- Check that you do not have other electrical equipment too close to your Micro, causing interference.

Unable to pair with a Bluetooth device:

- Check that you are In Bluetooth (BT) Mode.
- Ensure that you are within range of the radio for Bluetooth functionality, 10 metres or less (33 feet or less).
- Move the Micro and Bluetooth device away from other Bluetooth devices/electrical equipment.
- If possible, turn off other nearby Bluetooth devices or disable their Bluetooth functionality.

The function buttons do not respond:

- Check that mains power wall socket is switched on and that the Micro is not in Standby mode.
- Check that you are trying to use the function buttons for the mode that you are in.

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

Help and assistance

If you require any technical guidance or find that your Stereo Flat Micro System is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at www.argos-support.co.uk

If you still require further assistance, call one of our experts on **0345 600 3021***. To help give us help you a fast and efficient service please have the following information ready:

Model Ref.

Serial number

You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the base or rear of your product.

Date of purchase

This will be shown on your receipt

Local call rates applies*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see www.bt.com/pricing for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

Product support

Help is always at hand

Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2012/19/EC..
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.
- Batteries contain substances that may be harmful to the environment and human health. Keep out of the reach of children and seek immediate medical help if swallowed.
- Batteries should not be disposed of in the normal household waste but taken to appropriate local recycling facilities, where and when these are available.
- Never throw batteries in a fire or attempt to open the outer casing.

This product is intended for use within the UK. This equipment complies with the essential requirements of the Radio Equipment Directive 2014/53/EU.

Declaration of Conformance

Hereby, Argos Ltd, declares that this Band II LPD device is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/EU. The complete declaration of conformity can be obtained by contacting <http://www.argos-support.co.uk/>

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

Product support

Help is always at hand

BUSH

Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

www.bushregistration.co.uk

FREEPHONE*

0800 597 8548

Lines are open 8am - 8pm, 365 days a year. *Calls may be recorded and monitored.

Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection Officer, Domestic & General, Leicester House 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

This page is left intentionally blank

section of these instructions, or online at www.argos-support.co.uk If you still require further assistance, call one of our experts on 0345 600 3021

BUSH



This page is left intentionally blank





This page is left intentionally blank



BUSH

Contact:

www.argos-support.co.uk

Helpline: 0345 600 3021