

Food Slicer Switch ON Instruction

This product is equipped with a Safety Button with Double Actuator for extra safety. Please follow the instructions below to switch on the product.

In order to turn on the Food Slicer, slide the ON/OFF Button, from 0 to 3. 0 is "off", 1 is slow and 3 is Maximum blade speed. Set the speed on your requirements.

Then push the Safety Button to turn on the unit but which requires two actions with your thumb.

- 1) push the safety lock (a) downwards to unlock the button then
- 2) depress the button at the position (b) to turn on the unit.

NOTE: You need to continually push down the Safety Button to keep the Blade spinning.

