


Pagnell Bookshelf

Assembly Instructions - Please keep for future reference

709/2664

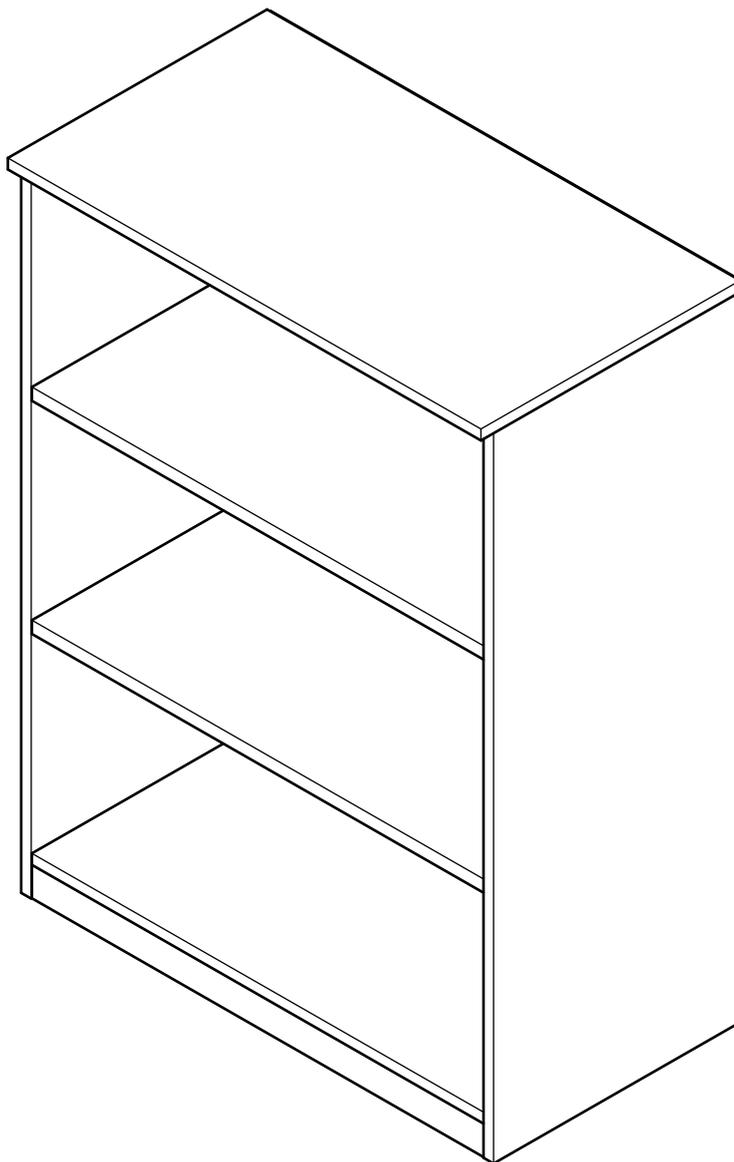

Dimensions

Width - 73cm

Depth - 40.5cm

Height - 100cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 08456 400800



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not use this item if any components are missing or damaged.

- Do not stand on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- Assembly to be carried out by the competent adult only.
- During assembly children should be kept away from the product due to the potential risk of injury.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

IMPORTANT: RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE


- Argos Ltd. MK9 2 NW.
- This product is suitable for children in the age 6 or above.
- Regularly check all fastenings to ensure that they are properly tightened.
- Maximum load:
50 kgs (top of bookshelf).

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the panels listed below

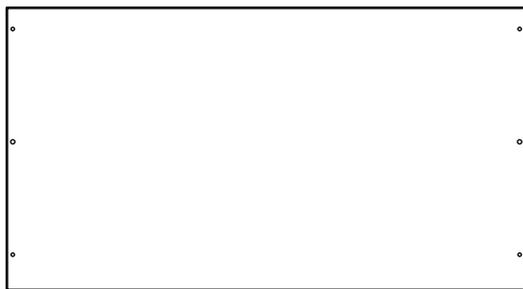

1 Top panel (73 x 40cm)

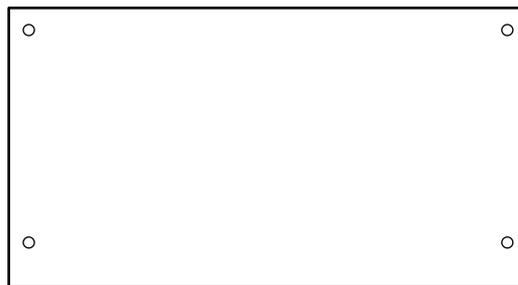


5 Shelf x 2 (69.8 x 37.9cm)

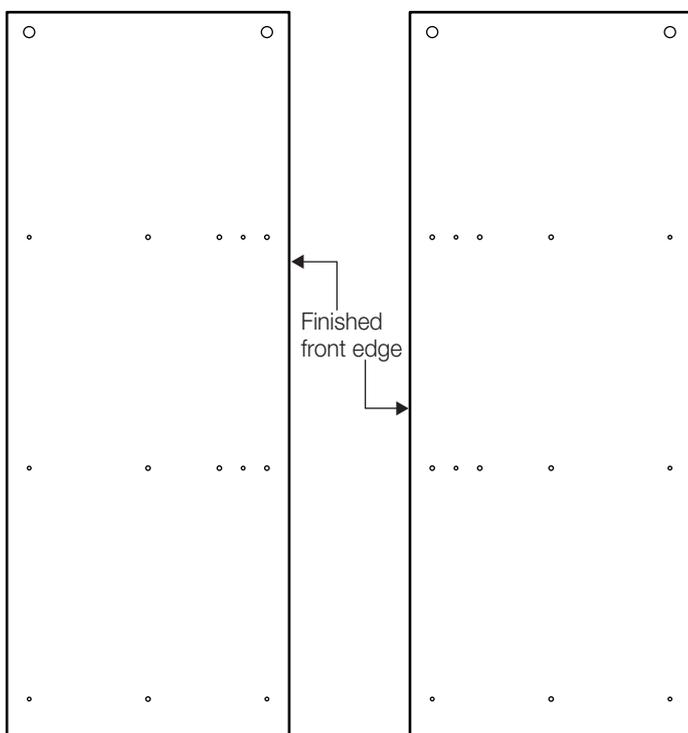


2 Right side panel
(38 x 98.4cm)


3 Left side panel
(38 x 98.4cm)

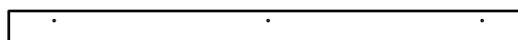

6 Front panel (69.8 x 4.5cm)

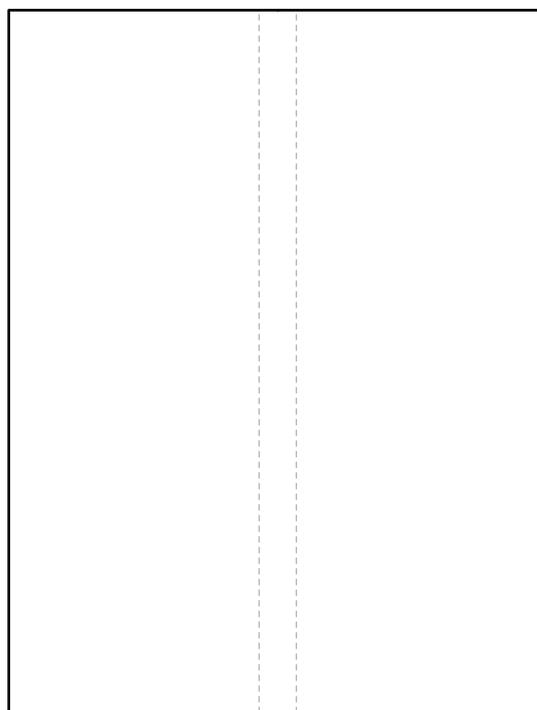

7 Back panel (72.4 x 95.2cm)

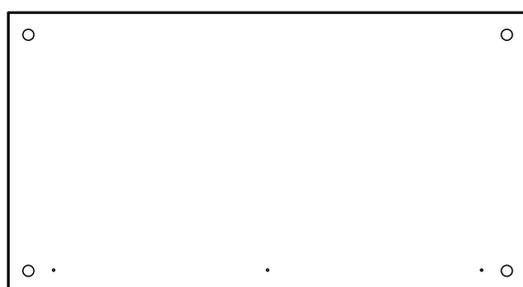



4 Bottom panel (69.8 x 37.9cm)



Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. in some cases more fittings may be supplied than are required.

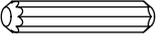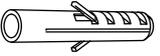A  30mm Dowel x 16	B  Plastic support x 3	C  14mm Screw x 7
D  39mm Locking pin x 16	E  15mm Locking nut x 16	F  Nail x 20
G  Wall plug x 1	H  Wall strap x 1 (This screw is included in the bag of wall strap)  x 1	


Tools required

 Phillips screwdriver (medium & large)

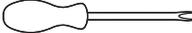 Flatblade screwdriver (medium)


 Bradawl (or sharp point)

 Small hammer

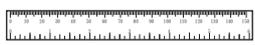 Ruler/tape measure

 Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws

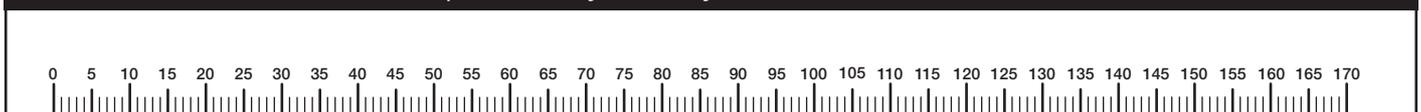


Assembly Instructions


Step 1

Fitting dowels

a: Insert Dowels **A** into the Bottom panel **4** and Shelves **5**.

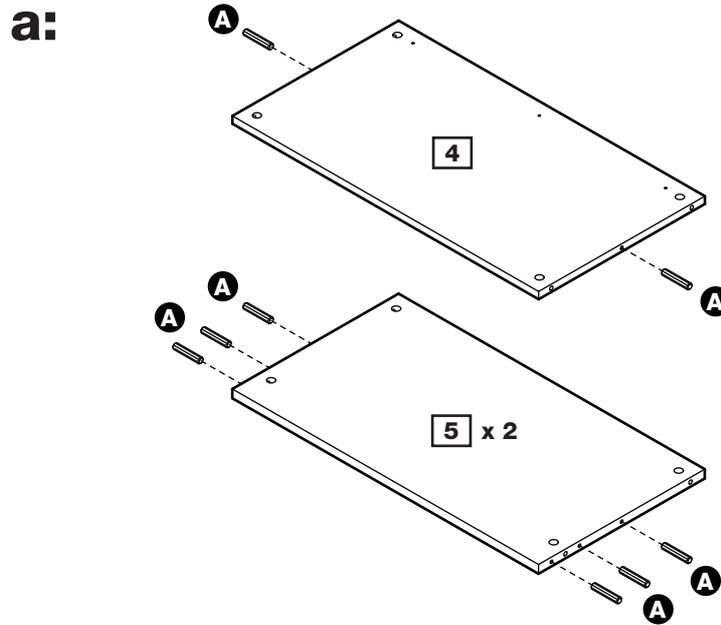


b: Insert Dowels **A** into the Right side panel **2** and Left side panel **3**.

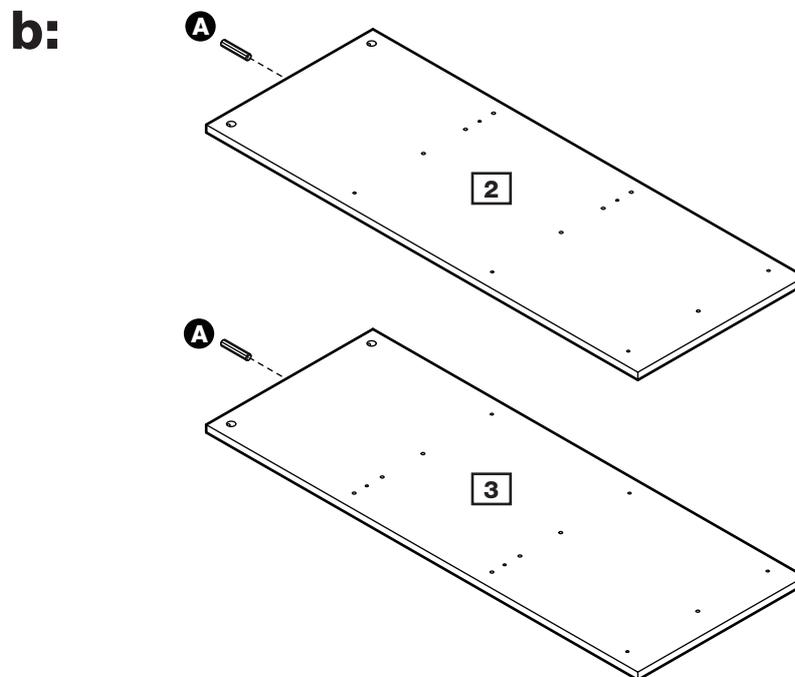

Step 2

Attaching plastic supports

a: Use Screws **C** to fix Plastic supports **B** onto the Front panel **6**.

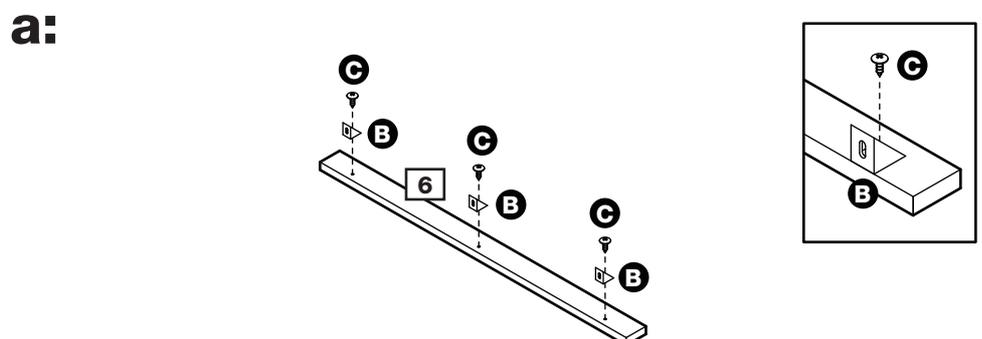


Continued on next page.

Assembly Instructions

Step 2 - continued

b: Use Screws **C** to fix Front panel **6** onto the Bottom panel **4**.

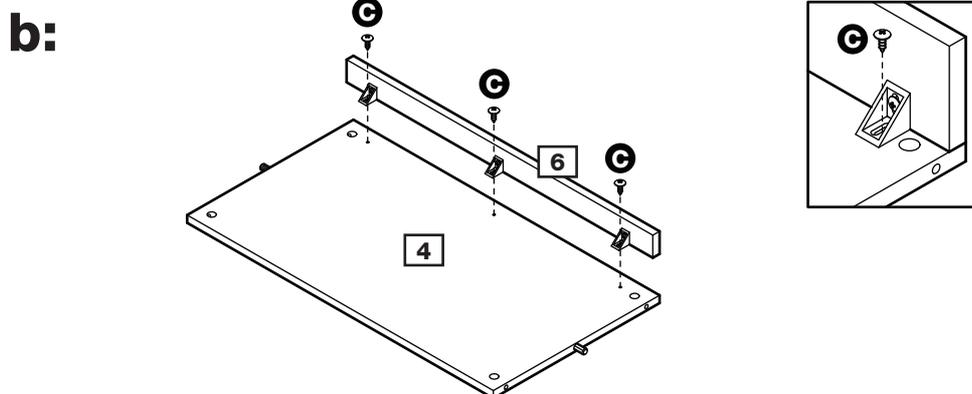


Step 3

Fitting locking pins

Screw Locking pins **D** into the Right side panel **2** and Left side panel **3**.

Note: Insert Locking pins as far as shown.

Do not over tighten.

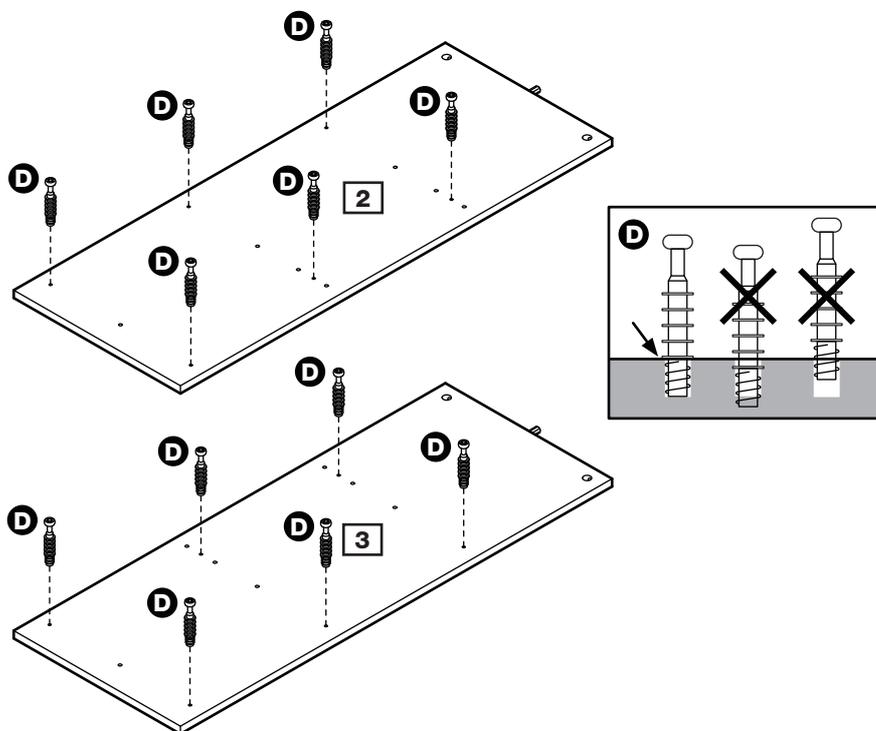


Step 4

Attaching bottom panel

Position Bottom panel **4** onto the Left side panel **3**.

Insert Locking nuts **E** into the Bottom panel **4**.

Use a screwdriver to turn Locking nuts **E** clockwise to lock.

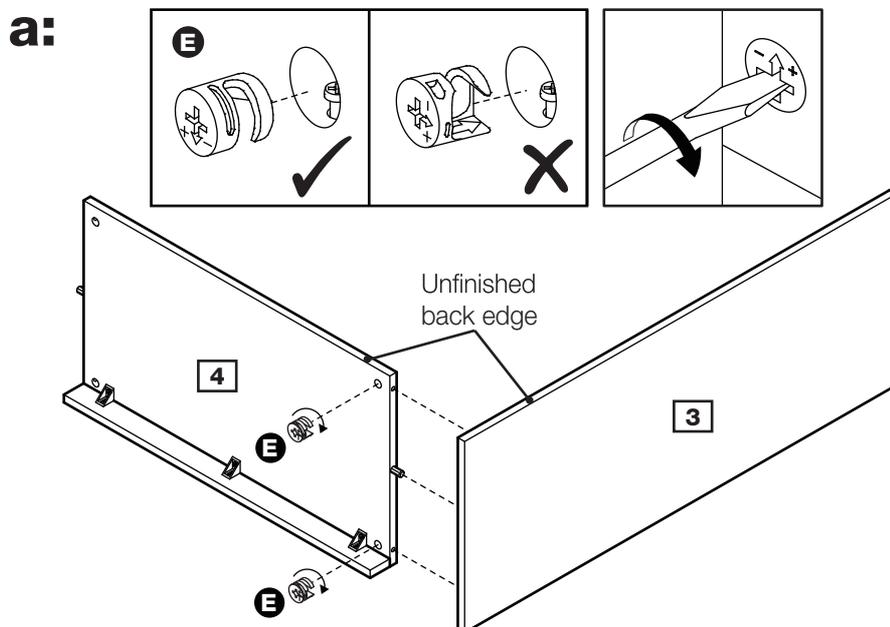

Assembly Instructions


Step 5

Attaching shelves

Position Shelves **5** onto the unit.

Insert Locking nuts **E** into the Shelves **5**.

Use a screwdriver to turn Locking nuts **E** clockwise to lock.

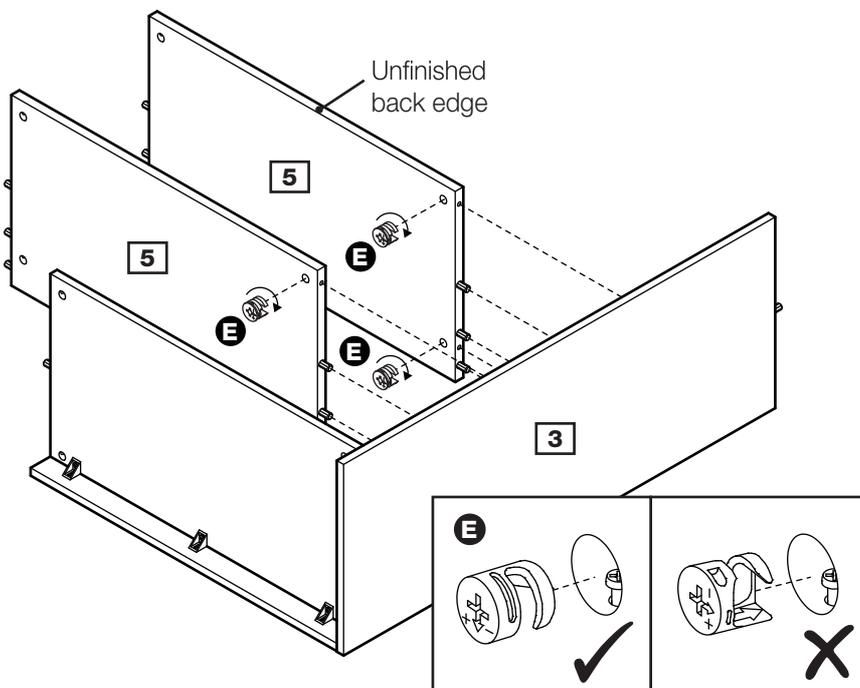


Step 6

Attaching right side panel

Position Right side panel **2** onto the unit.

Insert Locking nuts **E** into the Shelves **5** and Bottom panel **4**.

Use a screwdriver to turn Locking nuts **E** clockwise to lock.

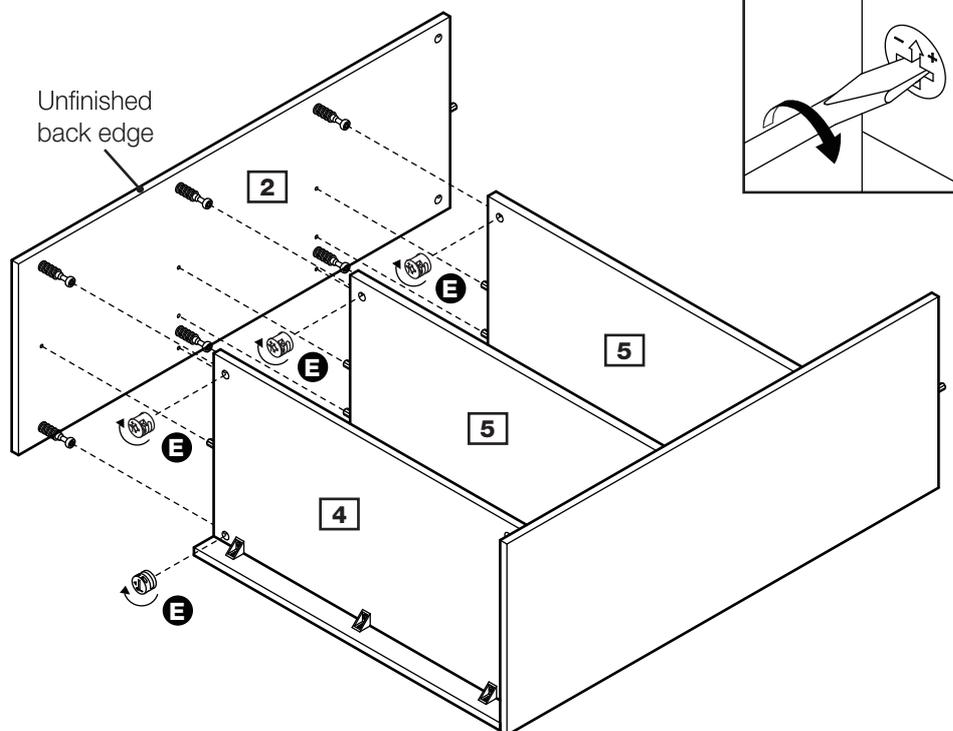

Step 7

Attaching top panel


a: Screw Locking pins **D** into the Top panel **1**.

Note: Insert Locking pins as far as shown.

Do not over tighten.

Continued on next page.

a:

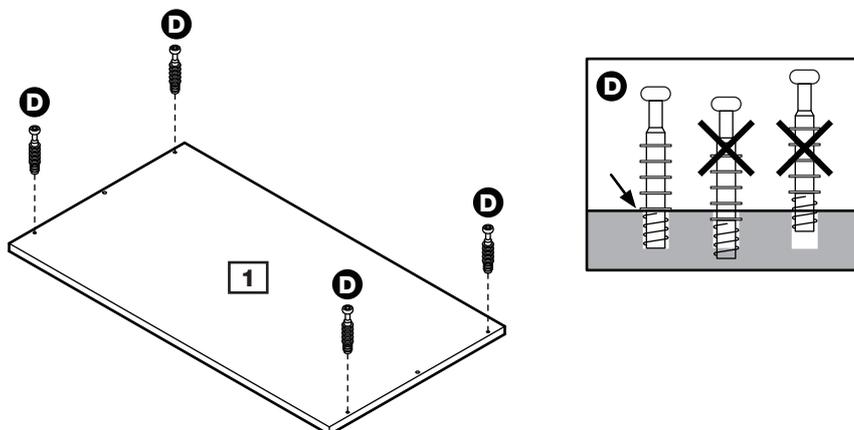

Assembly Instructions



Step 7 - continued

b: Position Top panel **1** onto the unit.

Insert Locking nuts **E** into the Right side panel **2** and Left side panel **4**.

Use a screwdriver to turn Locking nuts **E** clockwise to lock.

b:

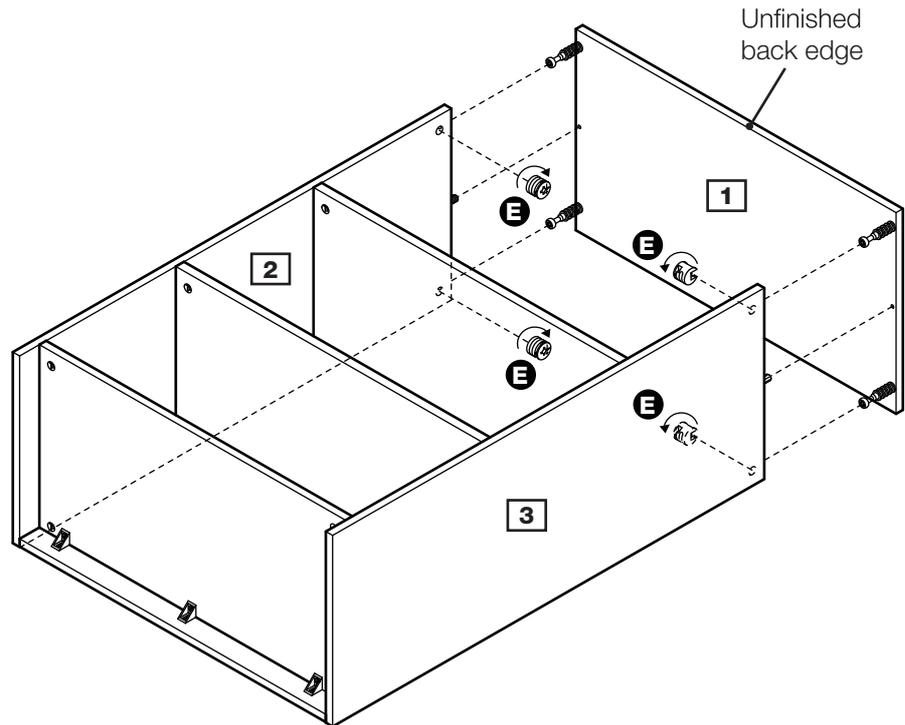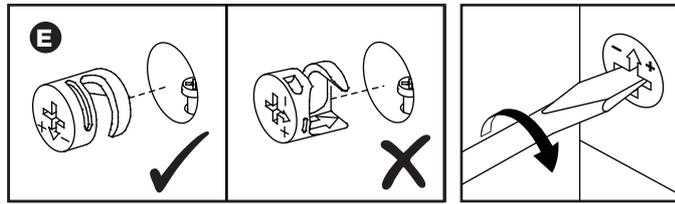


Step 8

Fixing back panel

Attach Back panel **7** onto the unit using Nails **F**.



Important:
The unit **MUST** be 'square' when back is attached.

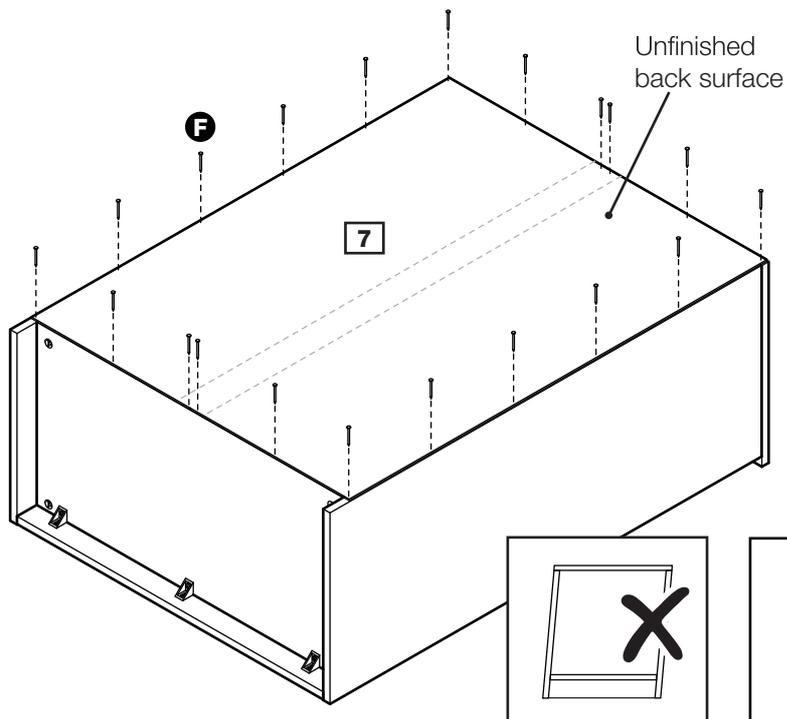

Assembly Instructions

Step 9

Fixing to wall

It is recommended that the bookshelf be fixed to a wall.

Fix Wall strap **H** to back of top panel using Screw **C**.

With help, move bookshelf into position.



Warning:

The bookshelf is heavy.

Lift with care.

Mark fixing hole on wall and remove bookshelf.

Drill a hole and insert Wall plug **G**.




Warning:



Before drilling, check wall for hidden pipes and cables.

Reposition bookshelf and fix wall strap using Screw **H**.

Assembly is complete.

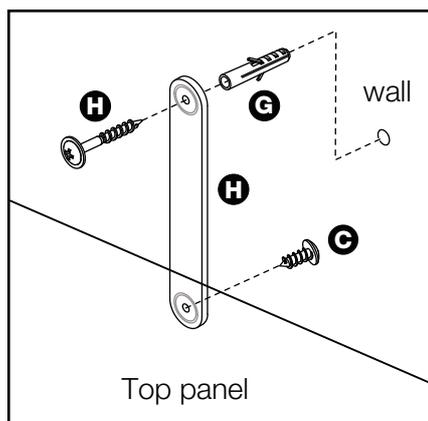

Note: Wall plugs supplied are for solid wall only. The correct type of fixing must be used for your wall, seek professional advice if in doubt

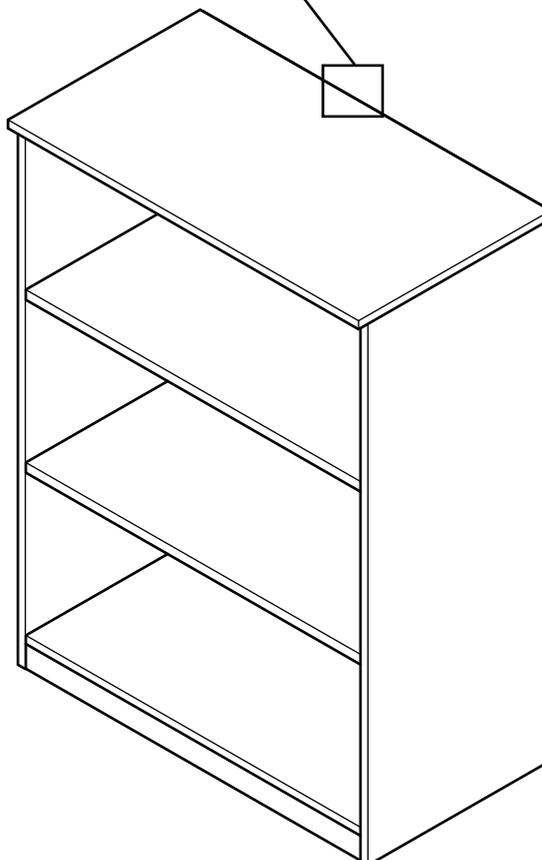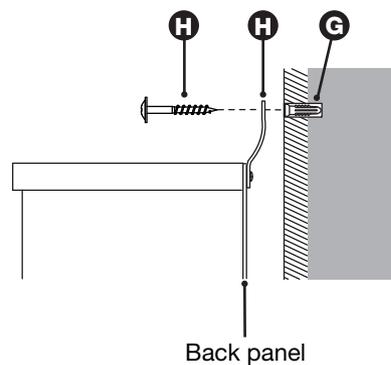


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:

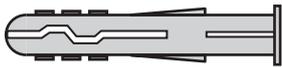

- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.



Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

- 1: General rule:**  Always use a larger screw and wall plug if you are not sure.
- 2:** Ensure you use the recommended drill bit to match the wall plug and hole size.
- 3:** Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
- 4:** Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
- 5:** Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

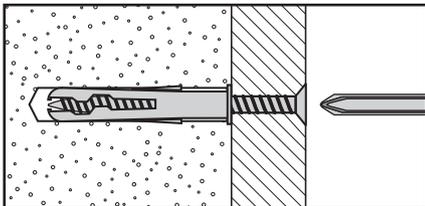


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

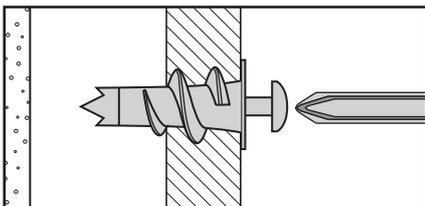


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

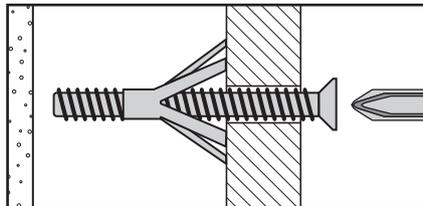


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

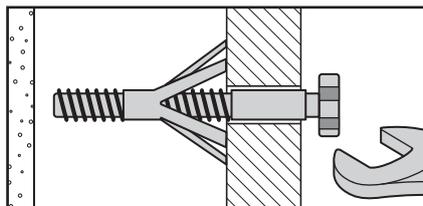


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

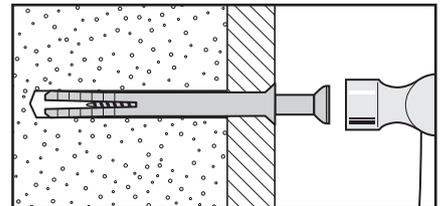

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

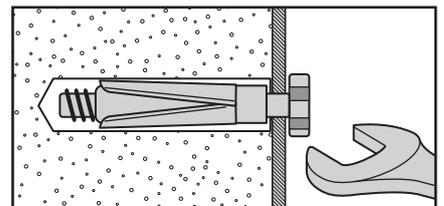

For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.



Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.