

Cuggl Elm Forward Facing Twin Pushchair

Assembly & User Instructions- Please keep for future reference

709/2925

cuggl 



Important

Age: 0-36 months
Maximum user
Weight: 15kg each
seat

Important-please read these instructions fully before assembly or use

These instructions contain important information which will help you get the best from your product and ensure safe and correct assembly, use and maintenance.

If you have any questions, call the **Customer Helpline: 03456 400 800**

Parts

If you have any questions,
call the **Customer Helpline: 03456 400 800**

Please check you have all the parts listed below:

Stroller x1

Rear wheel x2

Front wheel x2

Axle x1

canopy x1



IMPORTANT - KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Thank you for choosing our product. Please always read all the instructions provided carefully before use and remember, your child's safety may be affected if you do not follow these instructions. Front seat is suitable for baby of 6-36 months. Rear seat is suitable from birth to 36 months. The maximum load of the pushchair is 30kg (Maximum 15kg in each seat), never overload.

Pushchair was designed for two children, one children each seat.

Rear seat was designed to be used from birth, we recommend use of the most reclined position for new born babies.

- **WARNING:** Front seat of the pushchair is not suitable for children under 6 months.
- **WARNING:** Rear seat of the pushchair is suitable for children from birth to 36 months.
- **WARNING:** Accessories which are not approved by the manufacturer shall not be used.
- **WARNING:** Any load attached to the handle and/or on the back and/ or on the side will affect the stability of the vehicle.
- **WARNING:** Do not use if any part is broken, torn or missing.
- **WARNING:** Never leave your children unattended.
- **WARNING:** Avoid placing the stroller near naked heat sources such as electric bar fires, gas fires, etc, or where a child could gain access to any other kinds of hazard.
- **WARNING:** Always use the restraint system.
- **WARNING:** Always use the harness provided and make sure the harness is correctly fitted.
- **WARNING:** The maximum permissible loading for shopping basket is 2kg.
- **WARNING:** Ensure all locking devices are engaged before use.
- **WARNING:** This product is not suitable for running or skating.
- **WARNING:** To avoid injury ensure that your child is kept away when unfolding and folding this product.
- **WARNING:** Do not let your child play with this product.
- **WARNING:** The parking device shall be engaged when placing and removing the children.
- **WARNING:** Only replacement parts supplied or recommended by the manufacturer/ distributor shall be used.


Name of parts



Assembly Instructions

Step 1 To unfold the stroller


Release the folding lock, pull the handle bar backwards until you hear the “click”.

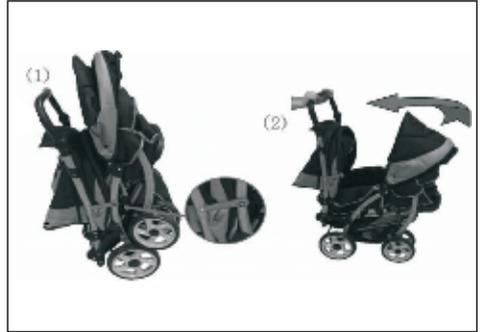

Step 2 Front wheel assembly

1. Slide front wheel brackets into front legs until you hear a “click” sound.

2. To remove the front wheels, press the small button and pull downwards.

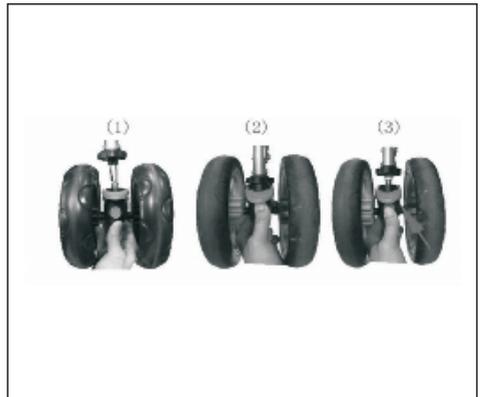

Step 3 Rear wheel assembly

Fit the wheel on the axle, place the workpiece part 1 then part 2 then part 3.

To attach the rear wheels, follow this order




Use and operation after assembly

To lock the front wheels

1.The front wheels must be turned in the straight forward position, then push the fixing lever upwards until the button locks in place.

2.To release the wheels for free swivel, push the fixing lever downwards.

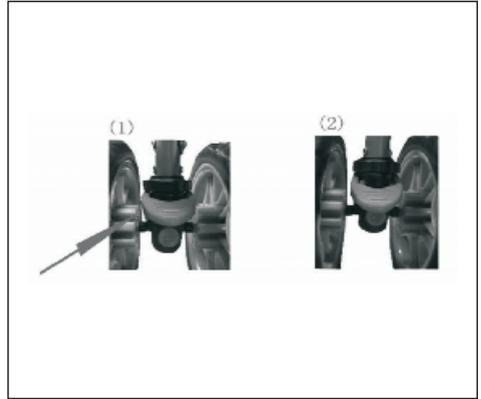


Use the brake

To lock the rear wheel brakes.

1.Press both brake pedals down until they “click” into the locked position. Make sure the brake pedals are pressed down completely.


2.Always set both brake pedals whenever you park the stroller.

To unlock the rear wheel brakes. Lift both brake pedals until they “click” into the unlocked position.

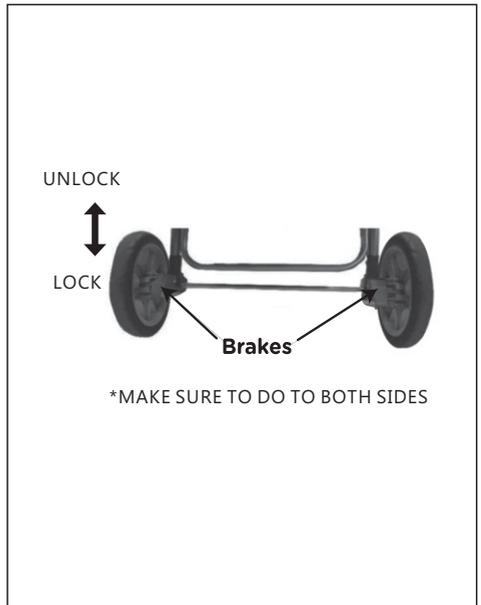

Adjust footrest

To adjust the footrest, pull the footrest adjust button and adjust the footrest to the correct position.

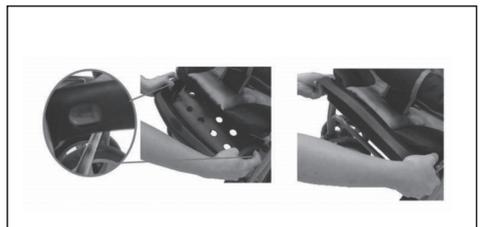

Use and operation after assembly

Use the safety belt


Use always the safety belt. Check the belt regularly and adjust the straps when your child is getting bigger.

The rear seat is designed for a child from birth to 36 months. Always use the harness in described manner when you use the pushchair.

There are two adjustment positions for the harness.

From birth to 6 months: Insert the harness through the slots.

From 6 months: No need to insert the harness through the slots.

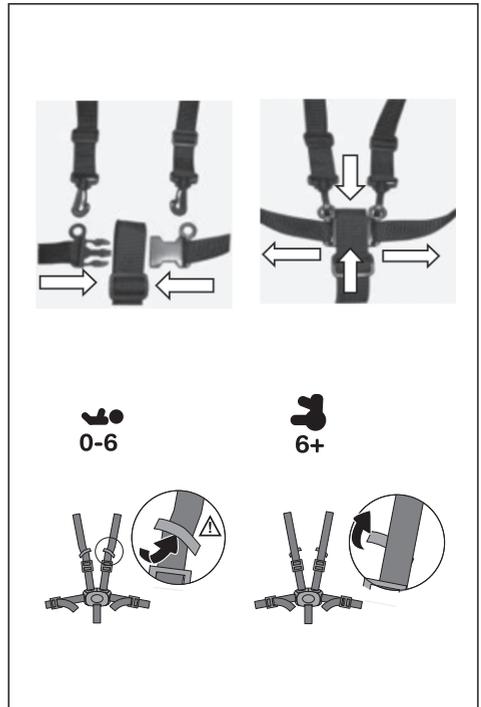

Adjustment of the canopy

The canopy can be adjusted freely into the desired position by turning the front bar of the canopy.

To remove the canopy, press the release buttons and pull outwards.

To install the canopy by inserting the tip of the canopy to the canopy holder until you hear a “click” sound. The rear canopy can not be detached.



Use and operation after assembly


Adjustable handle bar

1. Keep both release button pressed.
2. Turn the handle bar to the desired position.



Adjust backrest

To lower the backrest position, lift the backrest adjusting lever up firmly and put the backrest into the correct position.

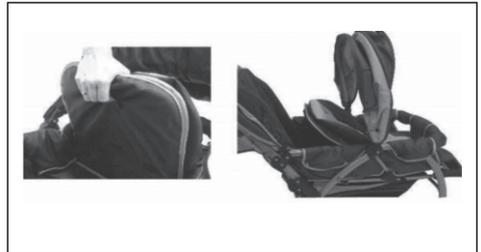

To fold the stroller

1. Close both canopies and place the two seats in sitting position. The front canopy must be pushed into the front of the pram.

2. Press the button below the left latch and lift up simultaneously the two black latches on each side of the handlebar.

Switch forwards and the handlebars will block the folded position with the hook.



Care and Maintenance

General

- This pushchair was designed and manufactured with qualified materials and craftsmanship. Always use the safety harness.
- Always check your pushchair for bullet points. Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Inspect regularly for:

- Regularly inspect the locking devices, breaks, wheels, harness assembly, catches, seat adjusters, joints and fixings to ensure they are secure and in full working order. If there is something wrong, please change it.
- Should any of the above be evident do not use and contact the Helpline: 03456 400 800

Care and Maintenance:

- To avoid risk of injury to your baby, please check and maintain the stroller periodically. Fabric cover may be cleaned in accordance with the fabric cover. Allow to dry naturally, ideally on a washing line. Do not iron any part of the fabric cover.
- Regularly inspect the locking devices, breaks, wheel, harness assembly, catches, seat adjusters, joints and fixing to ensure they are secure and in full working order. If there is something wrong, please change it. Please assemble and detach it according to the instructions.

If you have any question,

call the **Customer Helpline:03456 400 800**

This pushchair has been designed to comply with the EN1888:2012.

Country of origin: China

Argos LTD, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW