

# BUSH

## Instruction manual

CSPK4012BT





You'll soon be enjoying your new Bluetooth Speaker.

It all begins here, with your instructions. Don't worry, there's nothing too technical coming up. Just simple, step-by-step guidance to get you up and running quickly. Sound good? Then let's get started.

## Help and Guidance

We're here to help you get the most from your Bluetooth Speaker. Should you require any guidance, a simple solution can often be found online at:

**[www.argos-support.co.uk](http://www.argos-support.co.uk)**

If you still require further assistance, call one of our experts on **0345 600 3021**.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Contents

## 1 Safety information

|                    |   |
|--------------------|---|
| Safety information | 6 |
|--------------------|---|

## 2 Getting to know your Bluetooth Speaker

|                                  |    |
|----------------------------------|----|
| Ready? Let's begin               | 10 |
| Accessories                      | 10 |
| Front and rear features          | 11 |
| Features and controls            | 11 |
| Connecting the mains power cable | 12 |
| Standby mode                     | 12 |
| Switching input modes            | 13 |
| Volume function                  | 13 |
| EQ sound effects                 | 13 |

## 3 Using your Bluetooth Speaker

|                                |    |
|--------------------------------|----|
| Line/Aux-in input connection   | 16 |
| Connecting a Bluetooth device  | 17 |
| Controlling a connected device | 18 |

## 4 Other information

|                         |    |
|-------------------------|----|
| Care & maintenance      | 20 |
| Technical specification | 20 |

 
# Contents

## 5 Product support

|                     |    |
|---------------------|----|
| Troubleshooting     | 22 |
| Help and assistance | 23 |
| Disposal            | 24 |
| Guarantee           | 25 |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Safety information 1

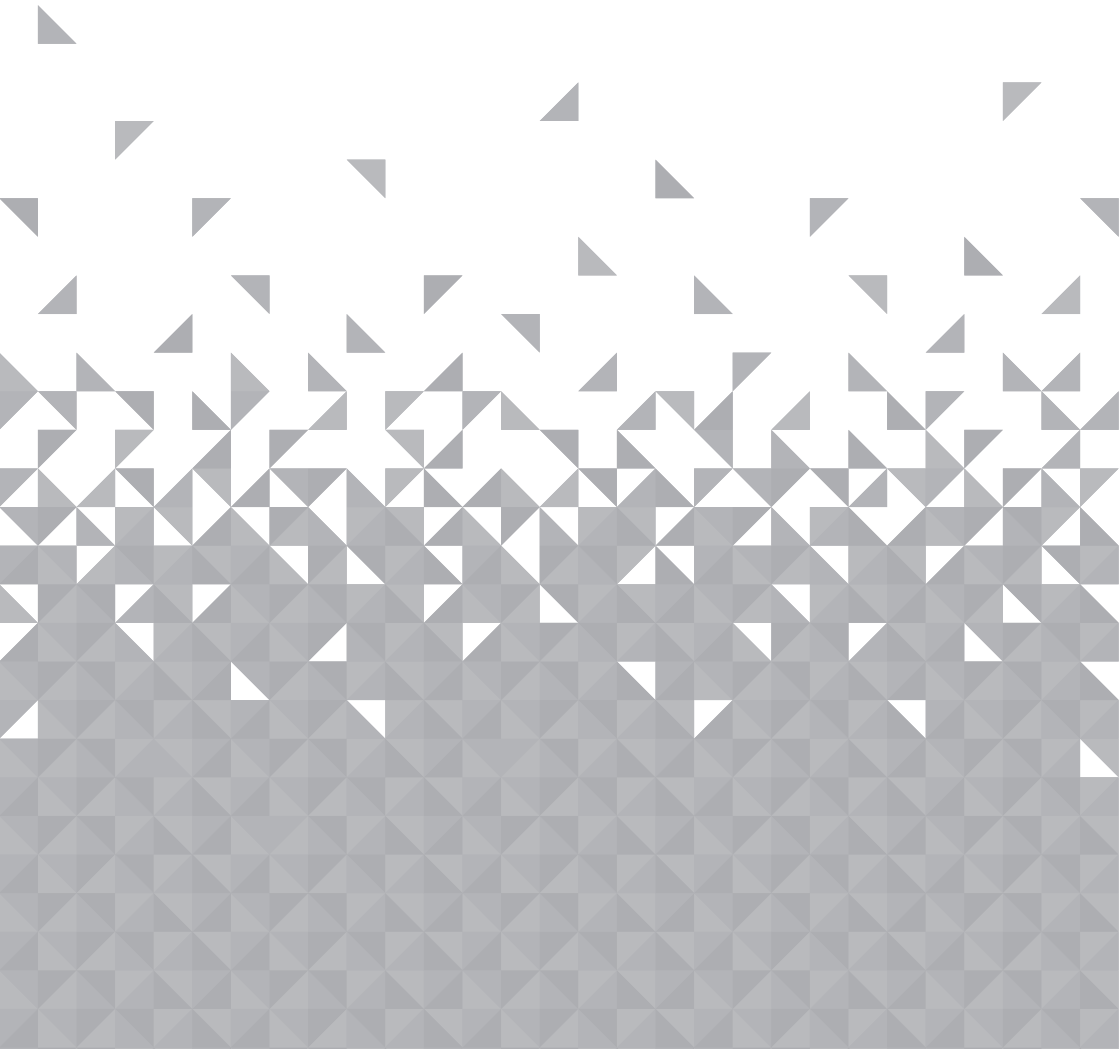



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Power source



- This symbol means that this unit is double insulated. An earth connection is not required.
- The appliance must be connected to a 220-240 volt 50/60Hz AC supply by means of a three pin socket.
- Unplug this apparatus during lightning storms or when unused for long periods of time - to prevent damage to this product.



- Opening or removing covers may expose you to dangerous voltages or other hazards.



- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.
- Use suitable power sources - Plug the product into a suitable power source, as described in the operating instructions or as marked on the product.
- The supply voltage should be the same as that indicated in the technical specifications and the appliance rating plate.
- If the socket outlets in your home are not suitable for the plug supplied with this unit check with a qualified electrician for replacement.
- In order to disconnect the apparatus from the mains completely, switch off the outlet and remove the mains plug completely.



- Do not bend, stretch or pull the supply cable in order to avoid electric shock.
- When installed, the power socket must be within easy reach.

### Moisture and water

- Do not use this apparatus near water or moisture.
- Do not use this product near a bathtub, washbowl, kitchen sink, and laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture is present.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



## Safety information

**Important** - Please read these instructions fully before installing or operating

### Heat sources and flames



- Batteries shall not be exposed to excessive heat such as sun, fire or the like
- To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.

### Servicing and repairs

 
- Refer all servicing to qualified service personnel
- Servicing is required when the apparatus has been damaged in any way: such as liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

This page is left intentionally blank



# Getting to know your Bluetooth Speaker

2

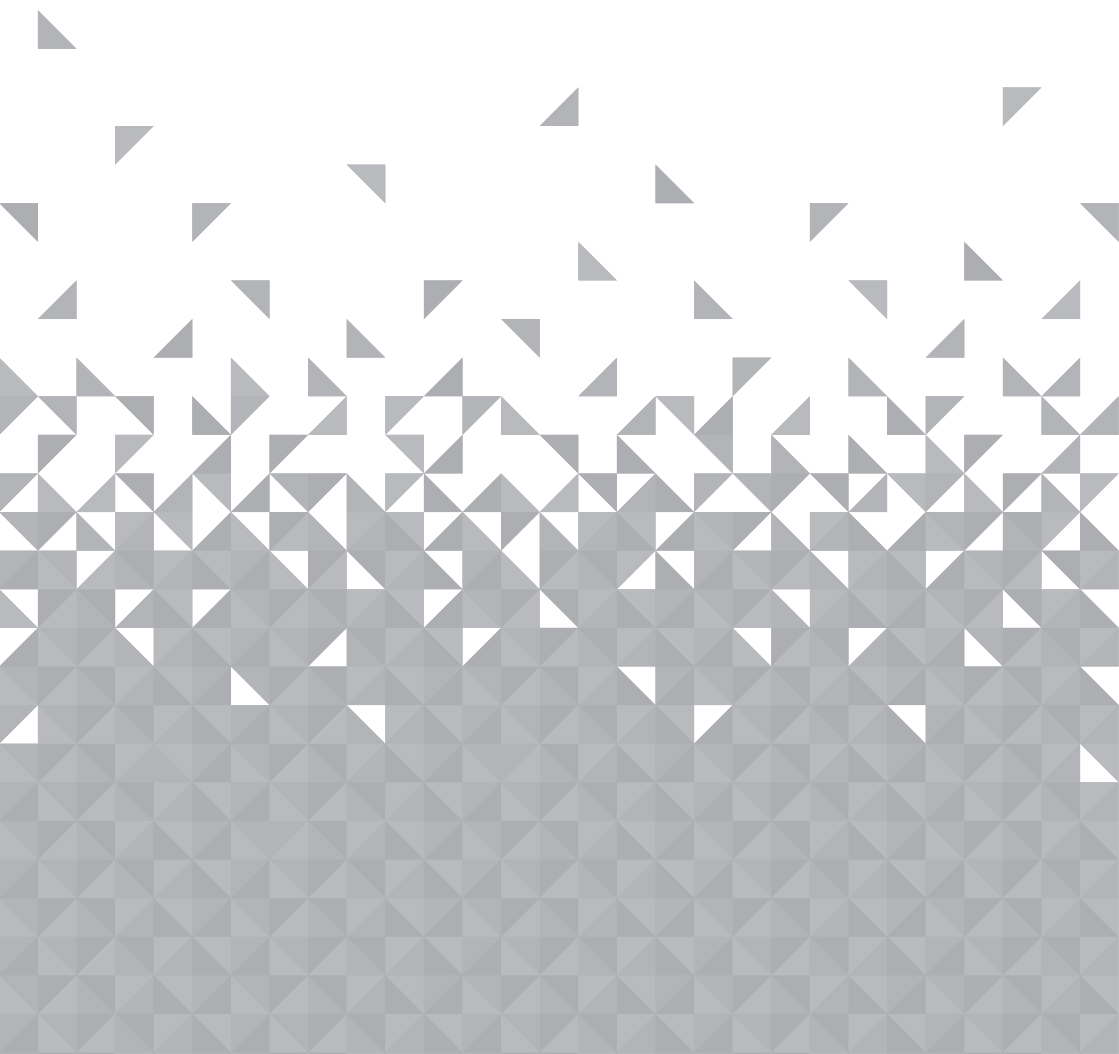

# Getting to know your Bluetooth Speaker

You'll be up and running in no time

 
 
## Ready? Let's begin...

Please read these instructions carefully. They contain important information which will help you get the best from your product and ensure safe and correct installation and operation.

If you require any further assistance, our technical experts are happy to help. For full details, refer to the product support section at the end of these instructions.

## Accessories


1. Bluetooth Speaker unit
2. Mains adaptor

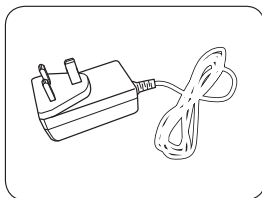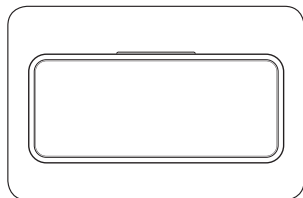

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your Bluetooth Speaker

 You'll be up and running in no time

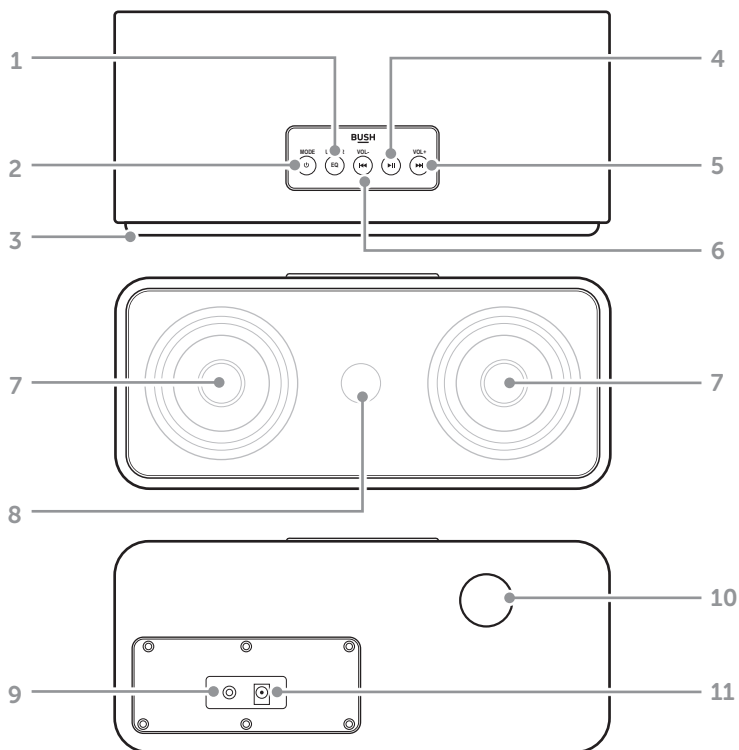

- |                        |                     |
|------------------------|---------------------|
| 1. UNPAIR/EQ button    | 7. Speakers         |
| 2. MODE/STANDBY button | 8. LED indicator    |
| 3. Speaker grill       | 9. AUX input socket |
| 4. PAUSE button        | 10. BASS port       |
| 5. VOL+/VOL- button    | 11. DC mains input  |
| 6. VOL-/VOL- button    |                     |


section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on 0345 600 3021.

# Getting to know your Bluetooth Speaker

 You'll be up and running in no time

## Connecting the mains power cable

1. Insert the mains socket jack into the DC power input (11) on the rear of the unit.
2. Connect the mains plug to a wall outlet and switch on.

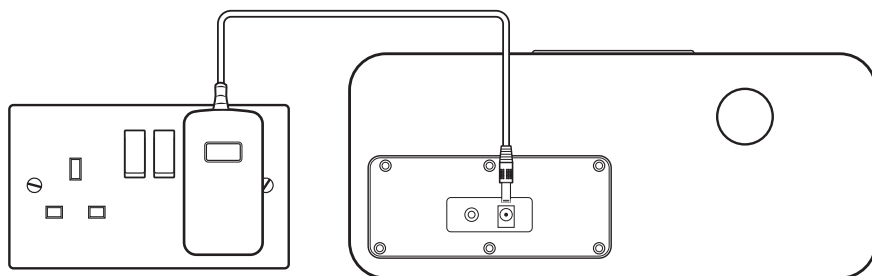

3. The initial mode when powered on is STANDBY. Press the  button (2) to wake from standby.

---

The last mode used is memorised when the power is turned off and on.



---

## Standby mode

---

This unit is designed to enter STANDBY mode automatically after 20 MINUTES (approximately) of inactivity. Press the  button (2) to wake the unit.

---

1. Press the  button (2) to put the system into standby mode. The red LED indicator will flash for 5 minutes and then enter power saving mode. Press the  button (2) to wake.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Getting to know your Bluetooth Speaker

You'll be up and running in no time

## Switching input modes

Follow the below instructions to switch between Bluetooth and LINE in input modes.

1. Press the and hold the MODE button (2) to switch modes. Line-in mode is indicated with a solid red LED and Bluetooth is a blue LED (either flashing or solid depending on the connection status).

## Volume function

1. Press and hold the VOL+ button (5) to increase the volume output.
1. Press and hold the VOL- button (6) to decrease the volume output.

## EQ sound effects

Select from five sound EQ modes of: FLAT, ROCK, JAZZ, POP & CLASSIC.

1. Press the EQ button (1) to cycle between them. Each press is indicated by a sequence of three flashes on the LED indicator (8).

---

 
NOTE: There is no indication which EQ is active, so select the mode that best suits your sound preference for the tracks that you are playing.

---

This page is left intentionally blank

# Using your Bluetooth Speaker

3

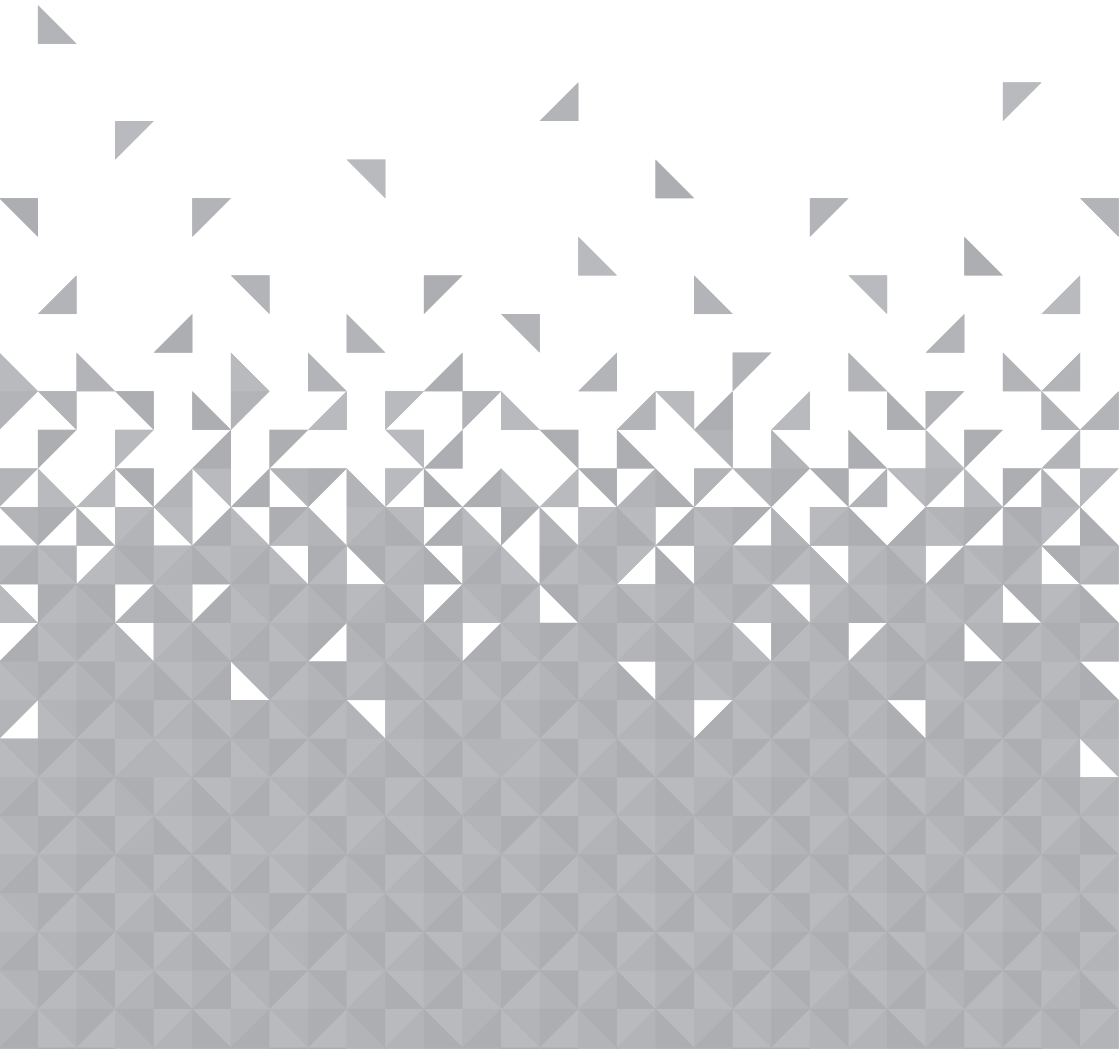

# Using your Bluetooth Speaker

Let's get started

## Line/AUX-in input connection

 
Follow the steps below to connect an external audio source (such as a smartphone) for playback through the Bluetooth Speaker..

---

You will need a 3.5mm audio cable (not supplied) to connect a device to the AUX input socket (9).

---

1. Connect one end of the 3.5mm audio cable to the AUX IN input socket (9) on back of the unit. Connect the other end to an earphone socket on the audio device (such as a smartphone).

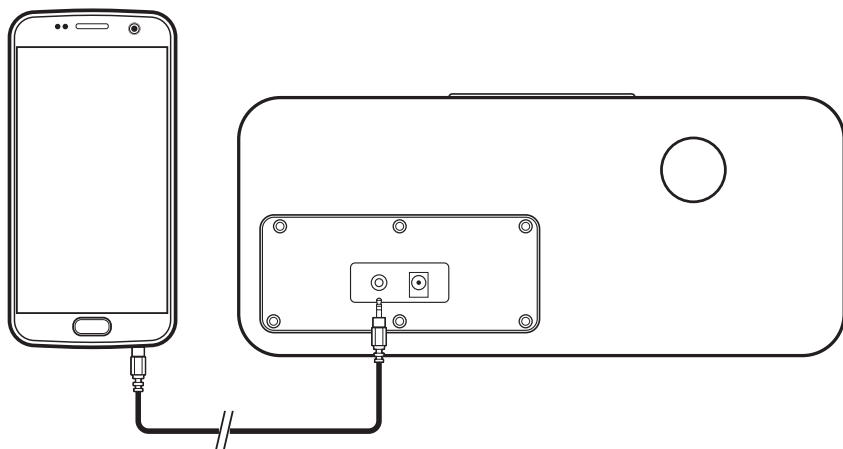

2. Switch to AUX imode by pressing and holding the MODE button until you see the red LED indicator.
3. Press PLAY on the audio device.
4. Adjust the volume to your desired level.

---

When connecting via the headphone output the volume of the bluetooth speaker is affected by the volume control on the player. Ensure that the audio source (e.g. smartphone) is set to about 70-80% to avoid distortion.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# Using your Bluetooth Speaker

Let's get started

## Connecting a Bluetooth device

When using the Bluetooth connection, you can listen to audio wirelessly from a Bluetooth audio device (e.g. smartphone) within 10 metres of the Bluetooth Speaker unit.

1. When in Bluetooth pairing mode you will see a flashing blue LED while the unit searches for previously paired devices or makes itself available for new connections.
2. Enable Bluetooth on your audio device (e.g. smartphone) and search for available bluetooth connections. Select the 'BUSH WOOD SPEAKER' from the list. If you are asked for a pass code enter '0000'. The blue LED will stop flashing once connected.

---

If you turn off either device before pairing is complete the process will need to be repeated when powered ON again.

---

---

Each time you switch the Bluetooth Speaker on and select BLUETOOTH mode the device will automatically connect, unless you have un-paired the device on your bluetooth audio device.

---

3. You can now begin playback from the audio device and the output will playback through the Bluetooth Speaker.
4. When using a mobile phone as an audio source and you receive a phone call the audio playback stops while you receive the call. When you hang up the audio is restored.

---

The volume output is effected by the volume level on the audio source e.g. smartphone, so make sure that is set to about 70-80% (not too loud to avoid distortion).

---

5. To un-pair (disconnect) a bluetooth device, press and hold the UNPAIR button (1). The Bluetooth Speaker will now revert to search mode, and be available for new connections.

# Using your Bluetooth Speaker

Let's get started

## Controlling a connected device

Once connected you can either use the controls on the audio device to begin playback, skip tracks etc. Or you can use the control buttons on the unit/remote control.

1. The ►|| button (4) when pressed will begin playback of the selected track on the audio device. Press again to pause playback.
2. To skip to the next track press the VOL+/ ►► button (5).
3. To skip to the previous track press the VOL-/ ◀◀ button (6).

 
---

All other general audio functions such as EQ & VOLUME work as described in this manual.

---

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Other information 4

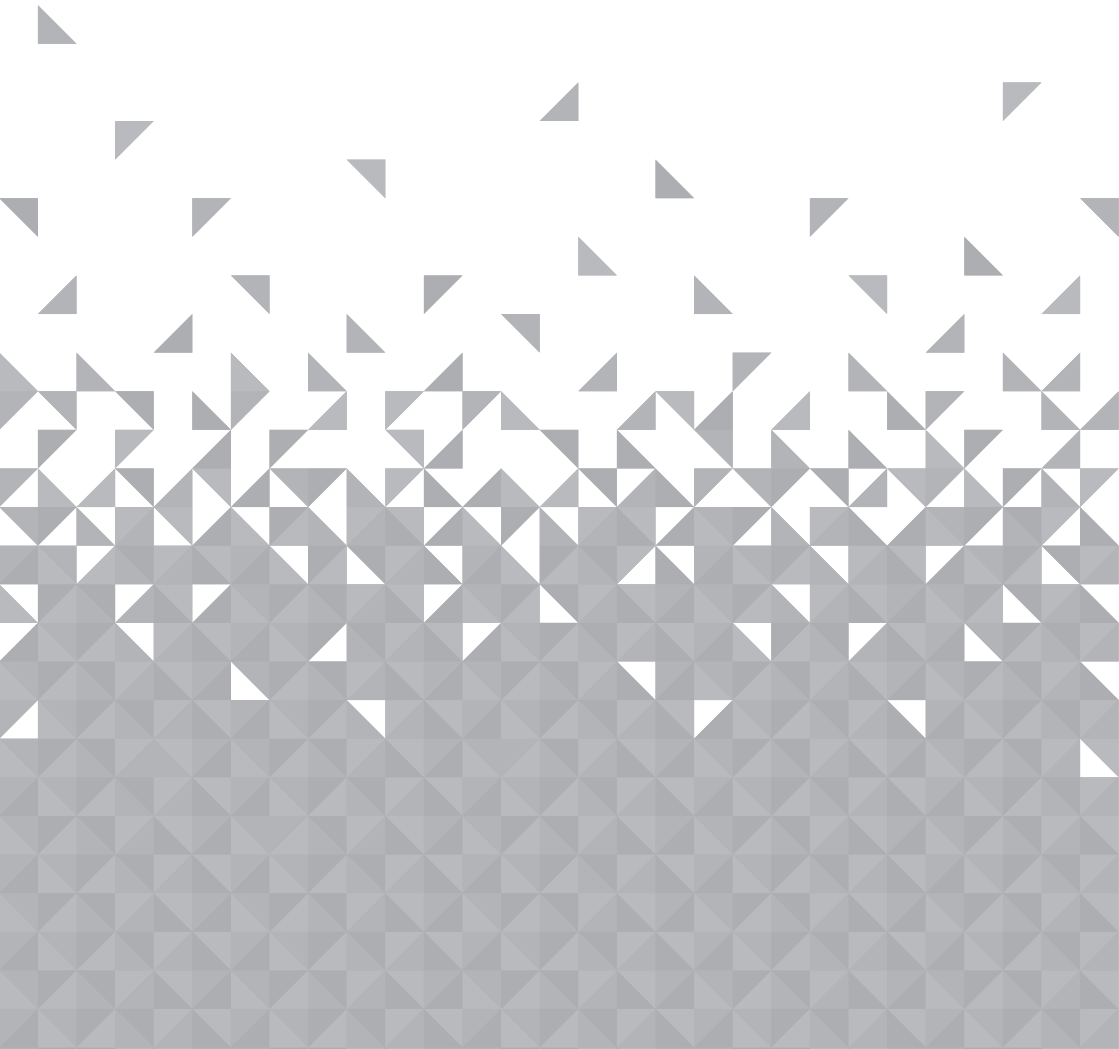

# Other information

Helpful technical information

## Care & maintenance

### After using the Bluetooth Speaker

- Set to Standby.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for a long period (holidays etc).

### Care & cleaning

 
- All care and cleaning operations should be carried out with the unit unplugged from the mains power.
- Occasionally wipe the cabinet with a lint free duster. Never clean the unit with liquids or solvents.

## Technical specification

| Specification            | Rating  |
|--------------------------|---|
| Supply voltage<br>Output | 220-240V~50/60Hz<br>18V $\overline{=}$ 2000mA $\ominus \text{---} \oplus$ |
| Max. power consumption   | 36W   |
| Speaker power            | 60 MAX watts, 2 x 20w RMS @ 10% THD                                       |
| Bluetooth compatibility  | EDR, A2DP, AVRCP  |
| Bluetooth version        | V2.1  |
| Frequency range          | 2.4Ghz - 2.480GHz   |
| Unit dimensions          | 125 x 286 x 130 mm  |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**


# Product support 5

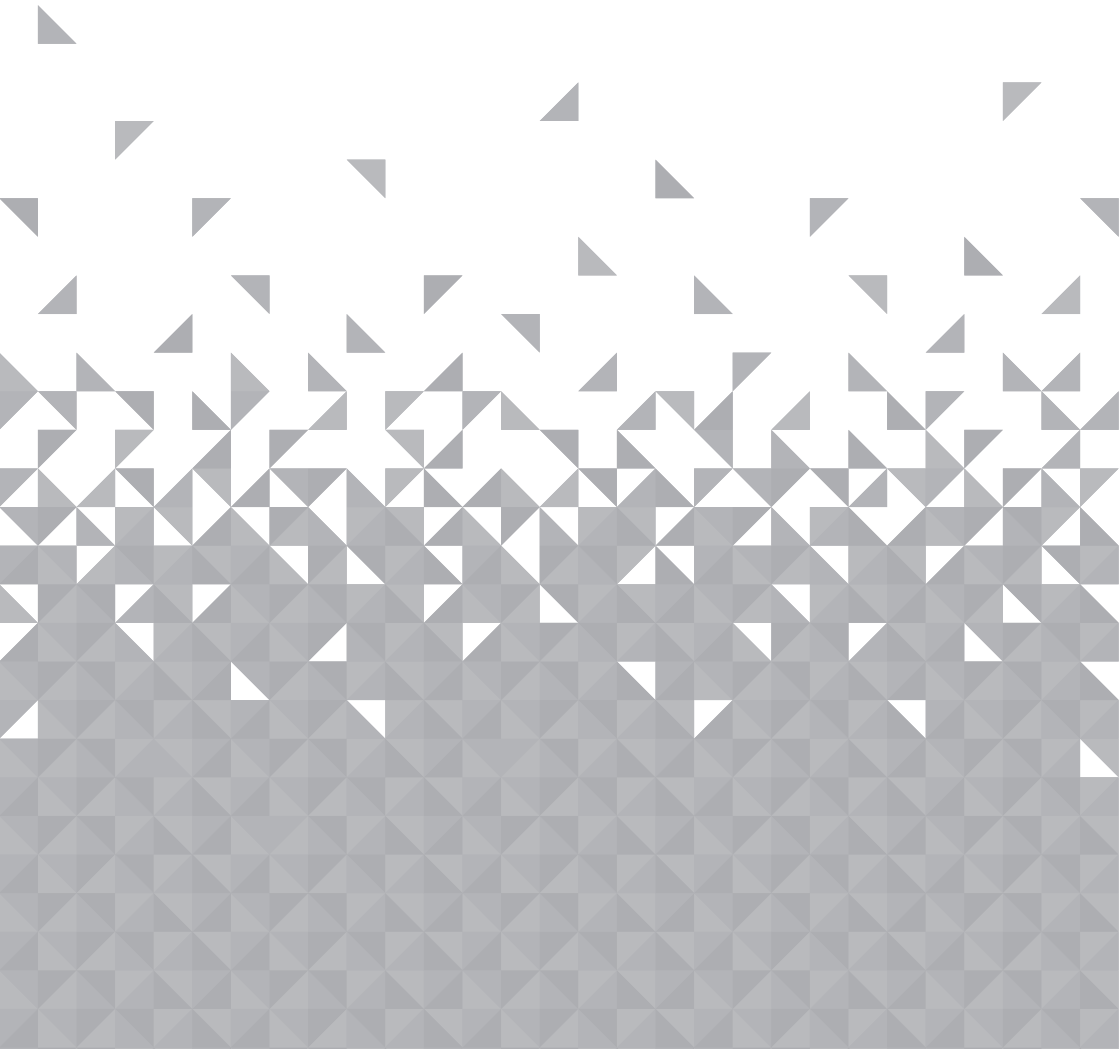

# Product support

Help is always at hand

## Troubleshooting

| Problem  | Reason(s)   | Solution(s)  |
|--|---|--|
| No power   | Power cable not connected to wall socket.               | Make sure the plug is connected.   |
|  | Power socket is not switched on.                        | Switch the power on.   |
| No Sound   | Volume is too low.                                      | Increase the volume.   |
|  | AUX source volume is too low.                           | Increase the volume of the audio source volume (e.g. smartphone).  |
| Sound is distorted                               | Volume is too high.                                     | Reduce the volume.   |
| Sound is distorted from AUX input                | AUX audio source volume is too high.                    | Reduce the volume of the audio source volume (e.g. smartphone).  |
| Unable to pair with a bluetooth device           | too far away from the bluetooth speaker.                | Try again within 8 meters (10 max).  |
|  | Something may be interfering with the bluetooth signal. | Move the bluetooth speaker to a different location and try once more.  |
| Unit switches off after 20 minutes of inactivity | Auto standby mode in operation.                         | <p>This unit is designed to enter STANDBY mode automatically after 20 MINUTES of inactivity.</p> <p>Press the  button to wake the unit.</p> |

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**

# Product support

Help is always at hand

## Help and assistance

If you require any technical guidance or find that your Bluetooth Speaker is not operating as intended, a simple solution can often be found in the **Troubleshooting** section of these instructions or online at [www.argos-support.co.uk](http://www.argos-support.co.uk)

If you still require further assistance, call one of our experts on **0345 600 3021\***. To help give us give you a fast and efficient service please have the following information ready:

|                  |                       |  |
|------------------|-----------------------|--|
| Model Ref.       | <div>CSPK4012BT</div> | You can find these on the rating plate - a small information panel (usually a sticker or metal plate) on the rear of your product. |
| Serial number    | <div></div>           |  |
| Date of purchase | <div></div>           | This will be shown on your receipt   |

Local call rates applies\*

Lines open 8am-7pm Monday to Saturday and 10am-4pm Sunday.

\*Calls to Argos enquiry lines may attract a charge and set up fee from residential lines depending on your call plan/tariff. Mobile and other providers costs may vary, see [www.bt.com/pricing](http://www.bt.com/pricing) for details.

For security and training purposes, telephone calls to and from customer service centres may be recorded and monitored. Calls from Republic of Ireland will attract international call charges.

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**.

# Product support

Help is always at hand

## Disposal



- Disposal of your old product. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused
- When this crossed out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
- Please make yourself aware of the local collection system for electrical and electronic products.
- Please act according to your local rules and do not dispose of your old products with your normal household waste.
- The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks is under license.

**This product is intended for use within the UK.**

### Declaration of Conformance

Hereby Argos LTD declares that the radio equipment type Bush CSPK4012BT is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <http://www.argos-support.co.uk>

Bluetooth Frequency Band 2.4Ghz.

Maximum radio-frequency power transmitted within above frequency band: 20dBm EIRP.

If you require any technical guidance or find that your product is not operating as intended, a simple solution can often be found in the **Troubleshooting**



# Product support

Help is always at hand



## Call us now and activate your 12 month guarantee

Thank you for choosing Bush. Your new product is guaranteed against faults and breakdowns for 12 months. Don't forget to register it with us today so we can provide you with our best possible after-sales service and useful updates.

**[www.bushregistration.co.uk](http://www.bushregistration.co.uk)**

FREEPHONE\*

**0800 597 8548**

Lines are open 8am - 8pm, 365 days a year. \*Calls may be recorded and monitored.

## Your Bush Guarantee

This product is guaranteed for twelve months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge (or if applicable the product will be replaced or the purchase price refunded) where possible during this period by the dealer from who your purchased the unit.

### The guarantee is subject to the following provisions:

- The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items.
- The product must be correctly installed and operated in accordance with the instructions contained in the manual.
- It must be used solely for domestic purposes. The guarantee will be rendered invalid if the product is re-sold or has been damaged by inexpert repair.
- Specifications are subject to change without notice.
- Bush disclaim any liability for loss or damage arising from the breakdown of the product.
- This guarantee is in addition to and does not diminish your statutory or legal rights.

## Important Data Protection Information

If you provide us with information about another person, you confirm that they have appointed you to act for them, to consent to the processing of their personal data including sensitive personal data and that you have informed them of our identity and the purposes (as set out in the Important Data Privacy notice displayed overleaf) for which their personal data will be processed.

You are entitled to ask for a copy of the information we hold about you (for which we may charge a small fee) and to have any inaccuracies in your information corrected.

For quality control and training purposes, we may monitor or record your communications with us.

If your personal details change, if you change your mind about any of your marketing preferences or if you have any queries about how we use your information, please let us know by contacting our Data Protection **Officer, Domestic & General, Leicester House** 17 Leicester Street, Bedworth, Warwickshire CV12 8JP.

Guarantor: Argos Limited - 489 - 499 Avebury Blvd. - Milton Keynes - MK9 2NW

section of these instructions, or online at [www.argos-support.co.uk](http://www.argos-support.co.uk) If you still require further assistance, call one of our experts on **0345 600 3021**.





# BUSH

Contact:

[www.argos-support.co.uk](http://www.argos-support.co.uk)

Helpline: 0345 600 3021

Rev: 1.4

